



Ref No	Part No	Description
--------	---------	-------------

1	11171-27A04	Cover,cylinder Head
2	11173-27A01	Gasket,head Cover No.1
3	11178-27A00	Gasket,head Cover No.2
4	11179-27A01	Gasket,head Cover No.3
5	09106-07009	Bolt (l:5.5)
6	09106-07010	Bolt (l:19)
7	09161-11006	Washer
8	09360-08009	Bolt,union
9	07110-08125	Plug,head Cover
10	09168-08008	Gasket
11	09250-06008	Cap
12	04221-08129	Pin
13	11176-27A00	Cover,breather
14	11177-27A00	Gasket,breather Cover
15	01517-06205	Bolt
16	11400-27855	Gasket Set

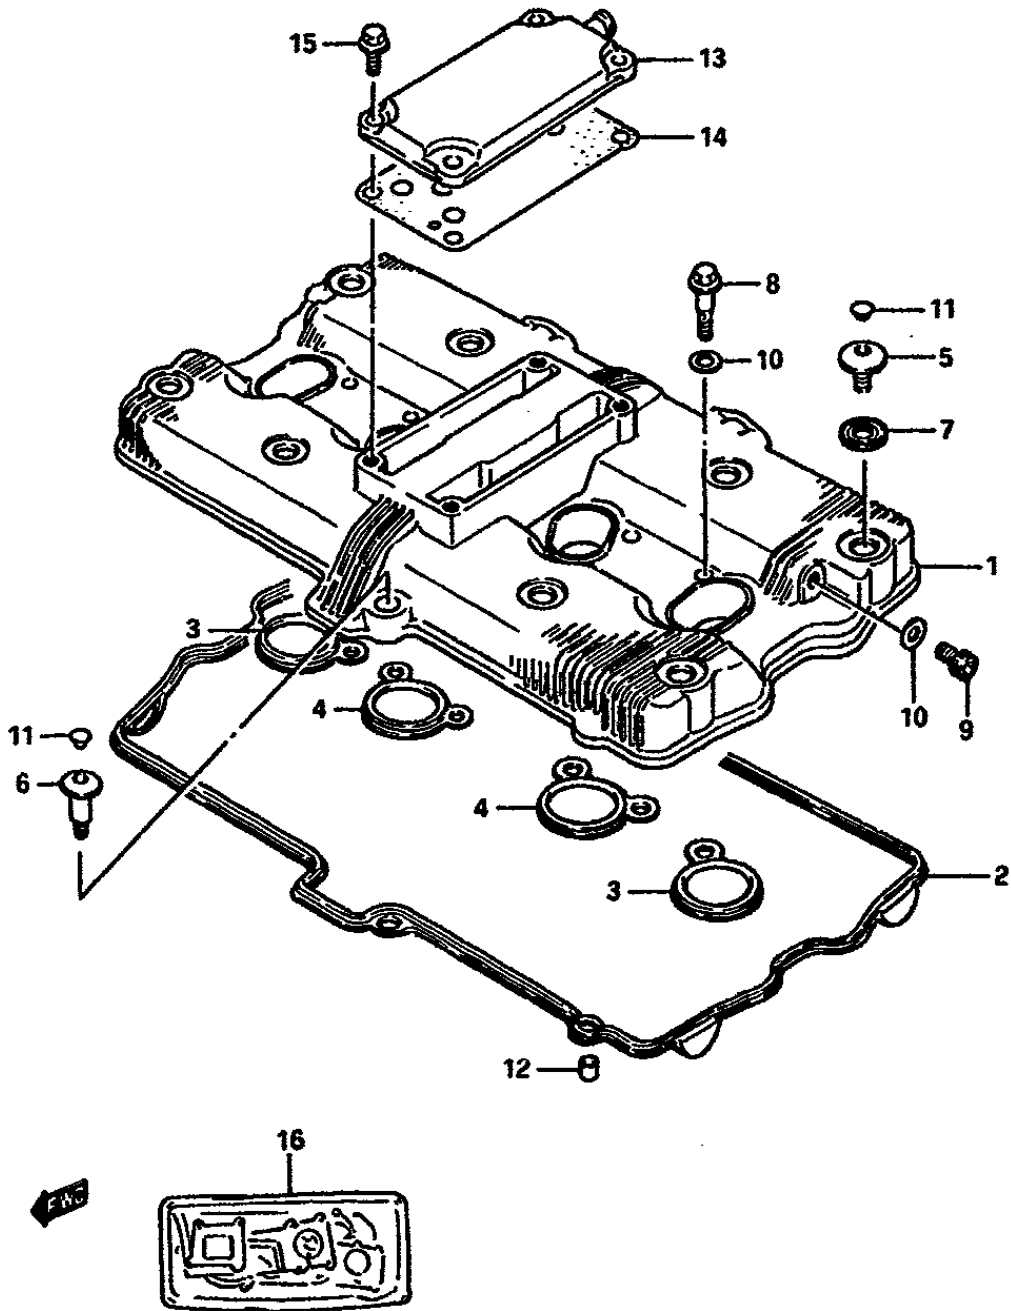


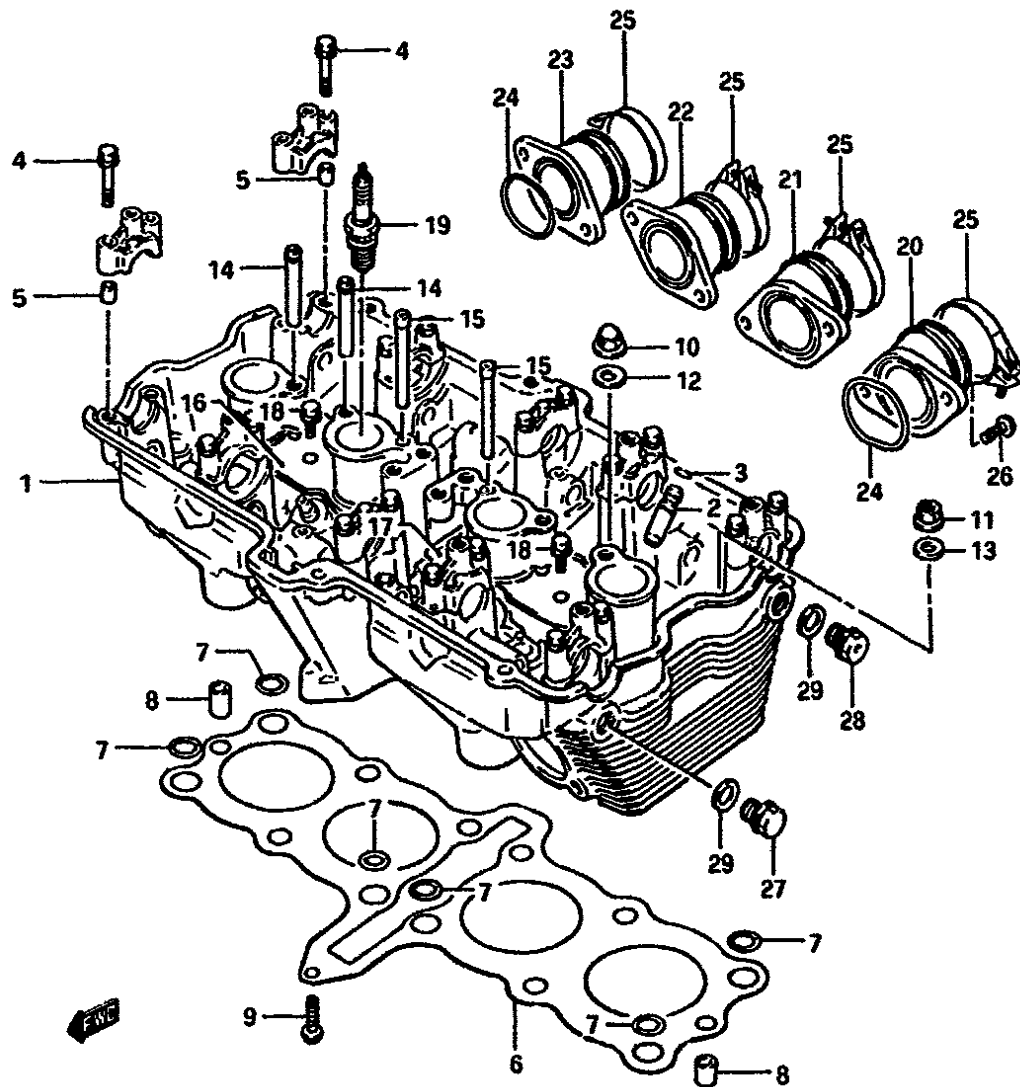


Ref No	Part No	Description
1	11100-27A04	Head Assy,cylinder
1	11100-28A01	Head Assy,cylinder
2	11115-27A70	• . Guide,valve
3	09381-10004	• . Ring,valve Guide
4	09103-06026	• . Bolt
5	09206-08001	• . Pin
6	11141-27A01	Gasket,cylinder Head
7	09280-12013	O Ring
8	04211-11189	Pin
9	01517-06254	Bolt
10	09159-10054	Nut
11	08316-16106	Nut
12	09168-10031	Gasket
13	09160-10060	Washer (10.5x22x2.3)
14	11131-27A00	Pipe,oil No.1,2
15	11133-27A00	Pipe,oil No.3
16	11135-27A02	Plate,oil Pipe Rh
17	11136-27A02	Plate,oil Pipe Lh
18	01517-06128	Bolt
19	09482-00184	Spark Plug (ngk,d9ea)
20	13110-27A00	Pipe,intake,lh
20	13101-27A10	Pipe,intake,lh
20	13110-28A00	Pipe,intake,lh
21	13120-27A00	Pipe,intake,ml
21	13102-27A10	Pipe,intake,ml
21	13120-28A00	Pipe,intake,ml
22	13130-27A00	Pipe,intake,mr
22	13103-27A10	Pipe,intake,mr
22	13130-28A00	Pipe,intake,mr
23	13140-27A00	Pipe,intake,rh
23	13104-27A10	Pipe,intake,rh
23	13140-28A00	Pipe,intake,rh
24	13115-27A01	O Ring
25	09402-50208	Clamp
26	02152-06165	Screw
27	09247-14034	Plug,cylinder Head Ex
28	09247-14032	Plug,cylinder Head In
29	09168-14004	Gasket

Ref No	Part No	Description
--------	---------	-------------


- | | | |
|----|-------------|----------------------|
| 1 | 11210-27A04 | Cylinder |
| 2 | 09108-10074 | Stud Bolt (10x150) |
| 3 | 09108-10073 | Stud Bolt (10x143) |
| 4 | 11241-27A02 | Gasket,cylinder |
| 5 | 01421-06205 | Stud Bolt |
| 6 | 08316-16064 | Nut |
| 7 | 09206-13006 | Pin |
| 8 | 11328-27A01 | Hose,oil Head Cooler |
| 9 | 09280-14011 | O Ring |
| 10 | 09280-15007 | O Ring |
| 11 | 07110-06165 | Bolt |

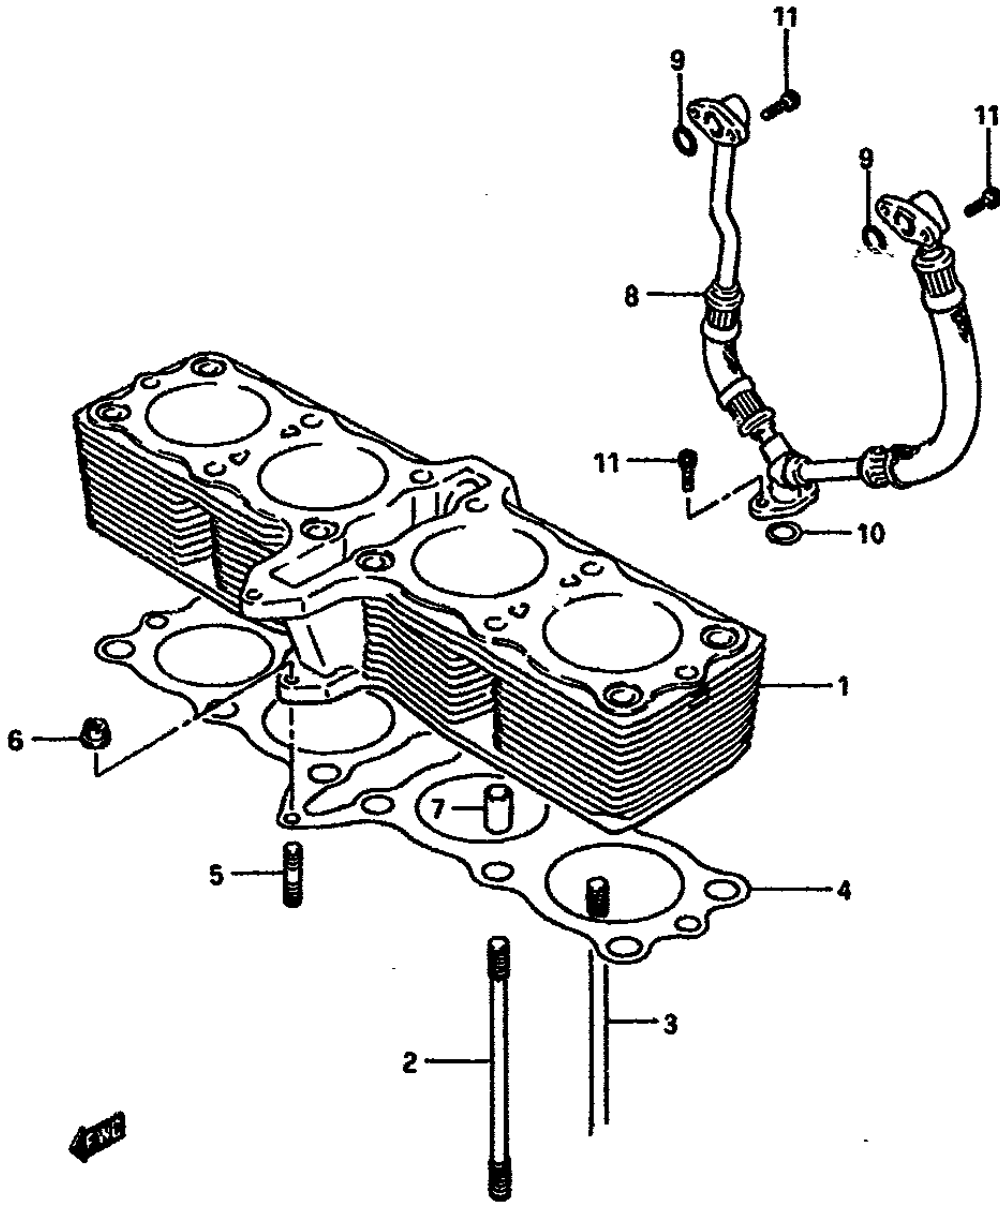


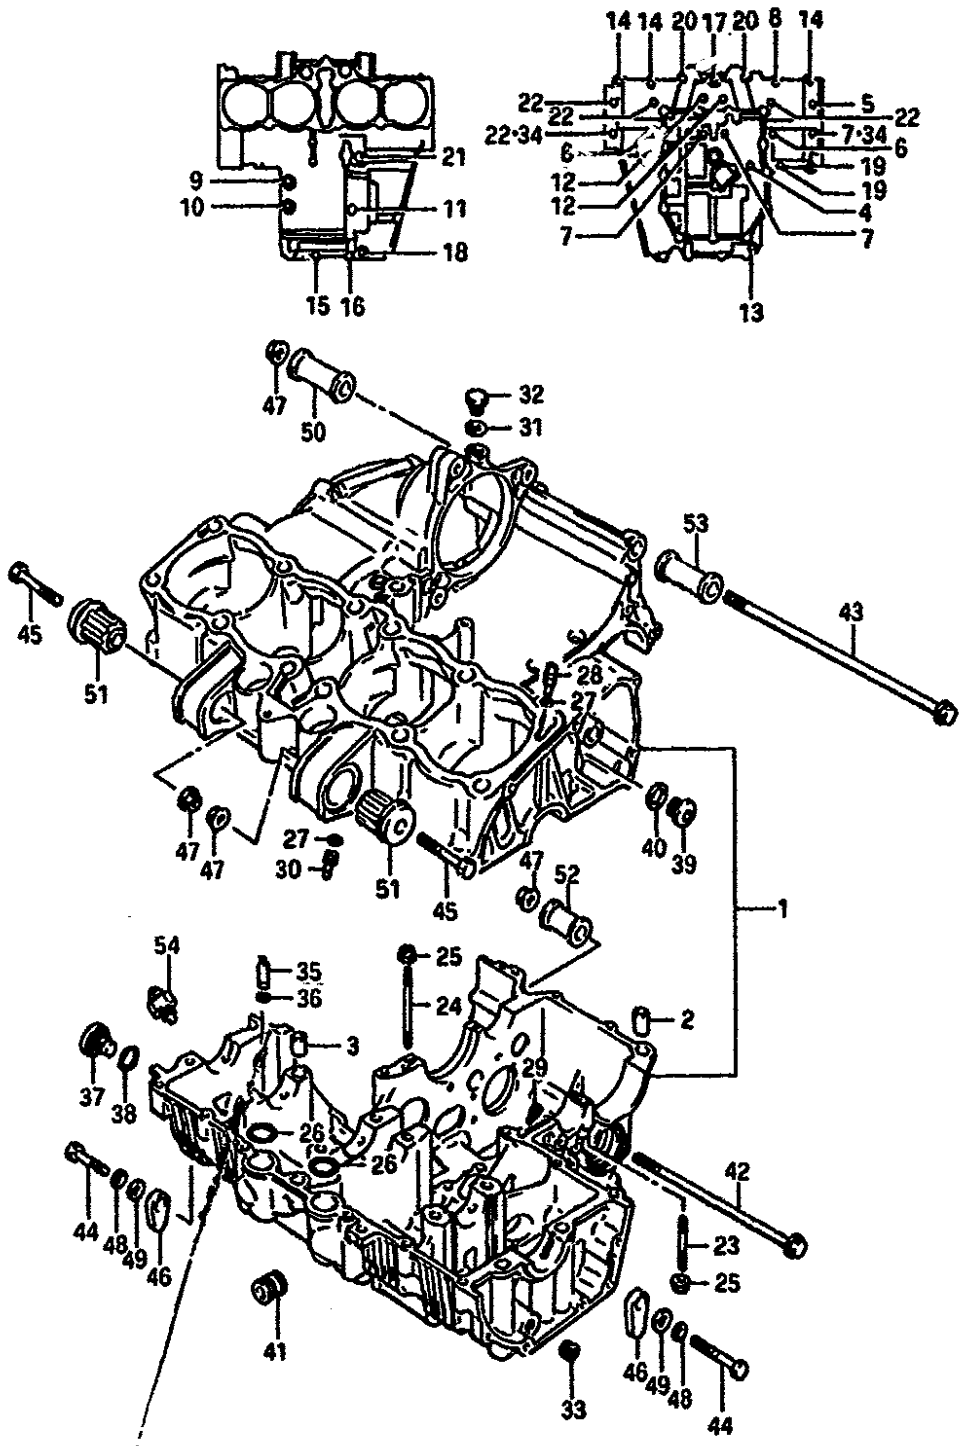

Ref No	Part No	Description
1	11300-27852	Crankcase Set
1	11300-27862	Crankcase Set
2	09206-13004	. Pin
3	09206-11005	. Pin
4	09103-06067	. Bolt (6x105)
5	09103-08097	. Bolt (8x105)
6	09103-08182	. Bolt (8x125)
7	09103-08098	. Bolt (8x115)
8	01517-06354	. Bolt
9	07110-06405	. Bolt
10	07110-06505	. Bolt
11	07110-06655	. Bolt
12	07110-08555	. Bolt
13	01517-08605	. Bolt
14	01517-06354	. Bolt
15	01517-06404	. Bolt
16	01517-06408	. Bolt
17	01517-06505	. Bolt
18	01517-06605	. Bolt
19	01517-06558	. Bolt
20	01517-06705	. Bolt
21	01517-06805	. Bolt
22	09103-08105	. Bolt (8x95)
23	01421-06408	. Stud Bolt
24	01421-06608	. Stud Bolt
25	09159-06017	. Nut
26	09280-21008	. O Ring,oil Return
27	09280-04004	. O Ring
28	09493-14002	. Jet,oil Galy Head
29	09493-24010	. Jet,oil Galy Gear Shift
30	09493-80008	. Jet,oil Galy Piston
31	09168-12002	. Gasket,hole Plug
32	09247-12103	. Plug,hole
33	09246-06001	. Plug,oil Galy
34	09168-08021	. Gasket
35	16430-27A00	. Valve Assy,oil Control
36	09280-05007	. O Ring
37	09248-16003	. Plug,oil Gallery
38	09280-17002	. O Ring
39	09248-14004	. Plug,oil Gallery
40	09168-14004	. Gasket
41	16591-05A00	. Union,oil Filter Stand
42	09103-10136	Bolt (10x180)
43	09103-10137	Bolt (10x255)
44	01107-10558	Bolt
45	01517-10558	Bolt
46	09159-10020	Nut
47	09159-10058	Nut
48	08321-21107	Lock Washer
49	08322-11107	Washer
50	11611-14220	Spacer (l:55)
51	11681-27A00	Bush
52	11611-27A00	Dpacer (l:36)

Ref No	Part No	Description
53	11612-27A00	Spacer (l:50)
54	37820-34200	Switch,oil Pressure



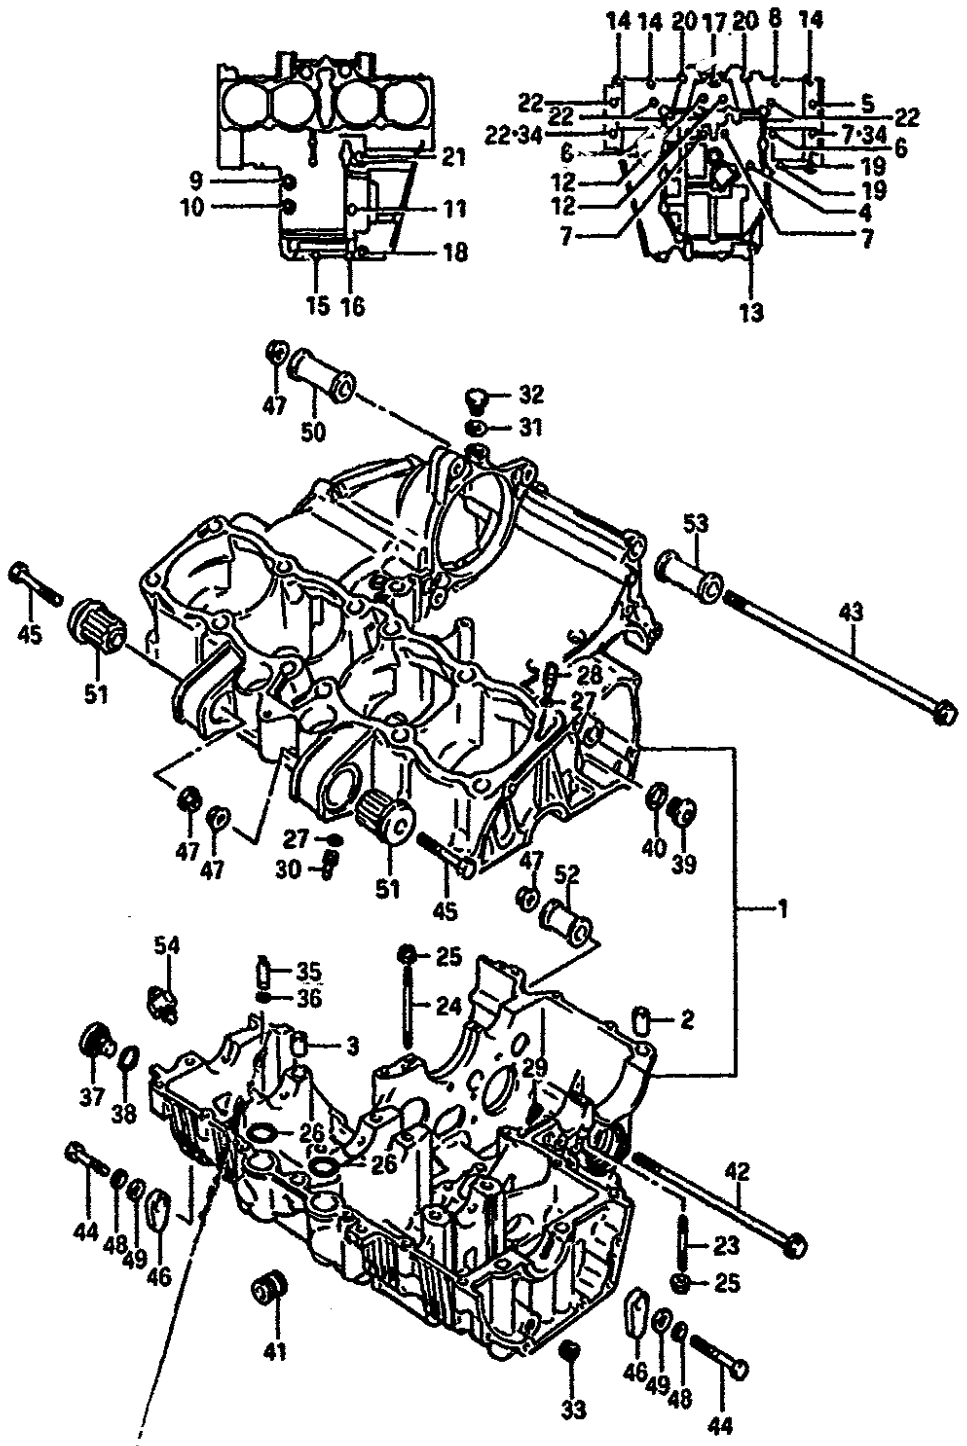


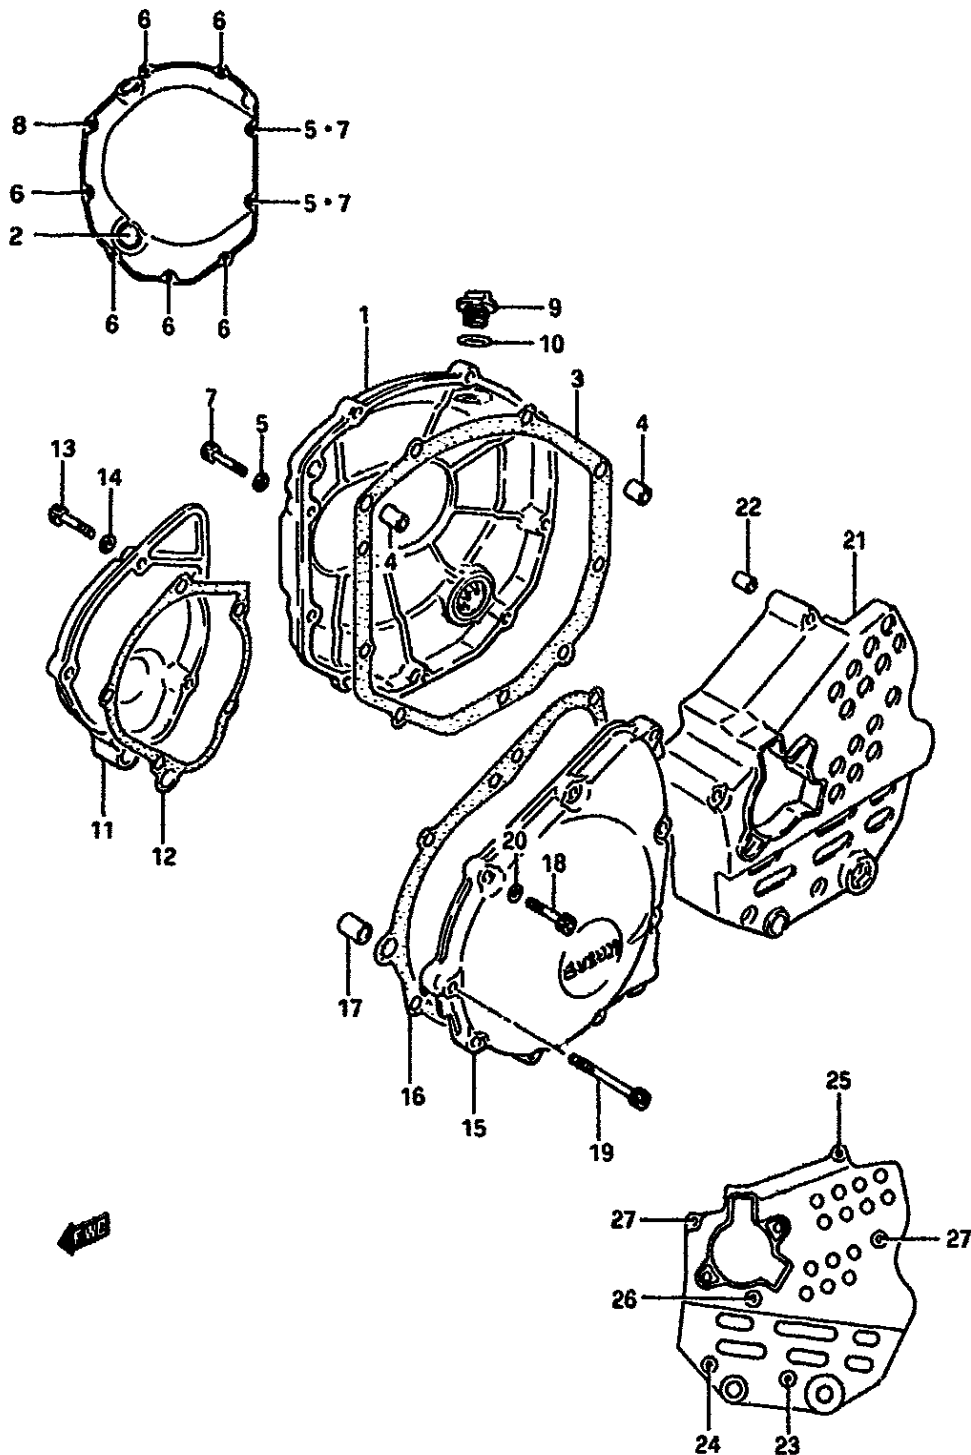


Ref No	Part No	Description
1	11340-27A00	Cover,clutch
2	11971-33210	• Lens,oil Level
3	11482-27A01	Gasket,clutch Cover
4	04211-09189	Pin
5	09168-06024	Gasket
6	07110-06255	Bolt
7	07110-06305	Bolt
8	07110-06355	Bolt
9	09259-20012	Plug,engine Oil Filler
10	09280-17003	O Ring
11	11381-27A00	Cover,signal Generator
11	11381-27A01	Cover,signal Generator
12	11491-27A00	Gasket,signal Generator Cover
13	09106-06059	Bolt (6x23)
14	09168-06024	Gasket
15	11351-27A01	Cover,starter Gear
16	11483-27A00	Gasket,starter Gear Cover
17	09206-11005	Pin
18	07110-06255	Bolt
19	07110-06405	Bolt
20	09168-06024	Gasket
21	11361-27A01	Cover,engine Sprocket
22	04211-09129	Pin
23	07110-06405	Bolt
24	07110-06305	Bolt
25	07110-06505	Bolt
26	07110-06655	Bolt
27	07110-06705	Bolt


Ref No	Part No	Description
--------	---------	-------------

1	11511-27A01	Pan,oil
2	11489-27A00	Gasket,oil Pan
3	07110-06255	Bolt
4	07110-06355	Bolt
5	07110-06405	Bolt
6	07110-06455	Bolt
7	09168-06024	Gasket
8	09247-14001	Plug,oil Drain
9	09168-14004	Gasket
10	09248-14004	Plug,oil Gallery
11	09248-16010	Plug,oil Gallery
12	09168-16D02	Gasket
13	16520-09300	Strainer,engine Oil
14	01107-06127	Bolt
15	08321-21067	Lock Washer
16	16525-27A00	Protector,strainer
17	16528-27A02	Gasket,protector
18	16529-27A01	Gasket,outlet
19	09280-18009	O Ring
20	01517-06258	Bolt
21	16440-27A00	Regulator,engine Oil
22	09168-16002	Washer
23	09440-09023	Spring
24	16442-34301	Plunger,oil Control

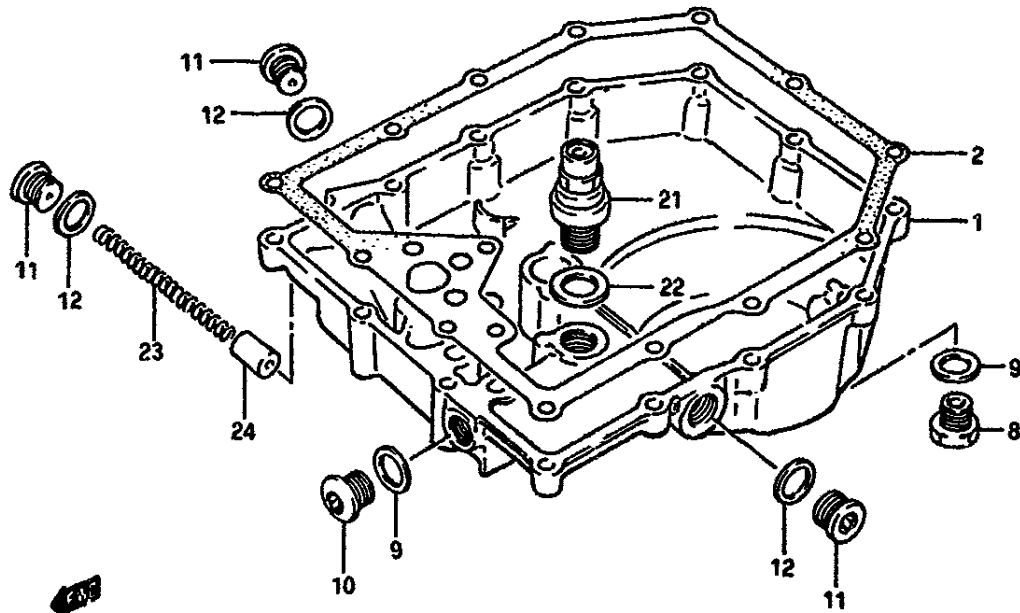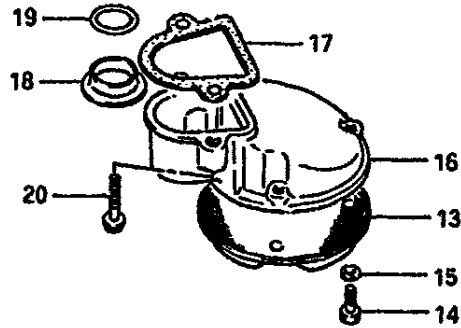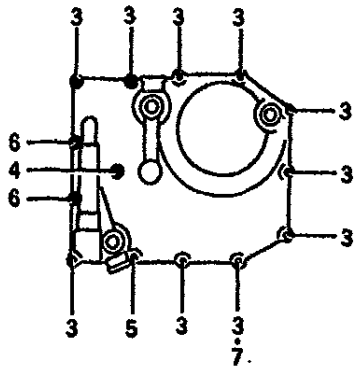

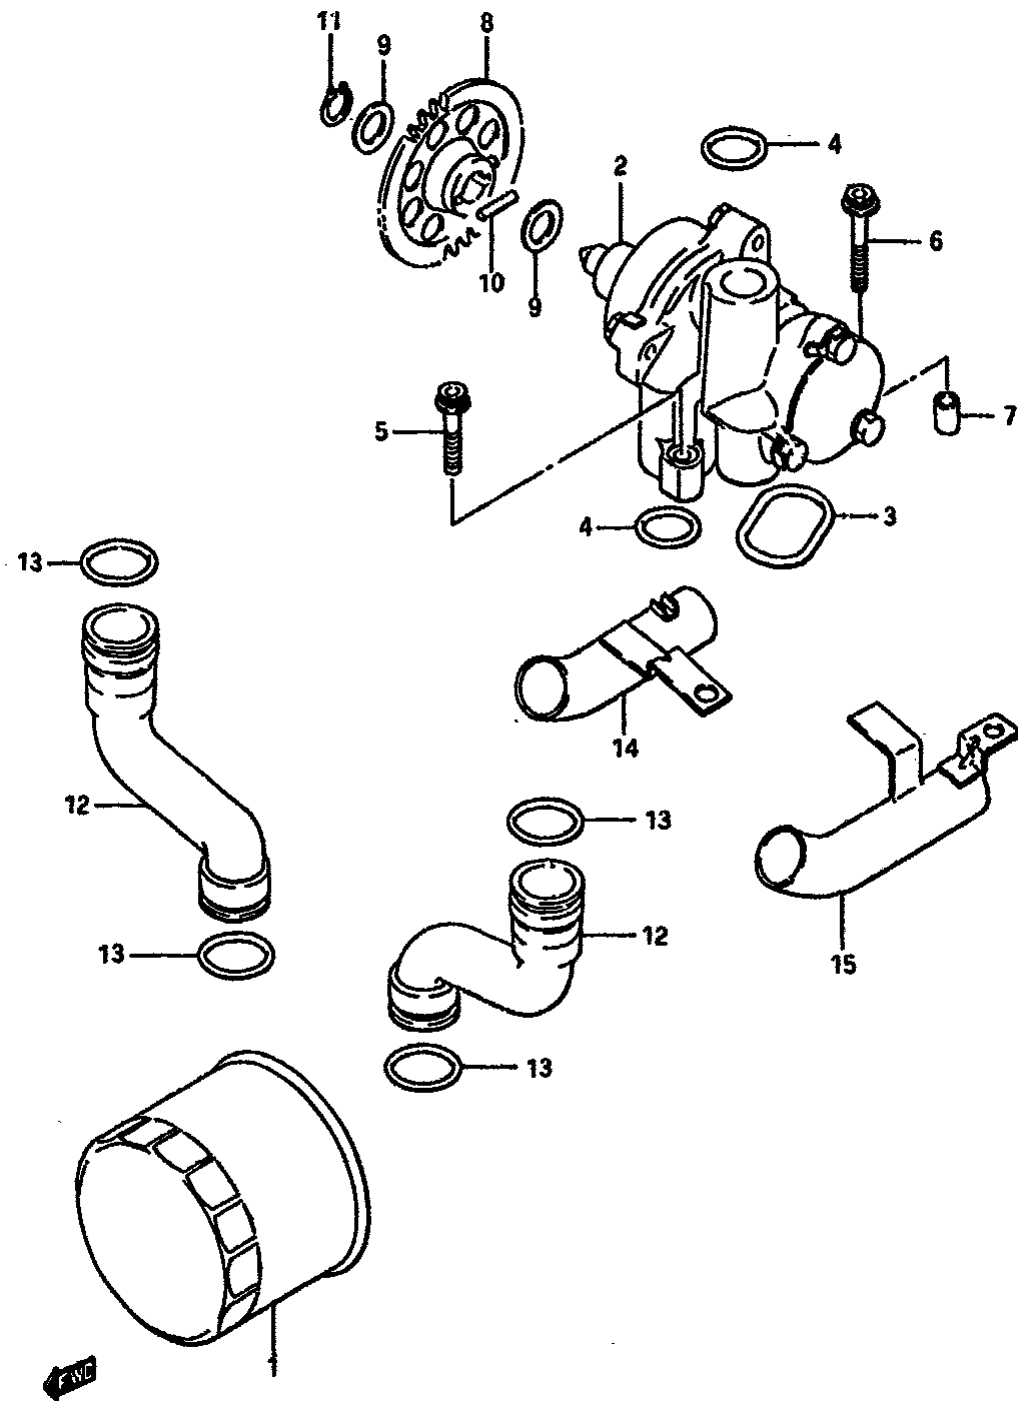


Ref No	Part No	Description
1	16510-05A00	Filter,engine Oil
2	16400-27A00	Pump Assy,engine Oil
3	16491-27A01	O Ring,oil Pump
4	09280-18009	O Ring
5	07120-06308	Bolt
6	07120-06358	Bolt
7	04211-09129	Pin
8	16331-27A01	Gear,oil Pump Driven (blue)
8	16332-27A01	Gear,oil Pump Driven (yellow)
9	08221-12205	Washer
10	09261-05006	Pin
11	08331-31128	Circlip
12	16480-27A03	Pipe,outlet
13	09280-22015	O Ring (d:3.5)
13	09280-22016	O Ring (d:3.7)
14	16530-27A00	Pipe,oil Under Rh
15	16540-27A00	Pipe,oil Under Ln

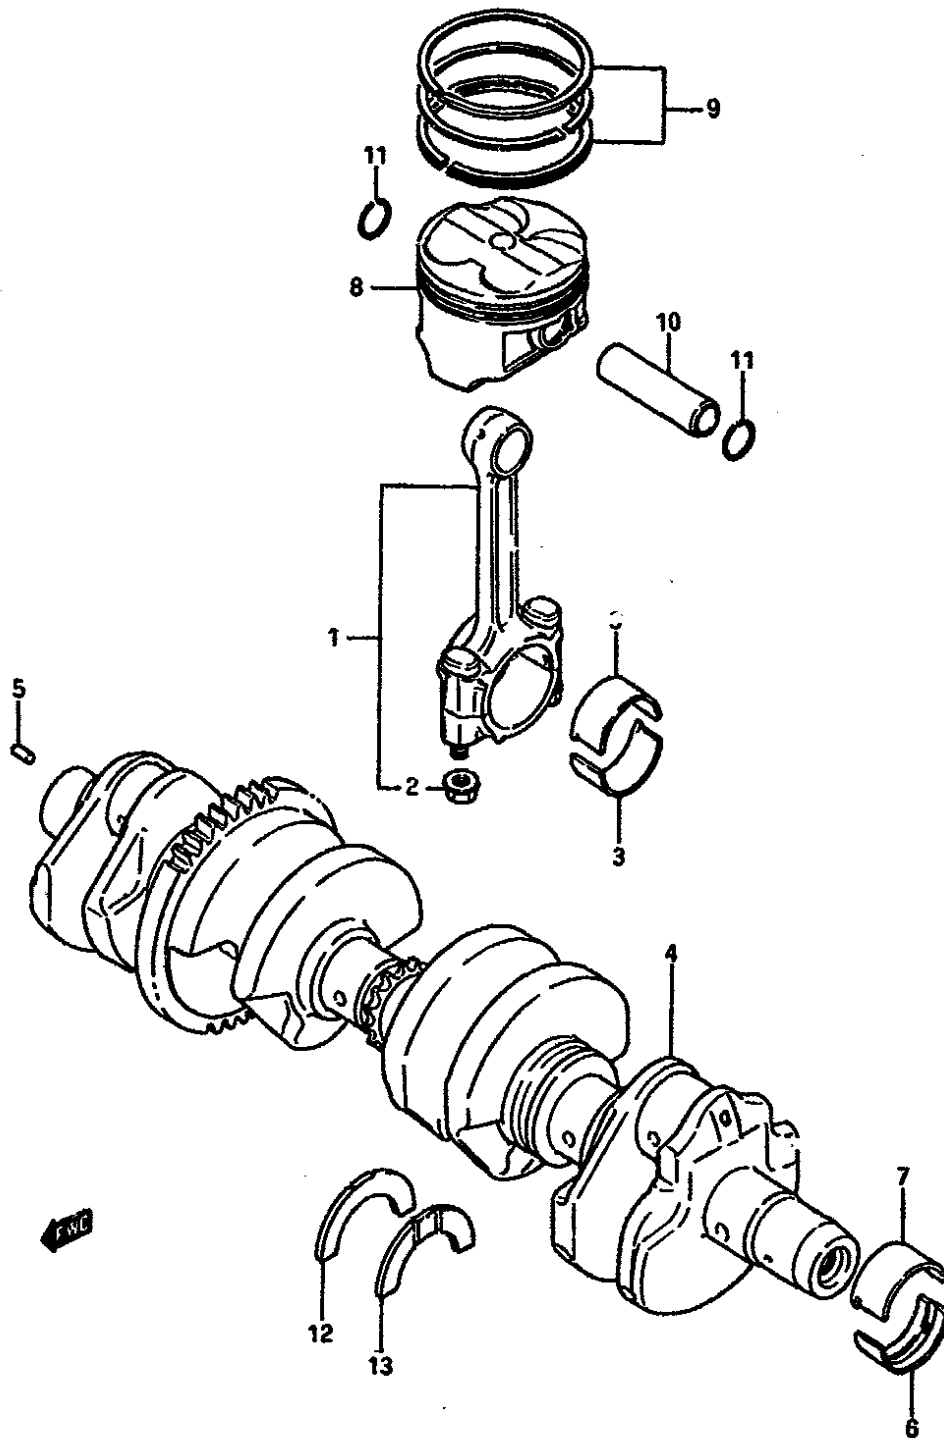


Ref No	Part No	Description
1	12160-27990	Rod Assy,connecting
1	12160-27A13	Rod Assy,connecting
2	09159-08033	• Nut
3	12164-27A00-0A0	Bearing,crank Pin (green)
3	12164-27A00-0B0	Bearing,crank Pin (black)
3	12164-27A00-0C0	Bearing,crank Pin (brown)
3	12164-27A00-0D0	Bearing,crank Pin (yellow)
4	12220-27A03	Crankshaft
5	04221-04089	• Pin
6	12229-27A00-0A0	Bearing,crankshaft (green)
6	12229-27A00-0B0	Bearing,crankshaft (black)
6	12229-27A00-0C0	Bearing,crankshaft (brown)
6	12229-27A00-0D0	Bearing,crankshaft (yellow)
7	12229-27A10-0A0	Bearing,crankshaft (green)
7	12229-27A10-0B0	Bearing,crankshaft (black)
7	12229-27A10-0C0	Bearing,crankshaft (brown)
7	12229-27A10-0D0	Bearing,crankshaft (yellow)
8	12111-27A13	Piston
8	12111-27A12-050	Piston (ds:0.5)
8	12111-27A12-100	Piston (ds:1.0)
9	12140-27A11	Ring Set,piston
9	12140-27A11-050	Ring Set,piston (ds:0.5)
9	12140-27A11-100	Ring Set,piston (ds:1.0)
10	12151-27A10	Pin,piston
11	09381-18003	Circlip
12	12228-43414	Bearing,thrust Rh (green)
13	12228-43411	Bearing,thrust Lh (red)
13	12228-43412	Bearing,thrust Lh (black)
13	12228-43413	Bearing,thrust Lh (blue)
13	12228-43414	Bearing,thrust Lh (green)
13	12228-43415	Bearing,thrust Lh (yellow)
13	12228-43416	Bearing,thrust Lh (white)

Ref No	Part No	Description
--------	---------	-------------


- | | | |
|---|-------------|-----------------------------|
| 1 | 12611-27A01 | Gear,starter Idle (nt:12/52 |
| 2 | 09206-11014 | Pin |
| 3 | 12600-27821 | Clutch Set,starter |
| 3 | 12600-27822 | Clutch Set,starter |
| 4 | 09261-14001 | • . Roller |
| 5 | 09440-04015 | • . Spring |
| 6 | 12633-31000 | • . Piece,push |
| 7 | 09103-14005 | Bolt |

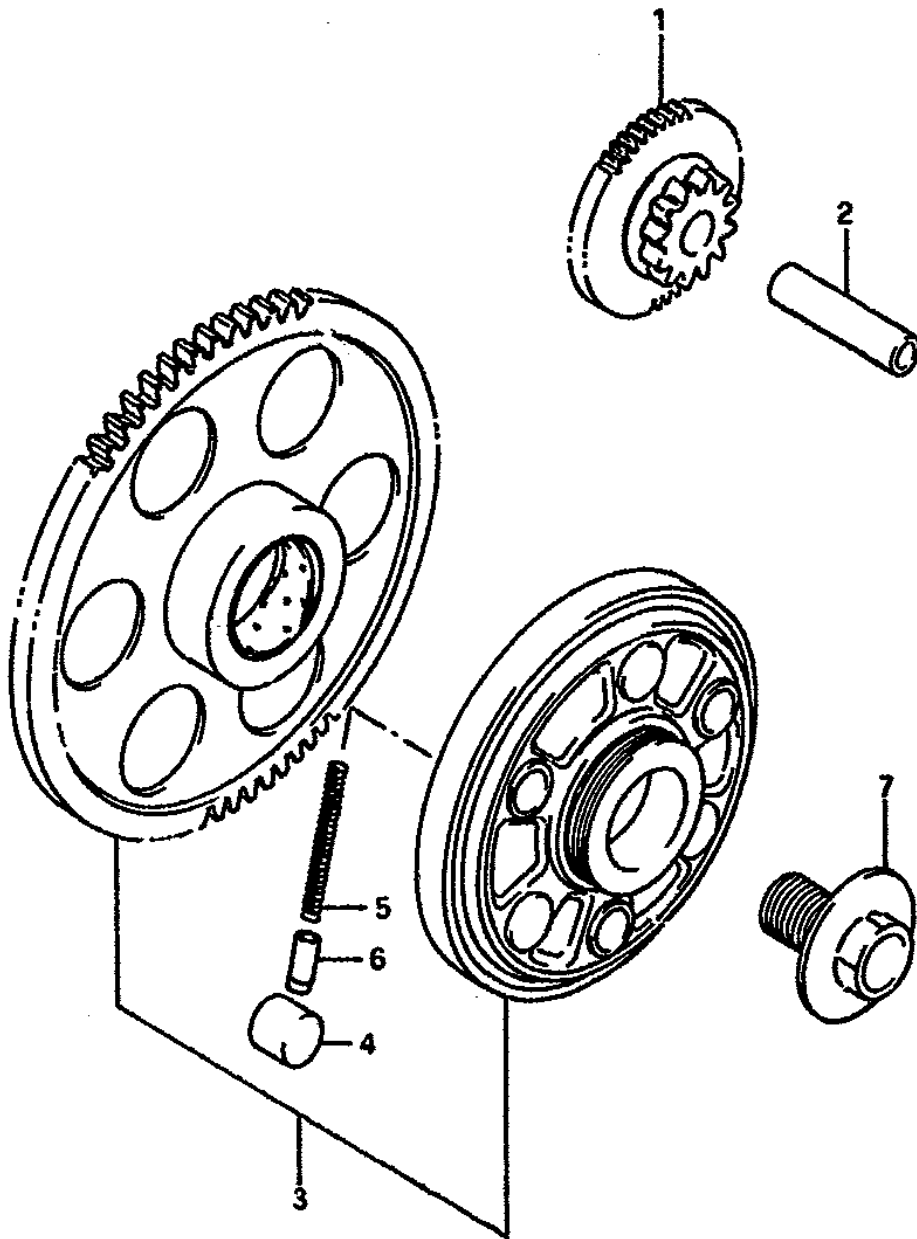


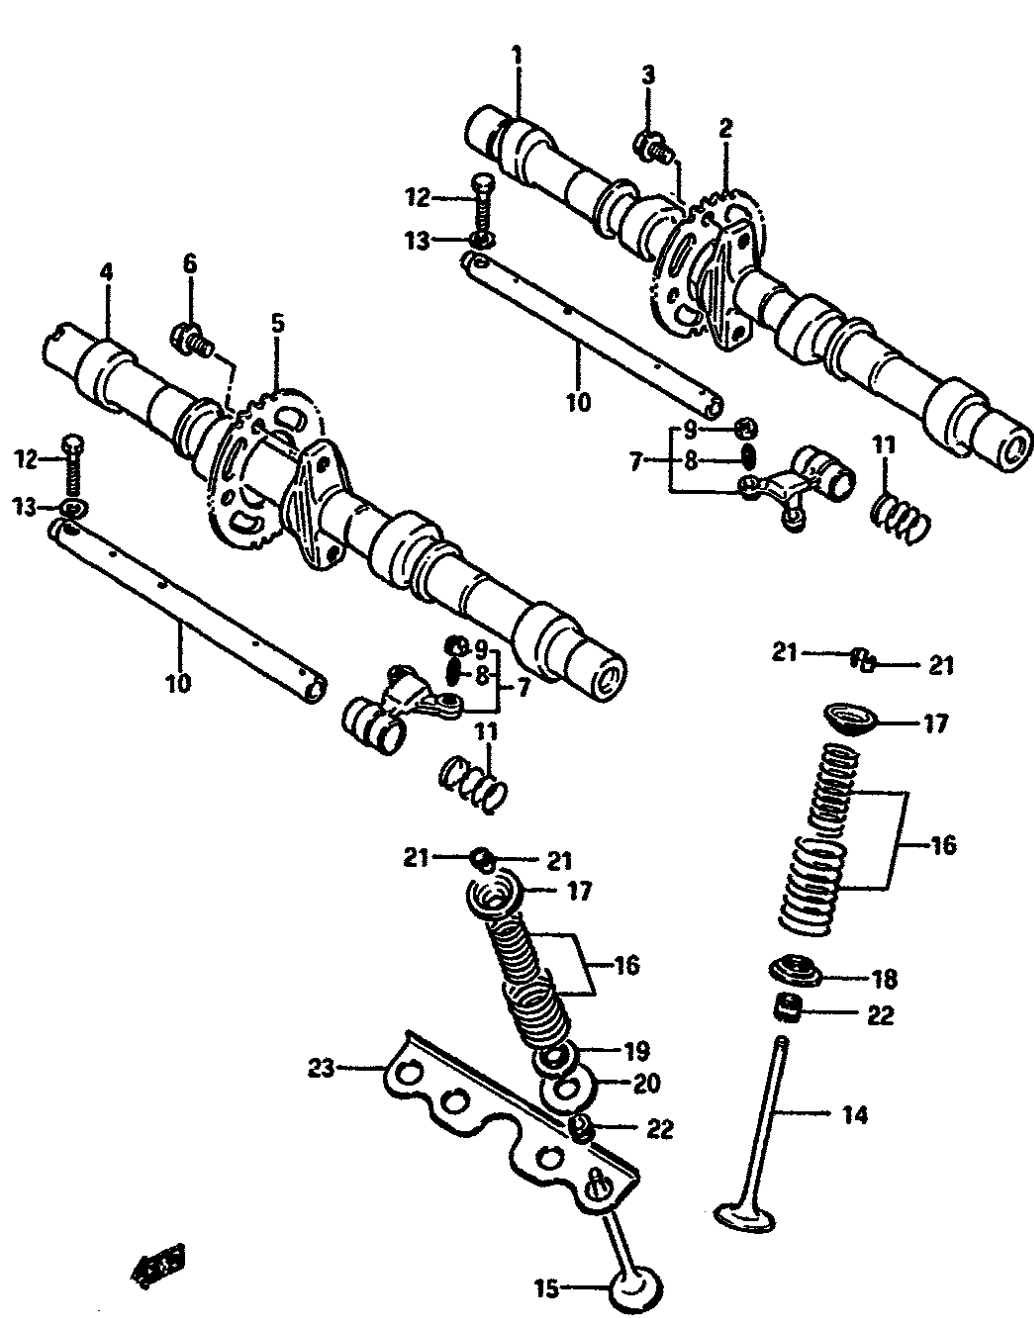


Ref No	Part No	Description
1	12711-27A01	Cam Shaft,intake
1	12711-28A00	Cam Shaft,intake
2	12741-27A00	Sprocket,cam Shaft
3	09103-07001	Bolt
4	12721-27A01	Cam Shaftexhaust
4	12721-28A00	Cam Shaft,exhaust
5	12741-27A00	Sprocket,cam Shaft
6	09103-07001	Bolt
7	12840-27A00	Arm,valve Rocker
8	12842-49210	. . Screw
9	12843-04A00	. . Nut
10	12861-27A00	Shaft,valve Rocker Arm
11	09440-13014	Spring
12	01107-06306	Bolt
13	08322-21066	Washer
14	12911-27A03	Valve,intake
15	12912-27A01	Valve,exhaust
16	12920-27A01	Spring Set,valve
17	12931-27A01	Retainer,spring
18	12933-27A00	Seat,intake
19	12934-27A00	Seat,exhaust Inner
20	12935-27A00	Seat,exhaust Outer
21	12932-27A00	Cotter, valve
22	09289-05010	Oil Seal
23	11137-27A00	Plate,valve Seat

Ref No	Part No	Description
1	12760-27A01	Chain,cam Shaft Drive
2	12771-27A00	Guide,cam Chain No.1
3	12780-27A02	Idler,cam Chain
4	01517-06258	Bolt
5	09180-06143	Spacer,cushion
6	12788-27A00	Cushion
7	12810-27A00	Tensioner,cam Chain
8	12814-34200	Cushion
9	12791-27A00	Guide,cam Chain No.2
10	01517-06105	Bolt
11	09168-06023	Washer
12	12830-27A05	Adjuster Assy,tensioner
13	12834-27A00	• Plug
14	12832-27A00	• Gasket
15	12833-27A00	• Spring
16	12837-27A00	Gasket,adjuster
17	07110-06255	Bolt

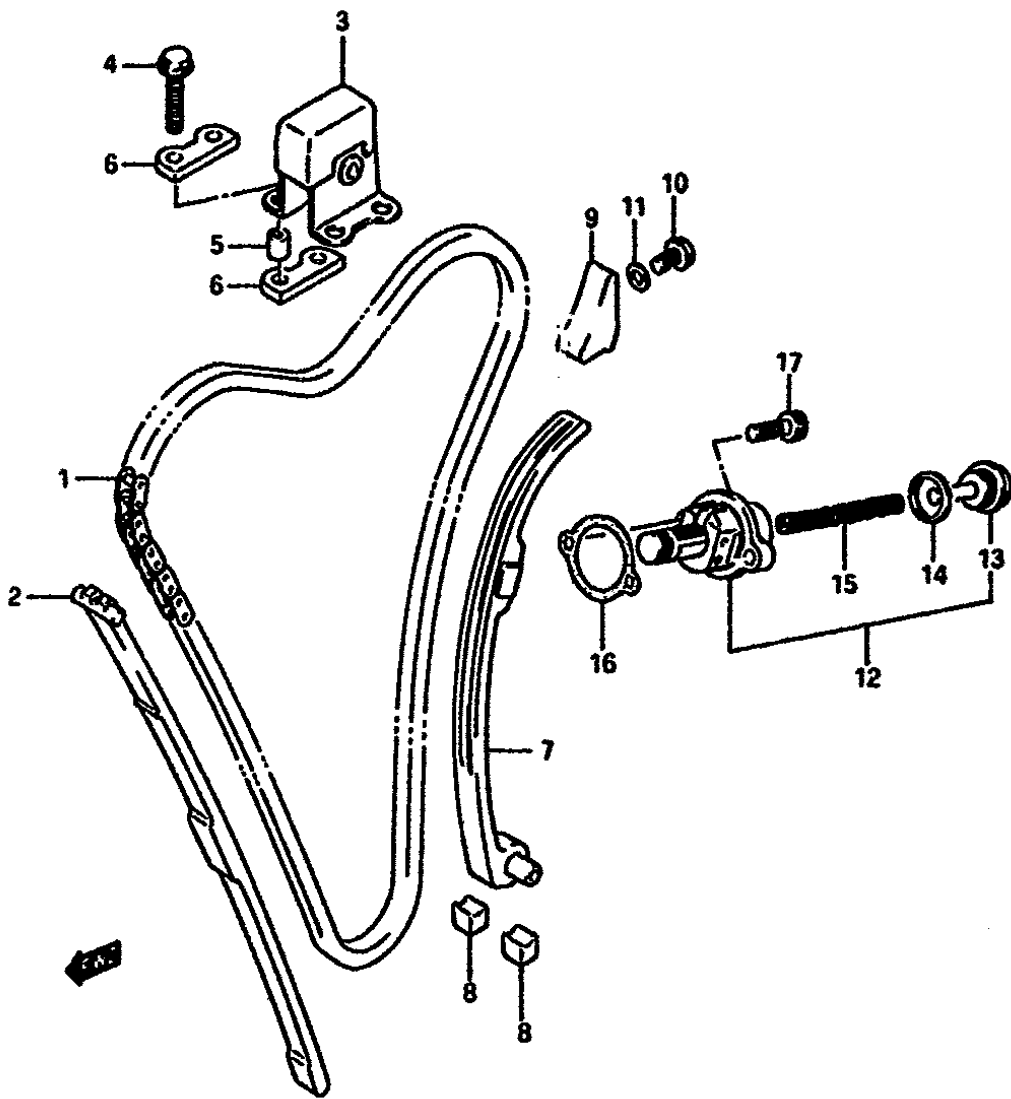


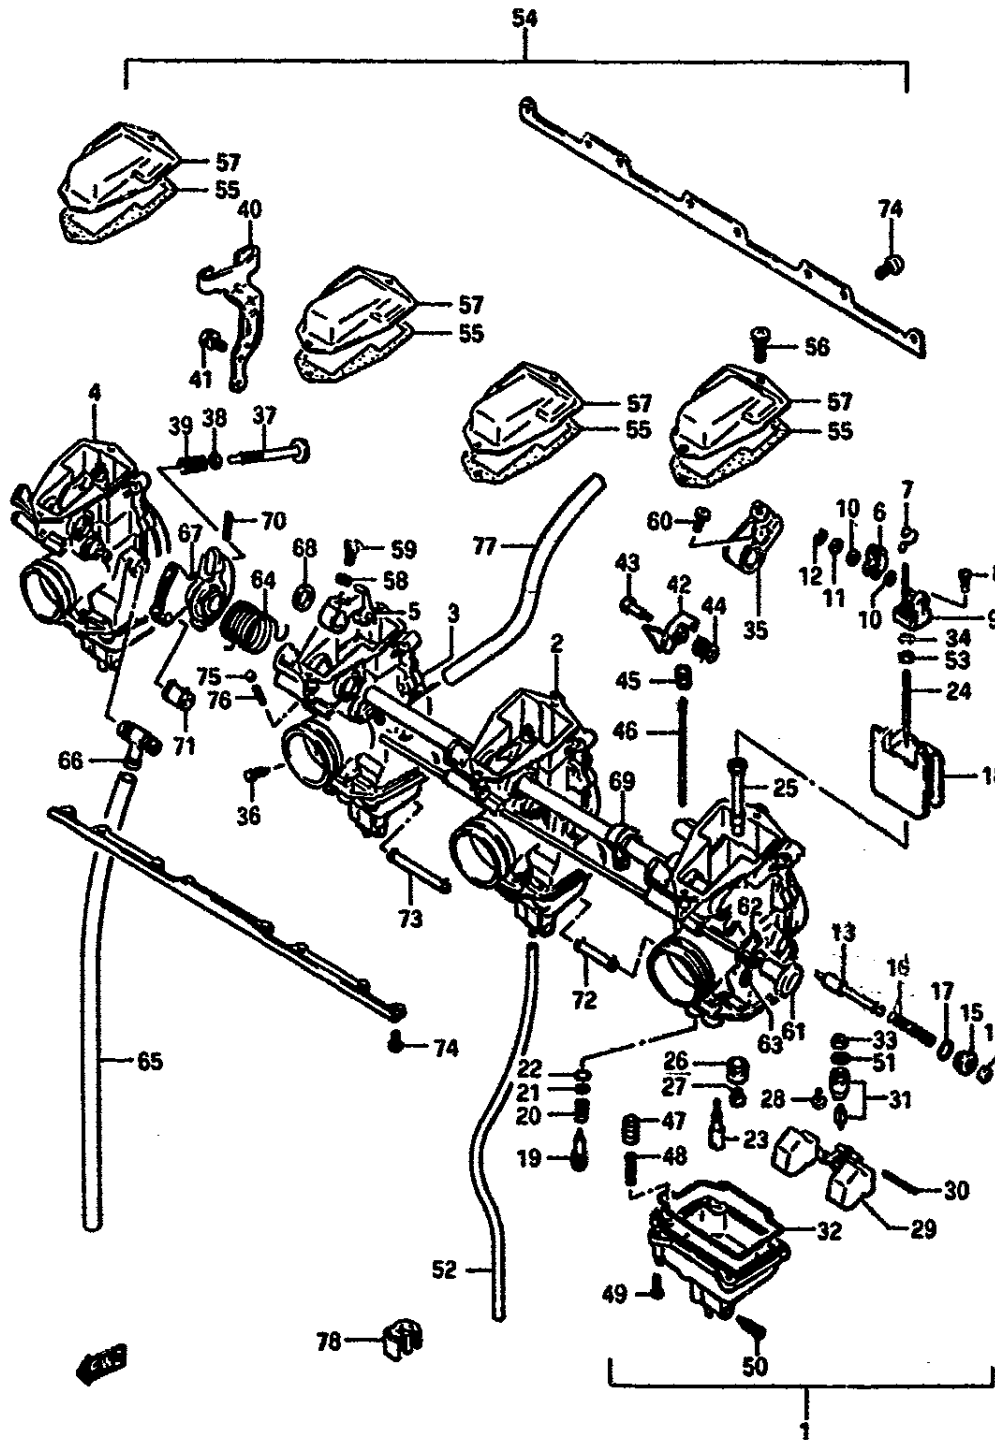


Ref No	Part No	Description
1	13201-27A01	Carburetor Assy,lh
1	13201-27A02	Carburetor Assy,lh
1	13201-27B20	Carburetor Assy,lh
2	13202-27A01	Carburetor Assy,ml
2	13202-27A02	Carburetor Assy,ml
2	13202-27B20	Carburetor Assy,ml
3	13203-27A01	Carburetor Assy,mr
3	13203-27A02	Carburetor Assy,mr
3	13203-27B20	Carburetor Assy,mr
4	13204-27A01	Carburetor Assy,rh
4	13204-27A02	Carburetor Assy,rh
4	13204-27B20	Carburetor Assy,rh
5	13541-14A00	. Lever,throttle
6	13447-14A00	. Plate
6	13447-27B10	. Plate
7	13268-27A00	. Spring
7	13268-27A02	. Spring
7	13268-27B10	. Spring
8	13566-14A00	. Screw
9	13398-27A00	. Connector
9	13398-27A02	. Connector
10	13445-14A00	. Washer
11	13449-14A00	. Washer
12	13298-49000	. E Ring
13	13411-05300	. Plunger
14	13682-31210	. Cap
15	13418-44080	. Holder
16	13417-43010	. Spring
17	13278-47090	. O Ring
18	13551-27A00	. Valve,piston (ca:1.5)
18	13551-27A12	. Valve,piston (ca:1.5)
19	13279-47070	. Screw,pilot
20	13268-47070	. Spring
21	13277-44080	. Washer
22	13295-29900	. O Ring
23	09492-32003	. Jet,pilot (32.5)
24	13383-27A00	. Needle,jet
25	09494-00496	. Jet,needle (p-5)
26	13331-13A00	. Ring
27	09491-97003	. Jet,main (97.5)
28	13602-43410	. Screw
29	13252-27A00	. Float
29	13250-28A00	. Float
30	13254-92311	. Pin
31	13370-44500	. Valve Assy,needle
32	13251-27A00	. O Ring
33	13376-65010	. Filter
34	13394-10010	. E Ring
35	13541-27A00	. Lever Assy
36	13605-27A02	. Screw
37	13267-01400	. Adjuster
38	13427-38300	. Washer
39	13268-49310	. Spring

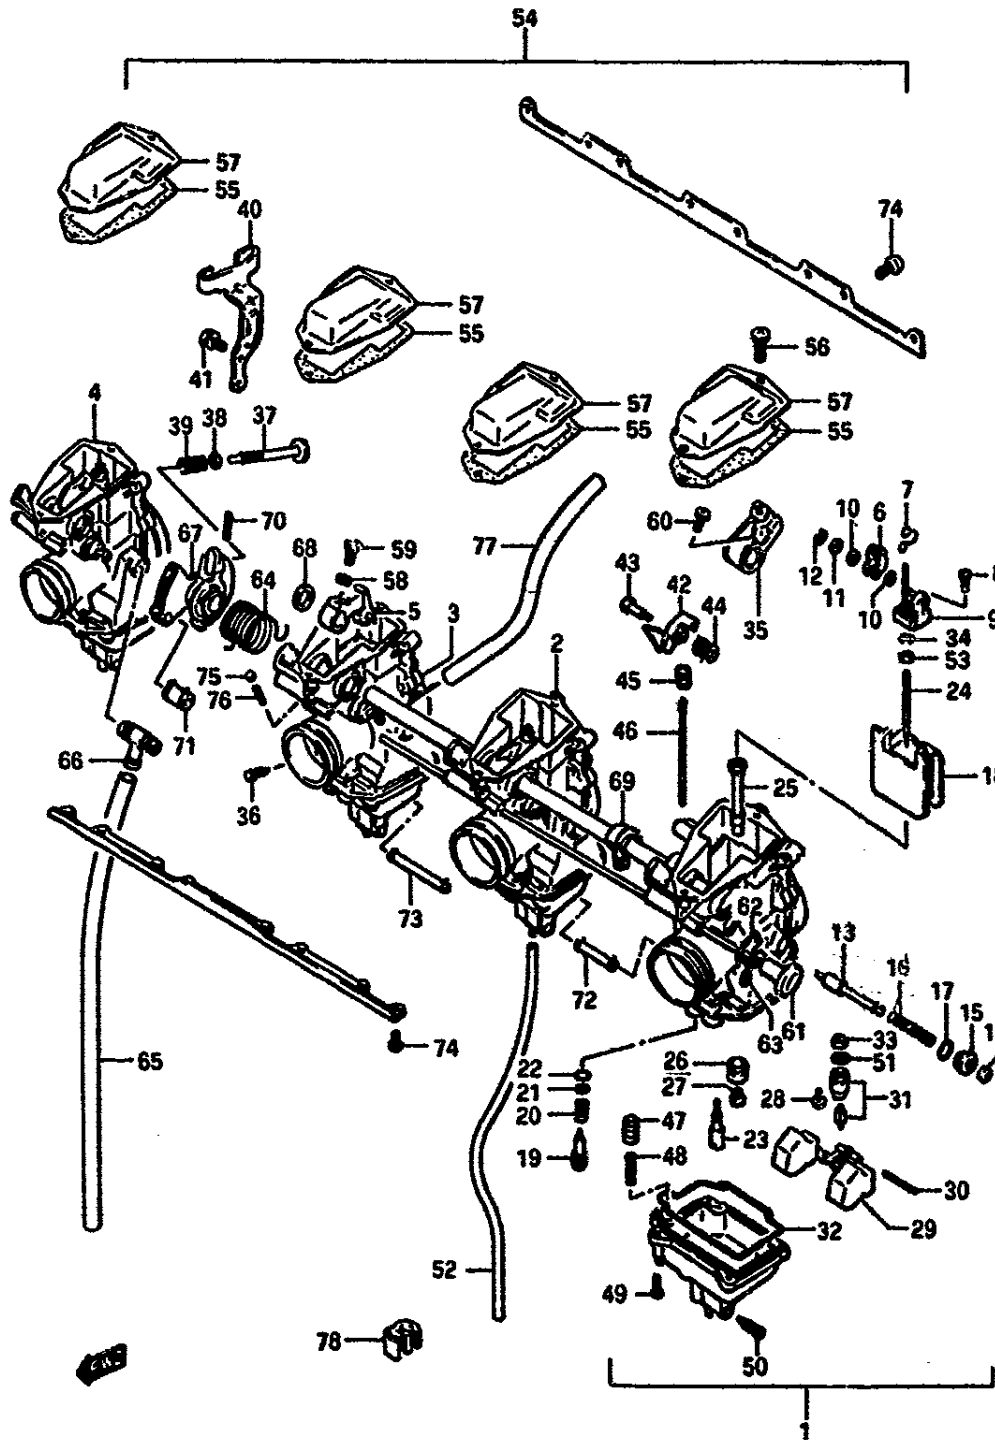


Ref No	Part No	Description
40	13621-27A00	. Bracket
41	13603-27A00	. Screw
42	13490-27A00	. Lever
43	13613-14A00	. Screw
44	13494-27A00	. Spring
45	13499-44500	. Cap
46	13487-27A00	. Rod
47	13493-27A00	. Plunger
48	13271-09400	. Spring
49	13602-27A10	. Screw
50	13247-13A00	. Screw
51	66263-99050	. O Ring
51	13374-44080	. O Ring
52	13680-27A30	. Hose Set (3x5x525)
53	13382-47010	. Washer
54	13210-27A00	Flang Set
54	13210-27A02	Flang Set
54	13210-27B10	Flang Set
55	13266-27A00	. Gasket
56	13601-27A00	. Screw
57	13261-27A00	. Cover,top
58	13614-45010	. Washer
59	13613-43010	. Bolt
60	13371-84100	. Screw
61	13410-27A00	. Shaft Assy
62	13422-27A00	. Lever
63	13605-09300	. Screw
64	13573-27A00	. Spring
64	13573-27A02	. Spring
64	13573-27B10	. Spring
65	13684-27A00	. Hose (6.5x9.5x450)
66	13685-47070	. Nipple
67	13555-27A00	. Lever Assy
68	13574-38200	. Washer
69	13555-27A00	. Shaft Assy
69	13553-27B10	. Shaft Assy
70	13563-47070	. Pin
71	13680-27A00	. Hose Set (3x5x18)
72	13680-27A10	. Hose Set (3x5x60)
73	13680-27A20	. Hose Set (3x5x72)
74	02112-05128	. Screw
75	13596-93010	. Ball
76	13434-43010	. Spring
77	13683-06A20	. Hose (5x9x250)
78	09408-00066	Clip,over Flow Hose

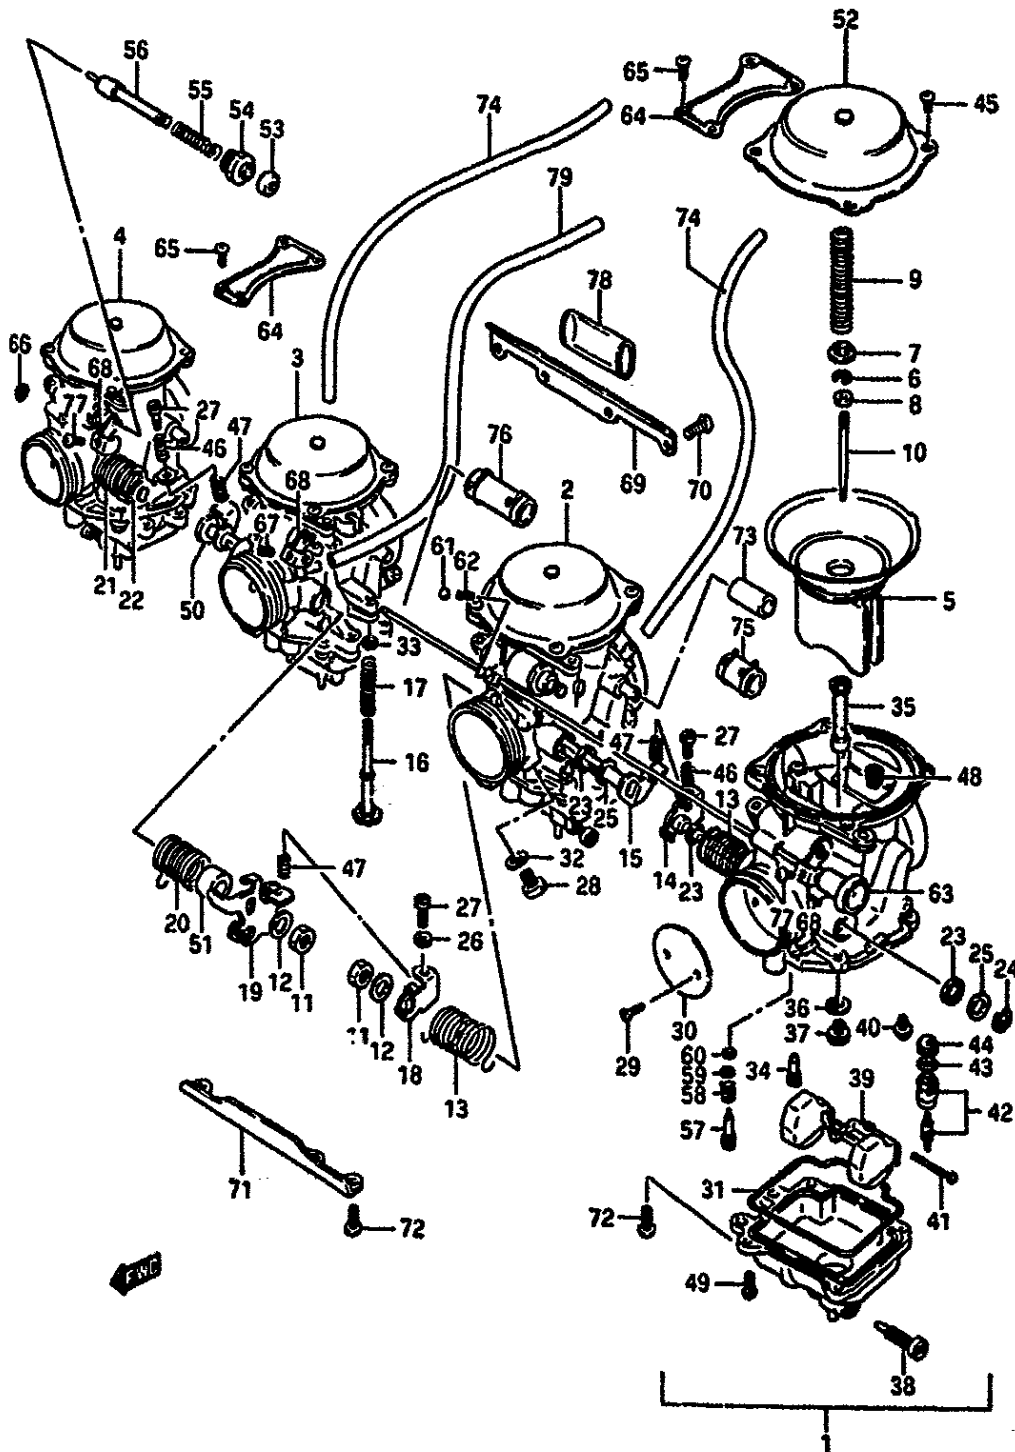

Ref No	Part No	Description
1	13201-27B00	Carburetor Assy,lh
2	13202-27B00	Carburetor Assy,ml
3	13203-27B00	Carburetor Assy,mr
4	13204-27B00	Carburetor Assy,rh
5	13500-27B00	. Diaphragm
6	13394-10010	. E Ring
7	13382-42A00	. Ring
8	13387-47010	. Ring
9	13417-42A00	. Spring
10	13383-27B00	. Needle,jet (ac8-3)
11	08310-21086	. Nut
12	13606-47070	. Washer
13	13573-28A10	. Spring
14	13530-28A30	. Shaft Assy
15	13550-28A00	. Shaft Assy
16	13267-28A00	. Adjuster
17	13271-28A10	. Spring
18	13553-28A00	. Lever
19	13555-28A00	. Lever
20	13573-28A00	. Spring
21	13573-28A20	. Spring
22	13550-28A20	. Shaft Assy
23	13651-51010	. Seal
24	13617-44080	. E Ring
25	13557-47070	. Washer
26	13582-95216	. Nut
27	13267-52012	. Screw
28	13605-73000	. Screw
29	13604-42A00	. Screw
30	13551-27B00	. Valve,throttle (130)
31	13251-42A00	. O Ring
32	13249-78100	. Washer
33	13432-47090	. Washer
34	09492-35009	. Jet ,pilot (35)
35	09494-00565	. Jet Needle (q-0)
36	13332-44080	. Washer
37	09491-23017	. Jet ,main (117.5)
38	13247-13A00	. Screw,drain
39	13250-28A00	. Float
40	13602-43410	. Screw
41	13254-92311	. Pin
42	13370-44500	. Valve Assy,needle
43	13374-44080	. O Ring
44	13376-65010	. Filter
45	02112-04085	. Screw
46	13271-28A00	. Spring
47	13268-96110	. Spring
48	09493-32002	. Jet,pilot Air (160)
49	13602-27A10	. Screw
50	13550-28A10	. Shaft Assy
51	13574-28A00	. Ring
52	13502-28A00	. Cover,diaphragm
53	13682-31210	. Cap,starter

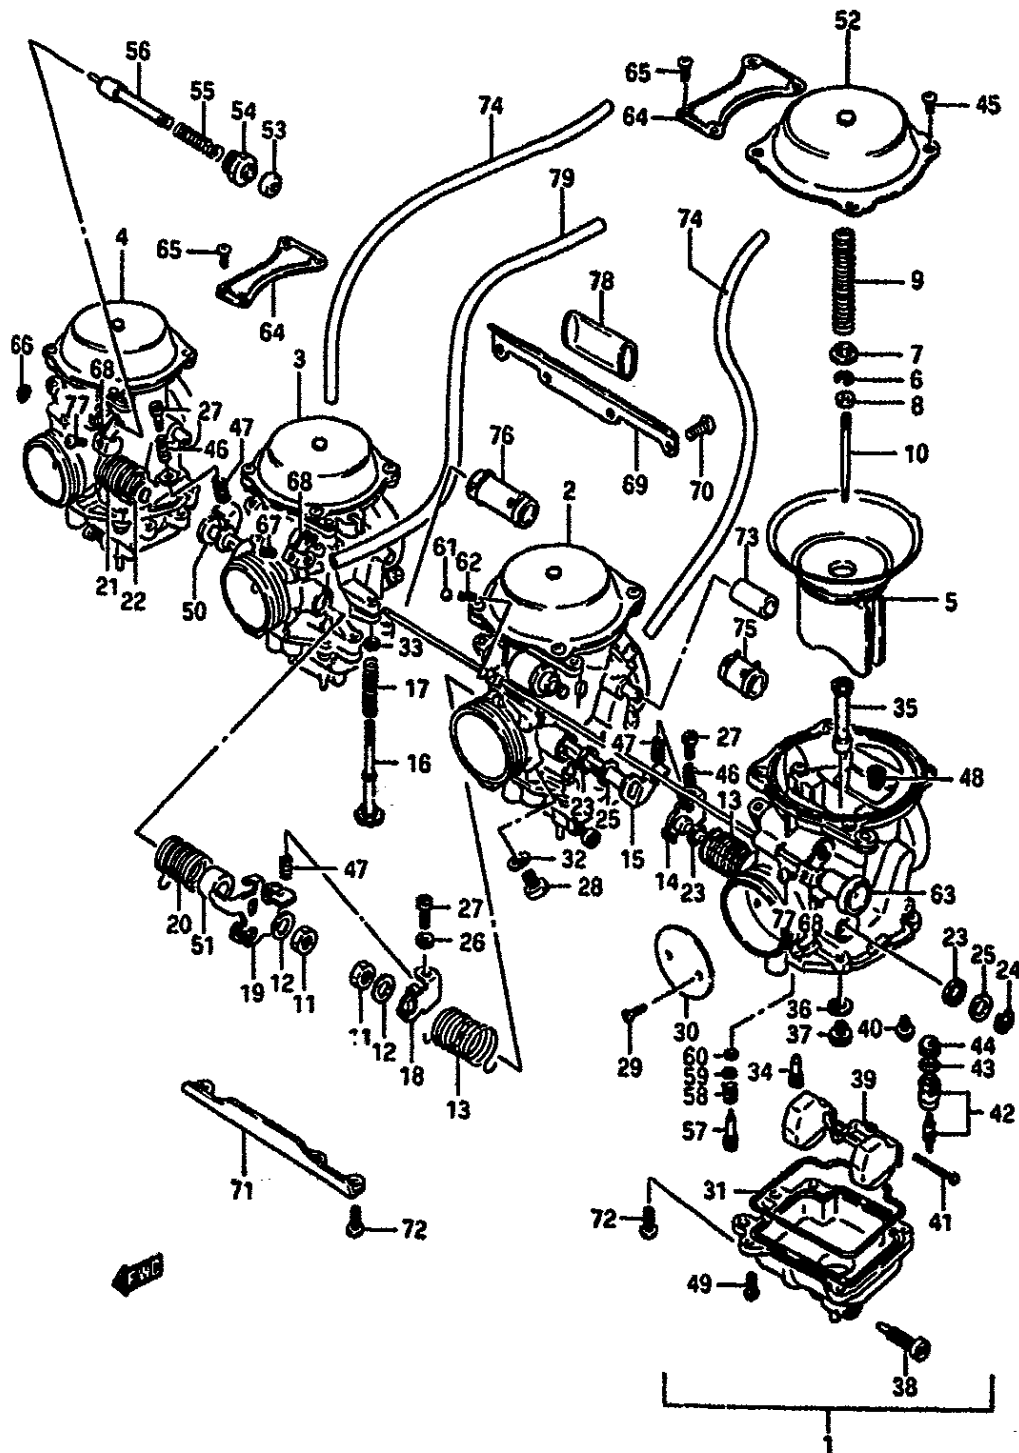



Ref No	Part No	Description
54	13418-44080	. Holder
55	13417-43010	. Spring
56	13411-05320	. Plunger Assy
57	13279-47070	. Screw,polot (3 3/16)
58	13268-47070	. Spring
59	13277-44080	. Washer
60	13295-29900	. O Ring
61	13596-93010	Ball
62	13434-06B00	Spring
63	13410-28A00	Shaft Assy,starter
64	13628-28A00	Plate
65	02112-04085	Screw
66	13298-49000	E Ring
67	13605-49330	Screw
68	13422-28A00	Lever
69	13628-28A10	Plate
70	02112-05128	Screw
71	13628-28A20	Plate
72	02112-05168	Screw
73	13683-49160	Hose (6.5x10.5x400)
74	13684-28A00	Hose (5x8x425)
75	13680-27A00	Hose Assy
76	13680-28A00	Hose Assy
77	13605-34390	Screw
78	13684-28A10	Hose
79	13683-06A20	Hose (5x9x250)

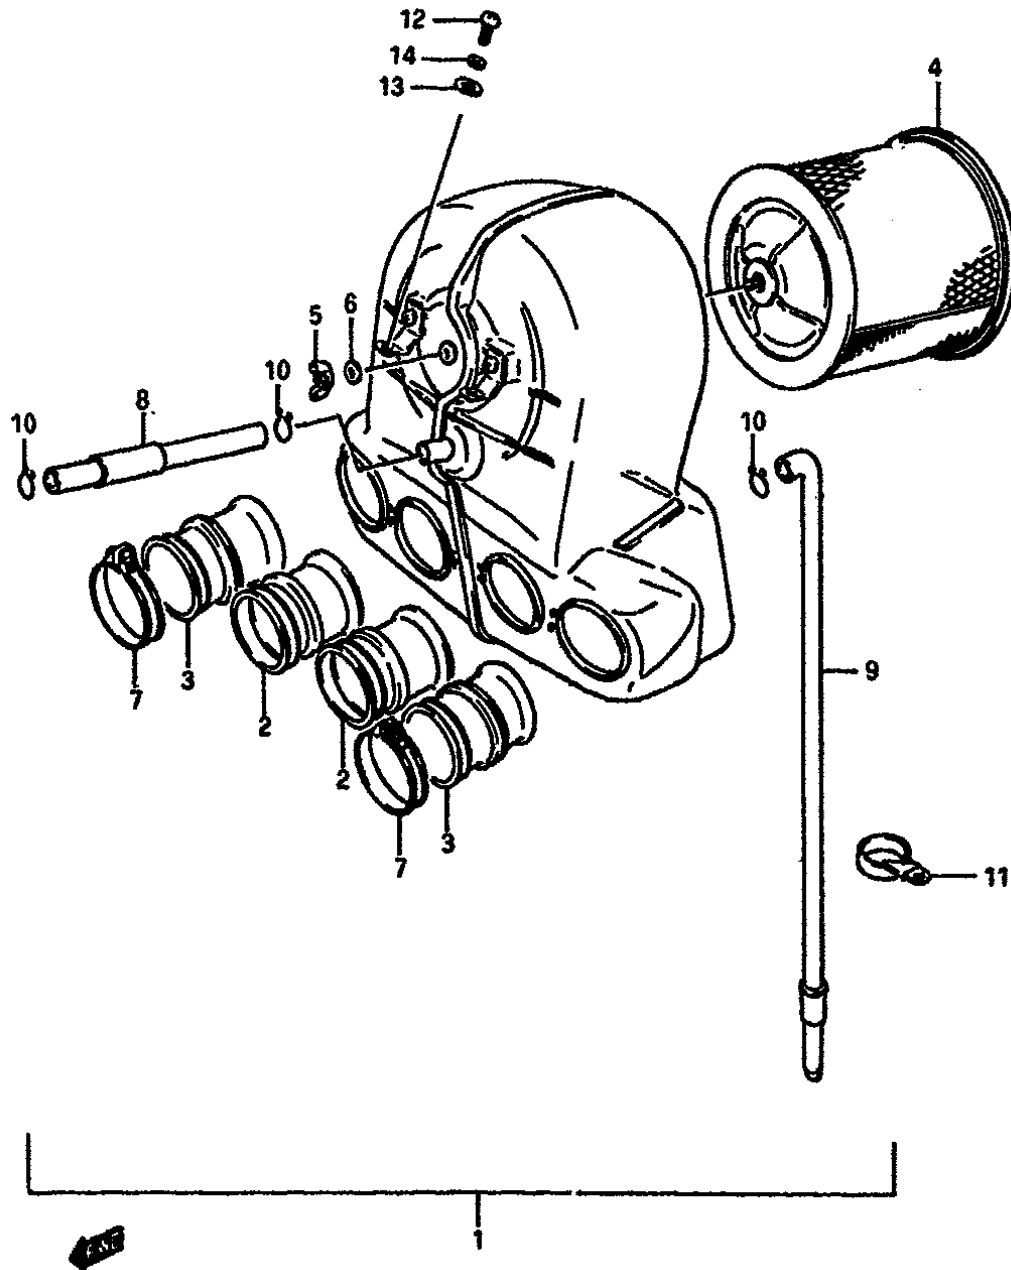


Ref No	Part No	Description
1	13700-27A01	Cleaner Assy,air
1	13700-27A11	Cleaner Assy,air
2	13881-27A00	• Tube,outlet Inside
3	13882-27A00	• Tube,outlet Outside
4	13780-27A00	• Filter
4	13780-27A10	• Filter
5	08317-12058	• Nut,wing
6	08322-11058	• Washer
7	09402-56207	• Clamp
8	13850-27A00	• Tube,breather
9	13870-21447	• Tube,drain
10	09401-14301	• Clip
11	13879-27A01	Clamp,drain Tube
12	02112-06208	Screw
13	09160-06019	Washer (6.5x16x1.2)
14	08321-91067	Lock Washer

Ref No	Part No	Description
1	14305-27A00	Muffler Assy
1	14305-27A80	Muffler Assy
1	14305-27B10	Muffler Assy
1	14305-27A20	Muffler Assy
1	14305-27A05	Muffler Assy
1	14305-27B00	Muffler Assy
1	14305-27A70	Muffler Assy
1	14305-27A15	Muffler Assy
2	14132-27A00	Clamp,exhaust Pipe
3	14155-27A00	Plate,exhaust Pipe
4	14181-05020	Gasket,exhaust Pipe
5	07110-08255	Bolt
6	14770-27A00	Damper,muffler Support
7	09100-08224	Bolt (8x35)
8	09162-08003	Lock Washer
9	09160-08069	Washer (8.5x29x3.2)
10	09160-08057	Washer (8.5x29x1.6)
11	09180-08102	Spacer (8.6x12x17.5)
12	09320-12026	Cushion
13	01107-10404	Bolt
14	08321-21104	Lock Washer
15	08322-11104	Washer
16	09160-10001	Washer (10.5x24x2.3)
17	08316-16108	Nut

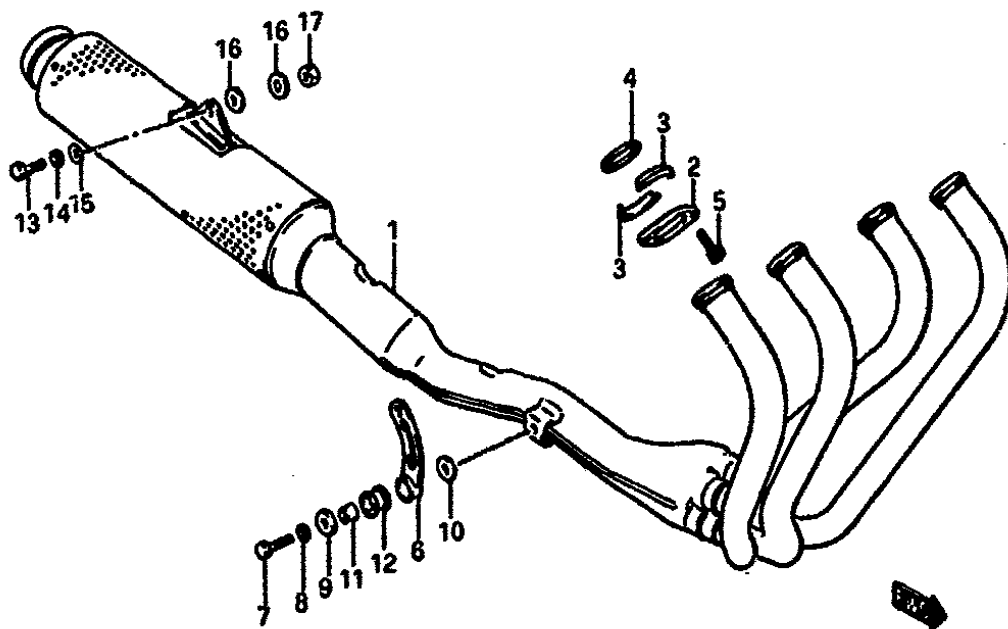


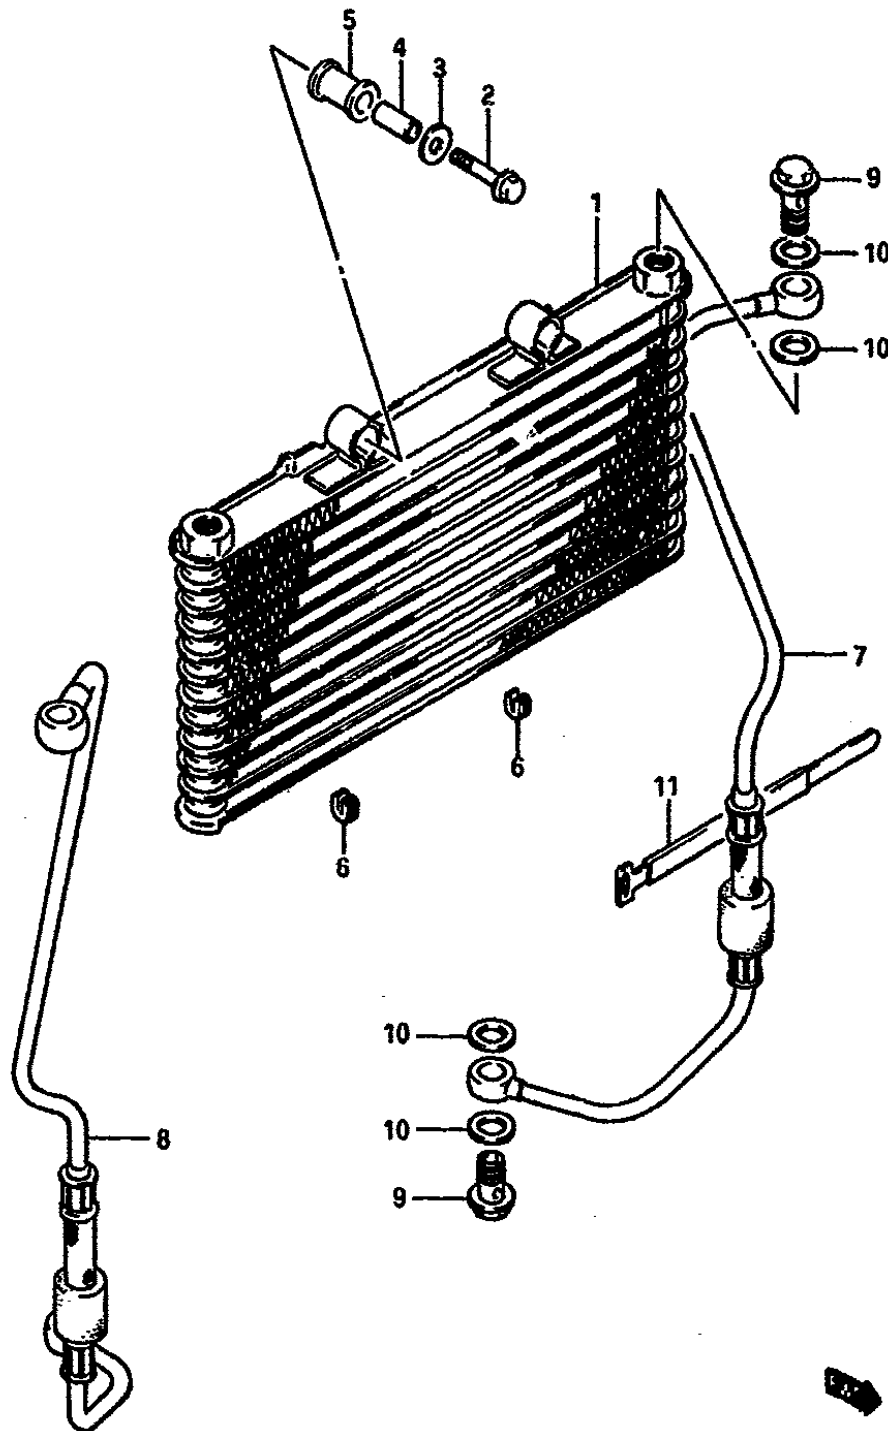


Ref No	Part No	Description
1	16600-27A01	Cooler Assy,oil
2	01517-08405	Bolt
3	09160-08047	Washer (8.5x23x1.2)
4	09180-08124	Spacer (8.8x12,24.5)
5	16629-27A01	Cushion,no.1
6	16628-27A00	Cushion,no.2
7	16460-27A00	Hose,oil Cooler Lh
8	16470-27A00	Hose,oil Cooler Rh
9	09360-16001	Bolt,union
10	09168-16003	Gasket (16x22x2)
11	09407-18301	Clamp,oil Hose

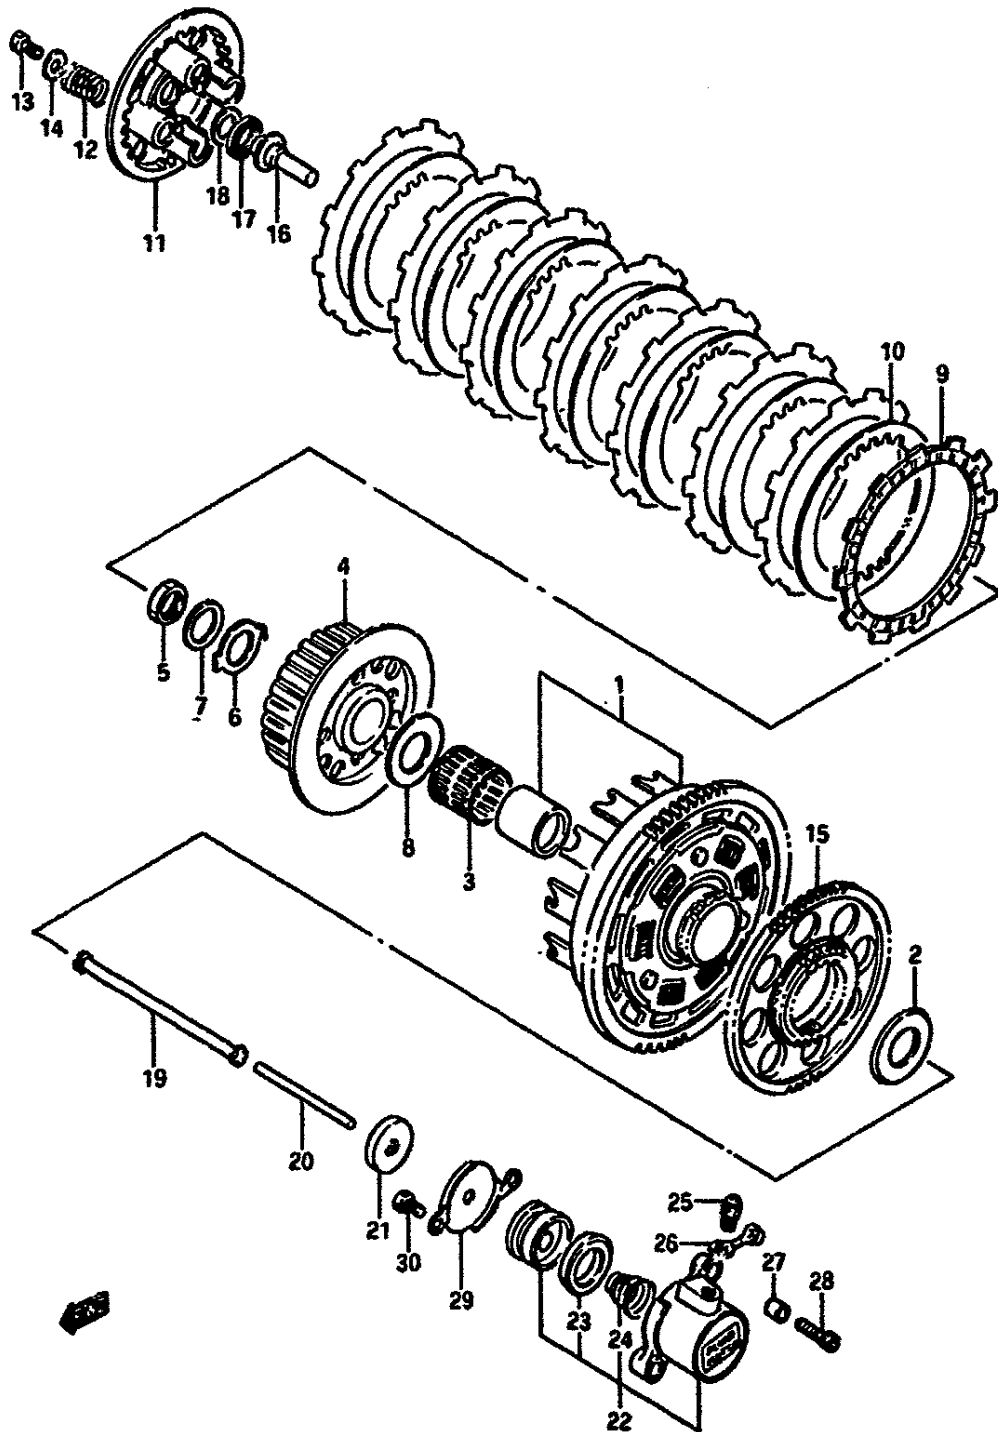


Ref No	Part No	Description
1	21200-27821	Gear,primary Driven (nt:75)
1	21200-27822	Gear,primary Driven (nt:75)
2	09160-25062	Washer
3	09263-35017	Bearing
4	21410-27A02	Hub,sleeve
5	09140-22008	Nut
6	09169-22005	Washer
7	09164-22006	Washer
8	09160-25056	Washer (25x50x2.5)
9	21441-37400	Plate,drive
10	21451-05A00	Plate,driven
11	21462-27A00	Disc,pressure
12	09440-20010	Spring
13	01107-06166	Bolt
14	09160-06020	Washer (6.5x20x1.6)
15	22721-27A01	Gear,generator Drive (nt:34/68)
16	23121-27A00	Pice,push
17	09263-15003	Bearing (15x28x2)
18	09160-15015	Washer (15x28x1)
19	23110-27A00	Rod,push
20	23111-15501	Rod,push Lh
21	09285-06015	Oil Seal
22	23160-08A01	Cylinder,clutch Release
23	23163-05A00	. . Cup
24	23164-05A00	. . Spring
25	59121-01A00	. . Bleeder
26	59122-01A00	. . Cap,bleeder
27	04211-09129	Pin
28	07110-06255	Bolt
29	23117-27A02	Cover,cylinder
30	02112-06106	Screw

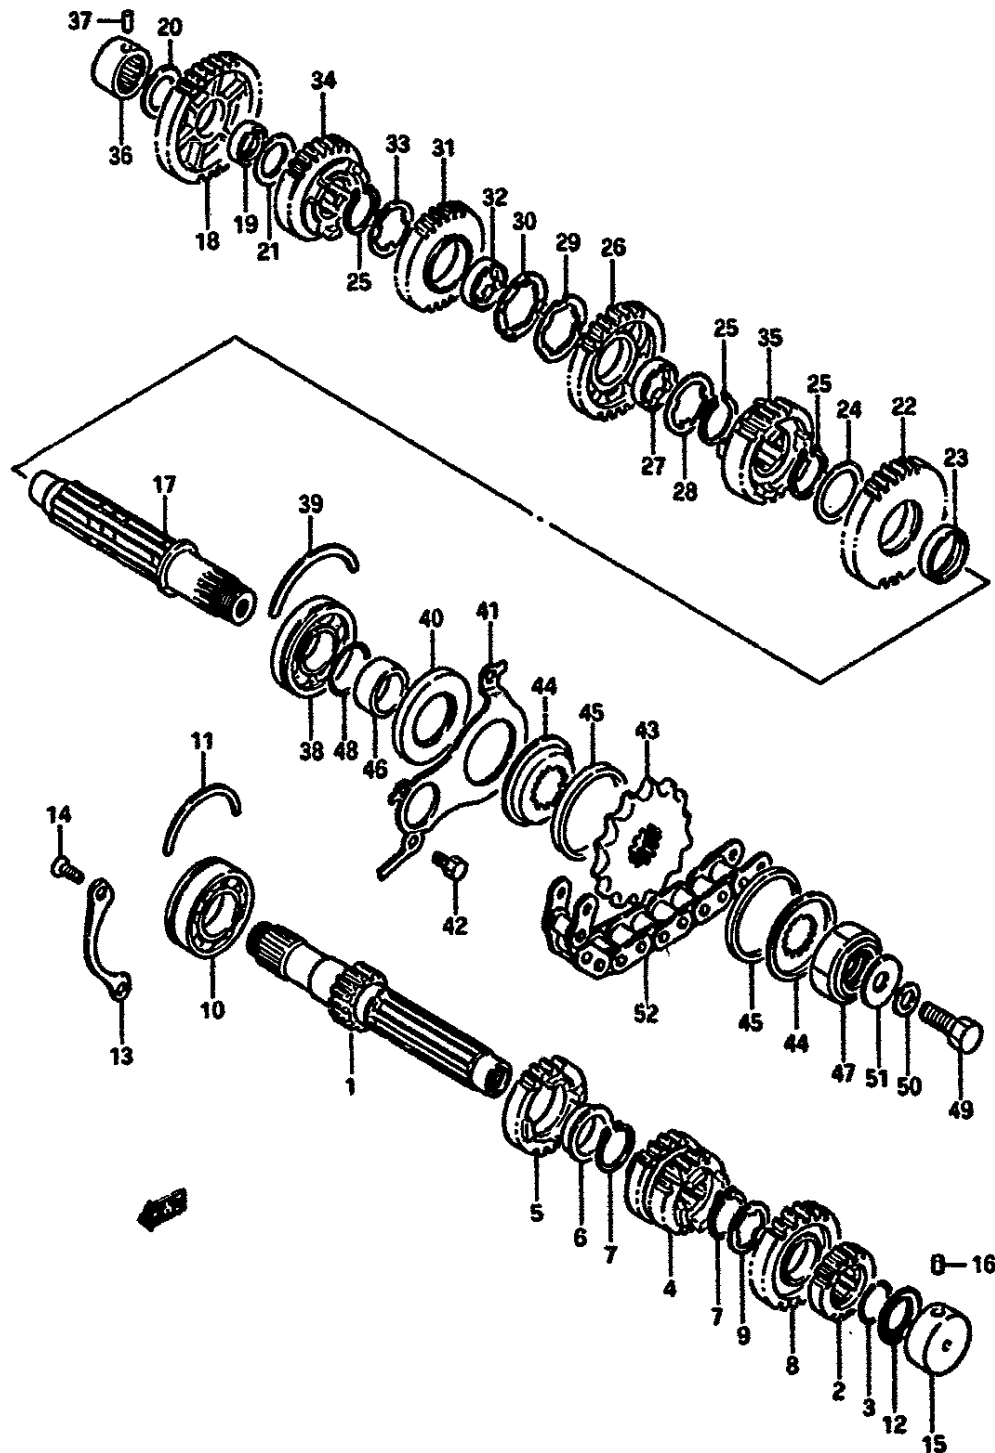


Ref No	Part No	Description
1	24121-27A01	Countershaft (nt:13)
2	24221-27A01	Gear,2nd Drive (nt:16)
3	09380-25006	Circlip
4	24231-27A00	Gear,3/4th Drive (nt:17/20)
5	24251-27A01	Gear,5th Drive (nt:22)
6	09301-25001	Bush
7	09380-25003	Circlip
8	24261-27A00	Gear,6th Drive (nt:21)
9	09167-25012	Washer
10	09262-25051	Bearing,rh
11	09390-62006	C Ring
12	09285-20006	Oil Seal
13	24741-27A00	Holder,bearing
14	02122-06167	Screw
15	09263-20049	Bearing,lh
16	04221-07129	Pin
17	24131-27A02	Driveshaft
18	24311-27A01	Gear,1st Driven (nt:36)
19	09300-22008	Bush
20	08211-20341	Washer,rh
21	08211-22341	Washer,lh
22	24321-27A01	Gear,2nd Driven (nt:33)
23	09300-28001	Bush
24	08211-28381	Washer
25	08331-11289	Circlip
26	24331-27A00	Gear,3rd Driven (nt:28)
27	24332-27A00	Bush
28	09167-28001	Washer,lh
29	09167-28002	Washer,rh (t:1.5)
30	09169-28001	Washer,rh (t:1.0)
31	24341-27A00	Gear,4th Driven (nt:28)
32	24332-27A00	Bush
33	09167-28001	Washer,rh
34	24351-27A00	Gear,5th Driven (nt:27)
35	24361-27A00	Gear,6th Driven (nt:23)
36	09263-20040	Bearing,rh
37	04221-07209	Pin (l:20)
38	09262-25065	Bearing,lh
39	09390-62006	C Ring
40	09283-34005	Oil Seal (34x62x6)
41	24751-27A00	Plate
42	01107-06108	Screw
43	27511-27A11	Sprocket,engine (nt:14)
44	27516-31301	Holder,damper
45	27517-31300	Damper,engine Sprocket
46	09180-25080	Spacer (25x34x16.1)
47	09159-20004	Nut
48	09280-25001	O Ring (d:1,id:24.5)
49	01107-06166	Bolt
50	08321-31067	Lock Washer
51	08212-06222	Washer
52	27600-27A00-106	Chain,drive (106l) Did
52	27600-27A00-110	Chain,drive (110l) Did

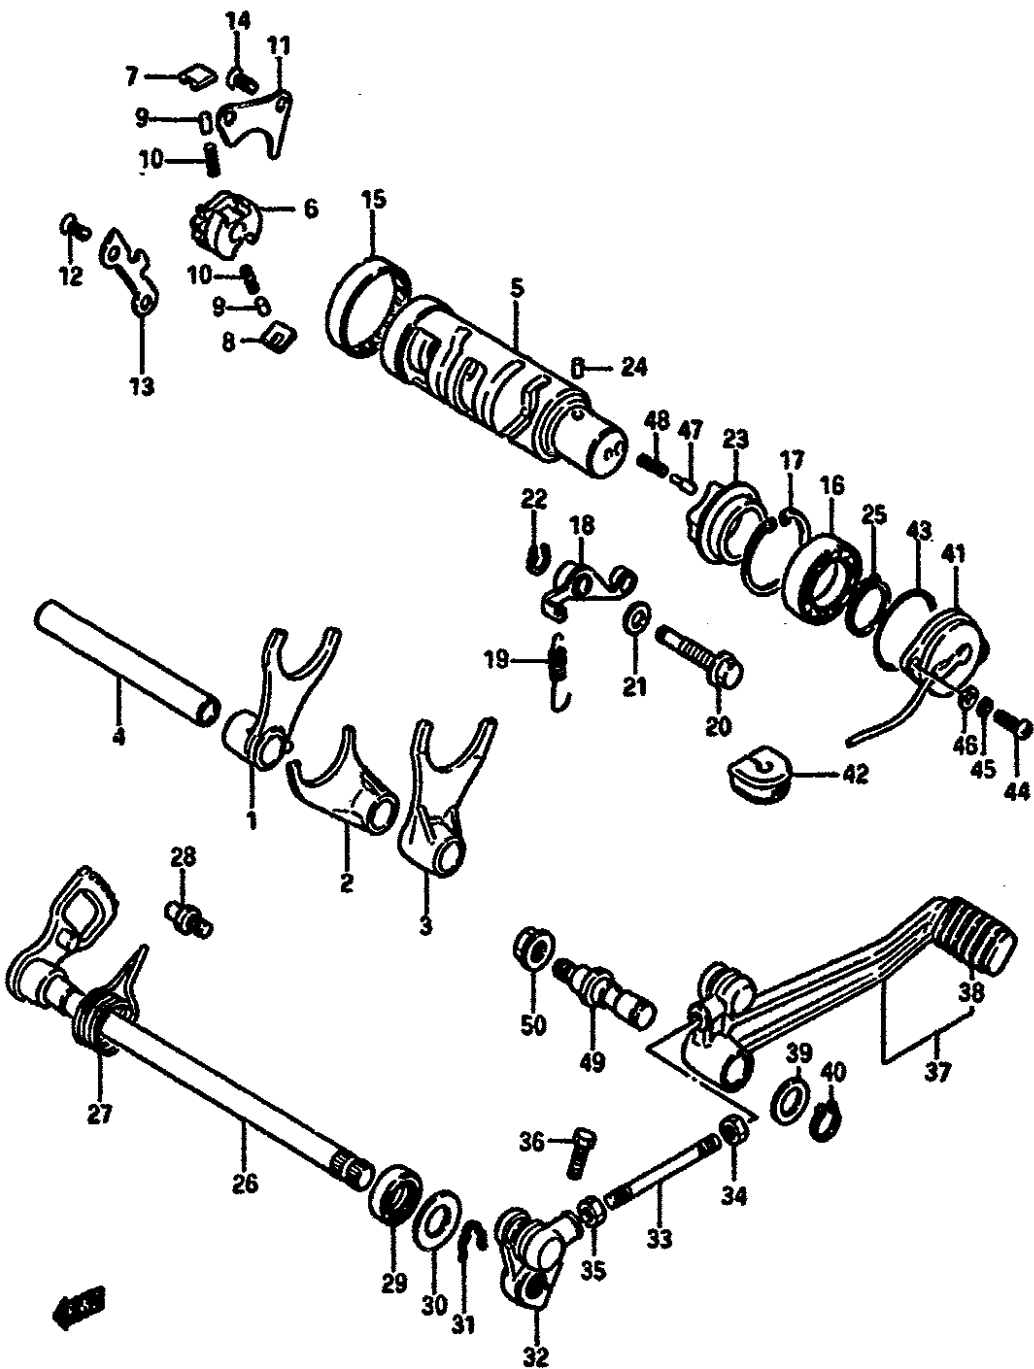



Ref No	Part No	Description
1	25211-27A00	Fork,gear Shifting No.1
2	25221-27A01	Fork,gear Shifting No.2
3	25231-27A00	Fork,gear Shifting No.3
4	25411-27A00	Shaft,gear Shifting Fork
5	25310-27A01	Cam,gear Shifting
6	25322-31301	Gear,cam Driven
7	25323-34201	Pawl,no.1
8	25324-34201	Pawl,no.2
9	09261-05003	Pin
10	09440-04003	Spring
11	25331-31301	Lifter,pawl
12	02122-06128	Screw
13	25341-27A00	Guide,cam
14	02122-06128	Screw
15	09263-43001	Bearing,rh
16	08110-69050	Bearing,lh
17	08331-41428	Circlip
18	25350-27A00	Stopper,cam
19	09443-09031	Spring
20	25353-27A00	Shaft,stopper
21	09168-10002	Washer
22	08331-31086	Circlip
23	25381-38400	Plate,stopper
24	06211-04063	Pin
25	08331-31258	Circlip
26	25510-27A00	Shaft,gear Shifting
27	09444-26017	Spring
28	25671-01000	Stopper,arm
29	09285-12002	Oil Seal (12x22x9)
30	09160-12020	Washer (12.5x27x1.6)
31	09384-12001	Circlip
32	25520-33301	Arm,gear Shift Link
33	25525-27A10	Rod,gear Shift Link
34	09140-06011	Nut
35	08310-11067	Nut
36	01107-06257	Bolt
37	25600-27A00	Lever Assy,gear Shifting
38	43151-04701	• . Cover
39	09160-12011	Washer (12.5x20x1)
40	08331-31128	Circlip
41	37720-09300	Body,gear Shifting Switch
42	33885-27A00	Grommet,lead Wire
43	09280-36001	O Ring (d:2.4,id:36.2)
44	09125-05102	Screw
45	08321-21057	Lock Washer
46	08322-21057	Washer
47	09209-05011	Contact
48	09440-04010	Spring
49	25617-20A00	Shaft,lever
50	08316-16108	Nut

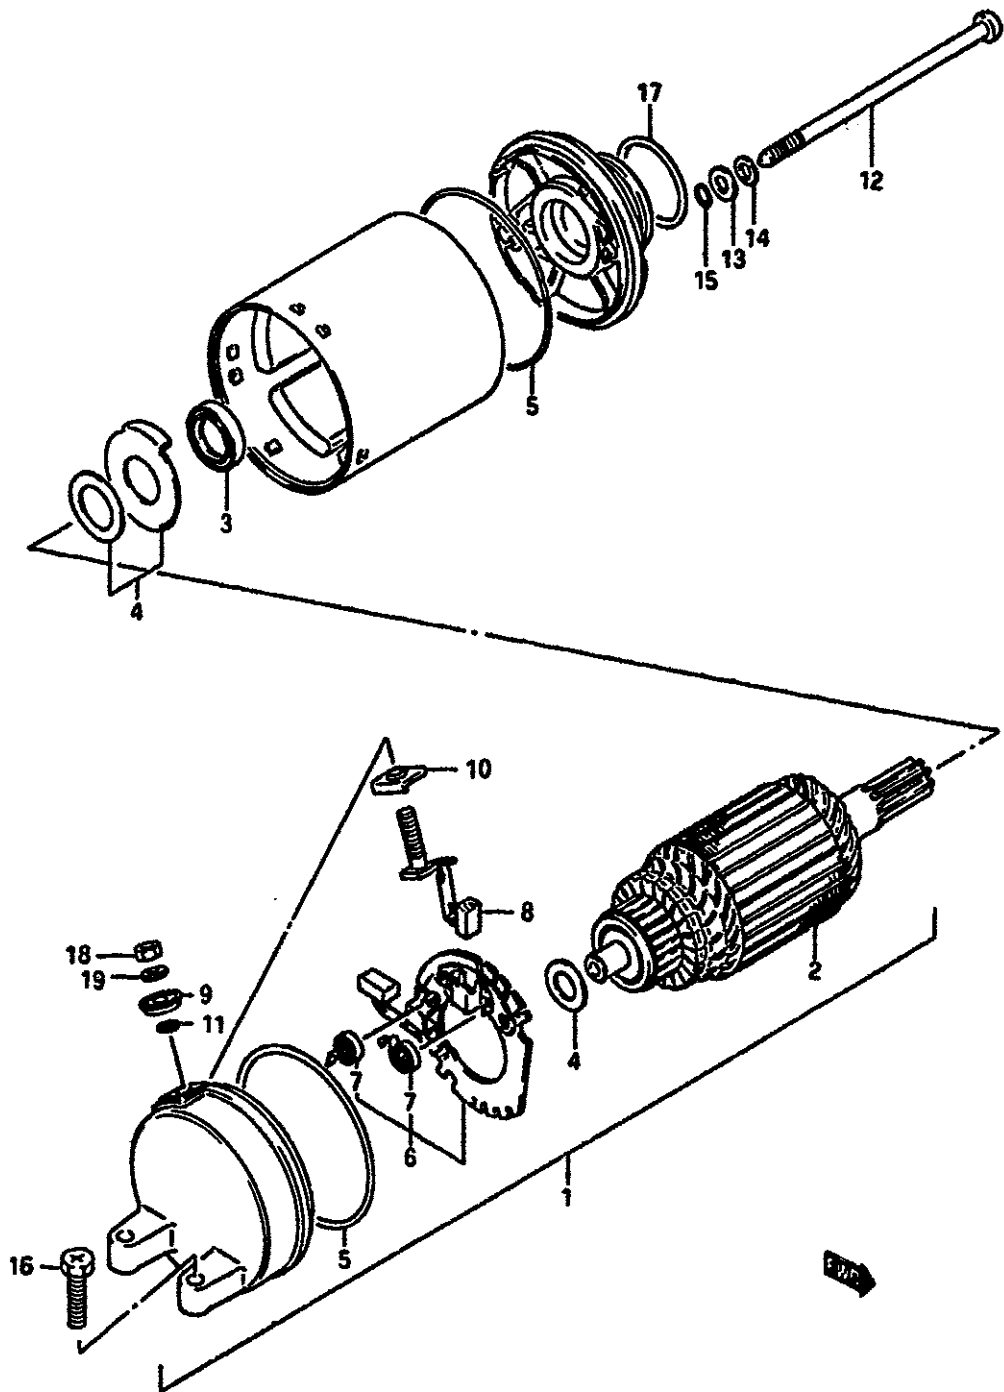

Ref No	Part No	Description
1	31100-27A00	Motor,starting
2	31310-27A00	. Armature
3	31153-43400	. Oil Seal
4	31170-43400	. Shim Set
5	31264-44110	. O Ring
6	31132-44110	. Brush Holder Assy
7	31135-65010	.. Spring
8	31130-38300	. Brush
9	31172-38300	. Bushing (a)
10	31171-38300	. Bushing (b)
11	31143-38300	. O Ring
12	31281-05310	. Screw
13	31161-05310	. Washer
14	08321-21055	. Lock Washer
15	31156-38300	. O Ring
16	09128-06024	Bolt
17	09280-24003	O Ring
18	08310-11066	Nut
19	08321-21066	Lock Washer

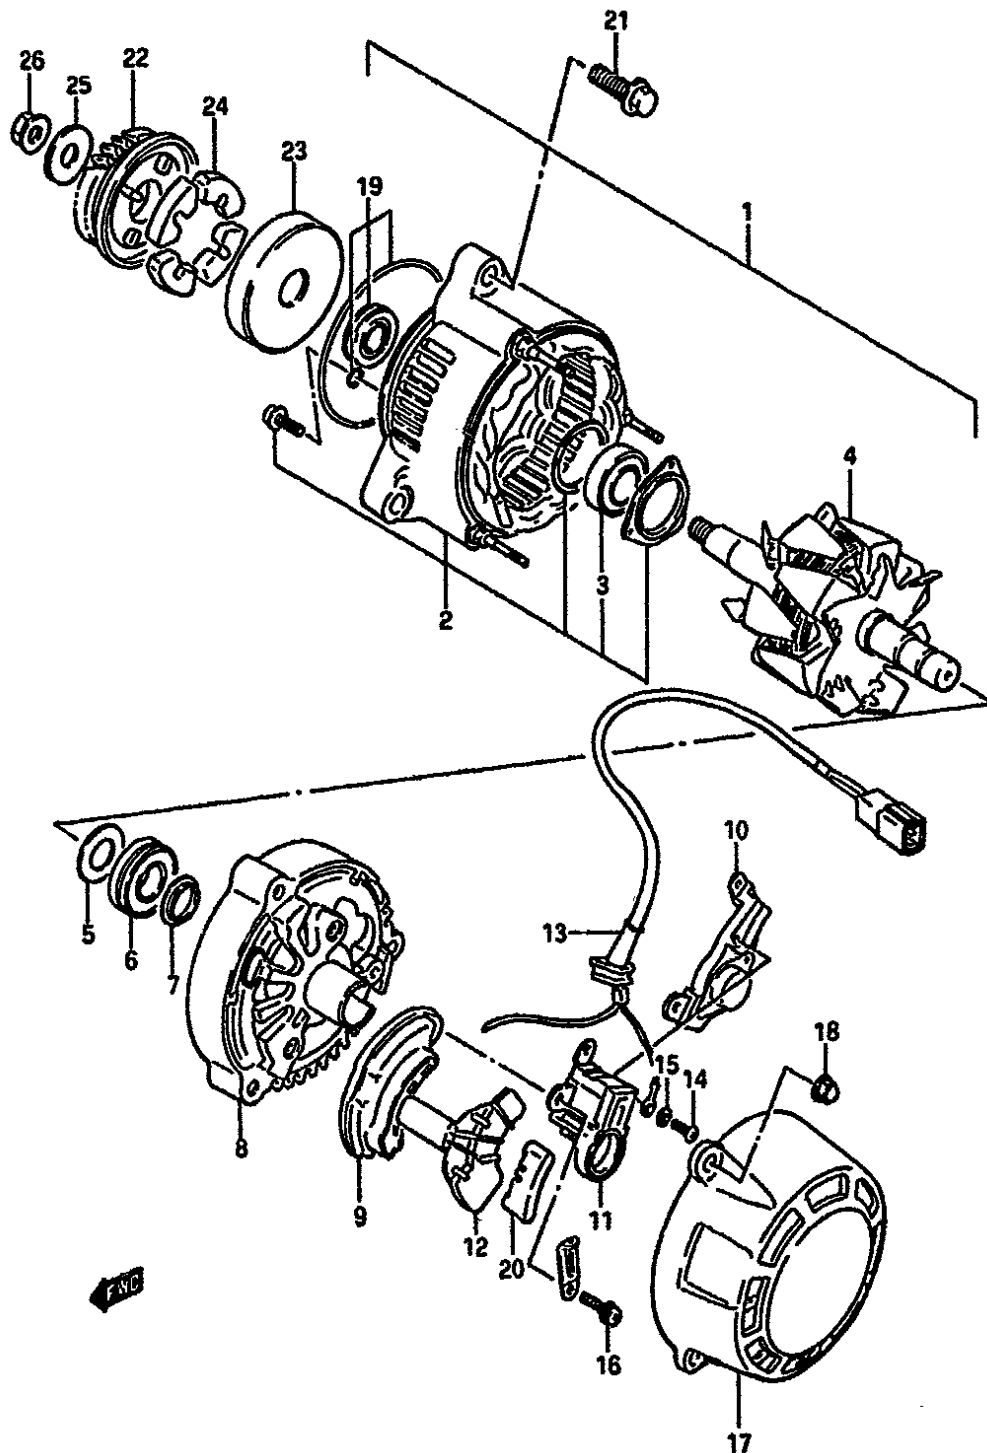


Ref No	Part No	Description
2	31580-27A01	. Frame,drive End
3	31612-27A10	•• . Bearing
4	31710-27A00	. Rotor Assy
5	31613-27A00	. Cover (1)
6	31612-27A00	. Bearing
7	31613-27A10	. Cover (2)
8	31611-27A00	. Frame,end
9	31621-27A00	. Holder,rectifier
10	32500-27A00	. Regulator
11	31656-27A00	. Holder,brush
12	31687-27A00	. Cover,rectifer
13	31480-27A00	. Lead Wire
14	02112-04086	. Screw
15	08321-21046	. Lock Washer
16	31688-27A00	. Screw
17	31614-27A00	. Cover
18	31692-27A00	. Nut
19	31780-27A00	. Oil Seal Set
20	31514-27A00	. Bush
21	01517-08304	Bolt
22	22730-27A01	Gear,generator Driven
23	22733-27A03	Housing,damper
24	21231-06B00	Damper
25	08211-10283	Washer
26	08316-26106	Nut

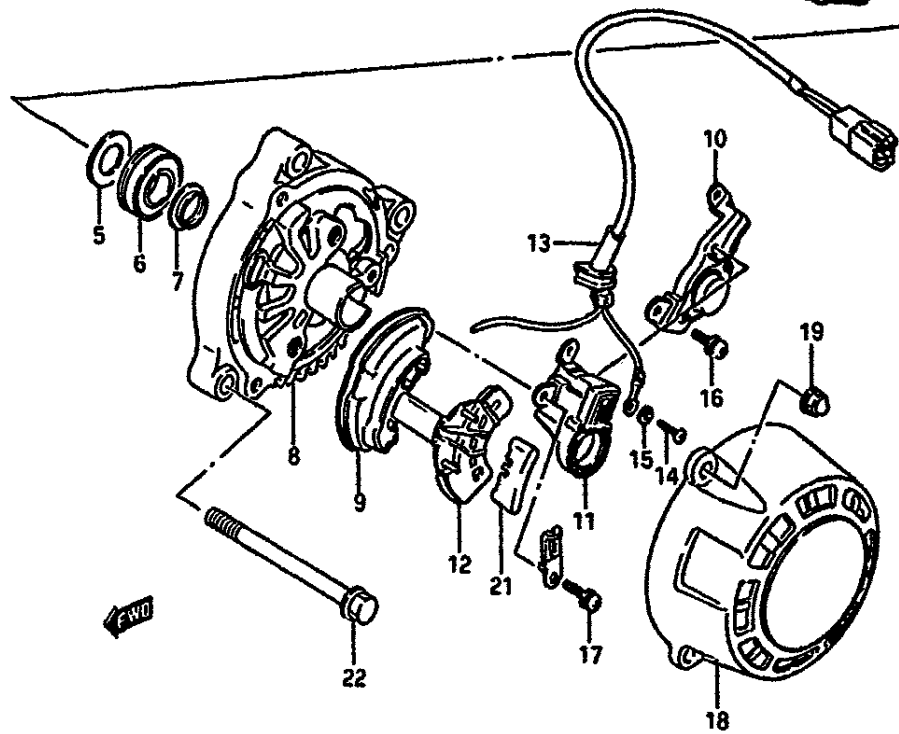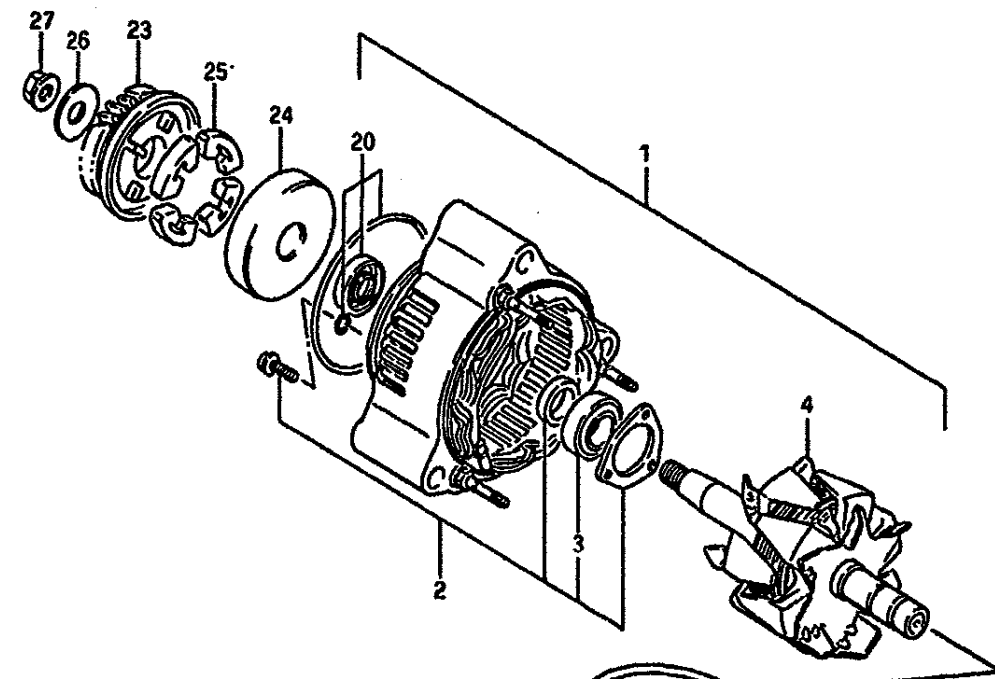


Ref No	Part No	Description
1	31400-06B00	Alternator Assy
2	31580-06B00	. . Frame,drive End
3	31612-06B00	•• . . Bearing
4	31710-06B00	. . Rotor Assy
5	31613-27A00	. . Cover (1)
6	31612-27A00	. . Bearing
7	31613-27A10	. . Cover (2)
8	31611-06B00	. . Frame,end
9	31621-27A00	. . Holder,rectifier
10	32500-27A00	. . Regulator
11	31656-06B00	. . Holder,brush
12	31687-27A00	. . Cover,rectifier
13	31480-27A00	. . Lead Wire
14	02112-04086	. . Screw
15	08321-21046	. . Lock Washer
16	31688-27A00	. . Screw (5x17)
17	31688-06B00	. . Screw (5x18)
18	31614-27A00	. . Cover
19	31692-27A00	. . Nut
20	31780-06B00	. . Oil Seal Set
21	31514-27A00	. . Bush
22	01517-08905	Bolt
23	22730-27A02	Gear,generator Driven
24	22733-27A03	Housing,damper
25	21231-06B00	Damper
26	08211-10283	Washer
27	08316-26106	Nut

Ref No	Part No	Description
--------	---------	-------------


- | | | |
|---|-------------|-----------------------|
| 1 | 32900-27A00 | Igniter Unit |
| 2 | 02112-06126 | Screw |
| 3 | 08322-21066 | Washer |
| 4 | 33110-27A00 | Signal Generator Assy |
| 5 | 33120-27A00 | Rotor,signal |
| 6 | 07110-08306 | Bolt |
| 7 | 02112-05107 | Screw |
| 8 | 09407-11401 | Clamp |

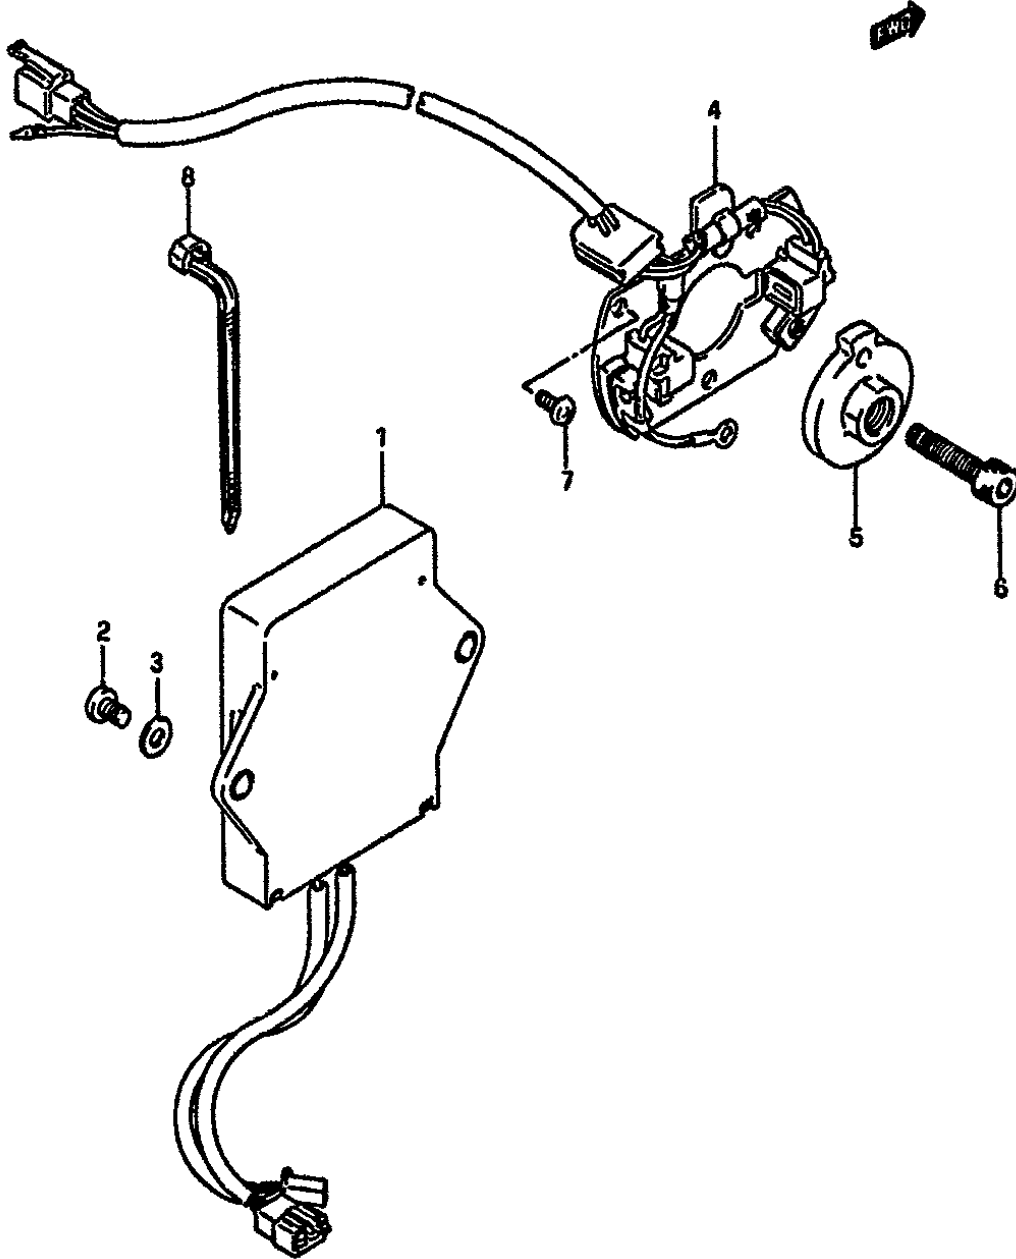


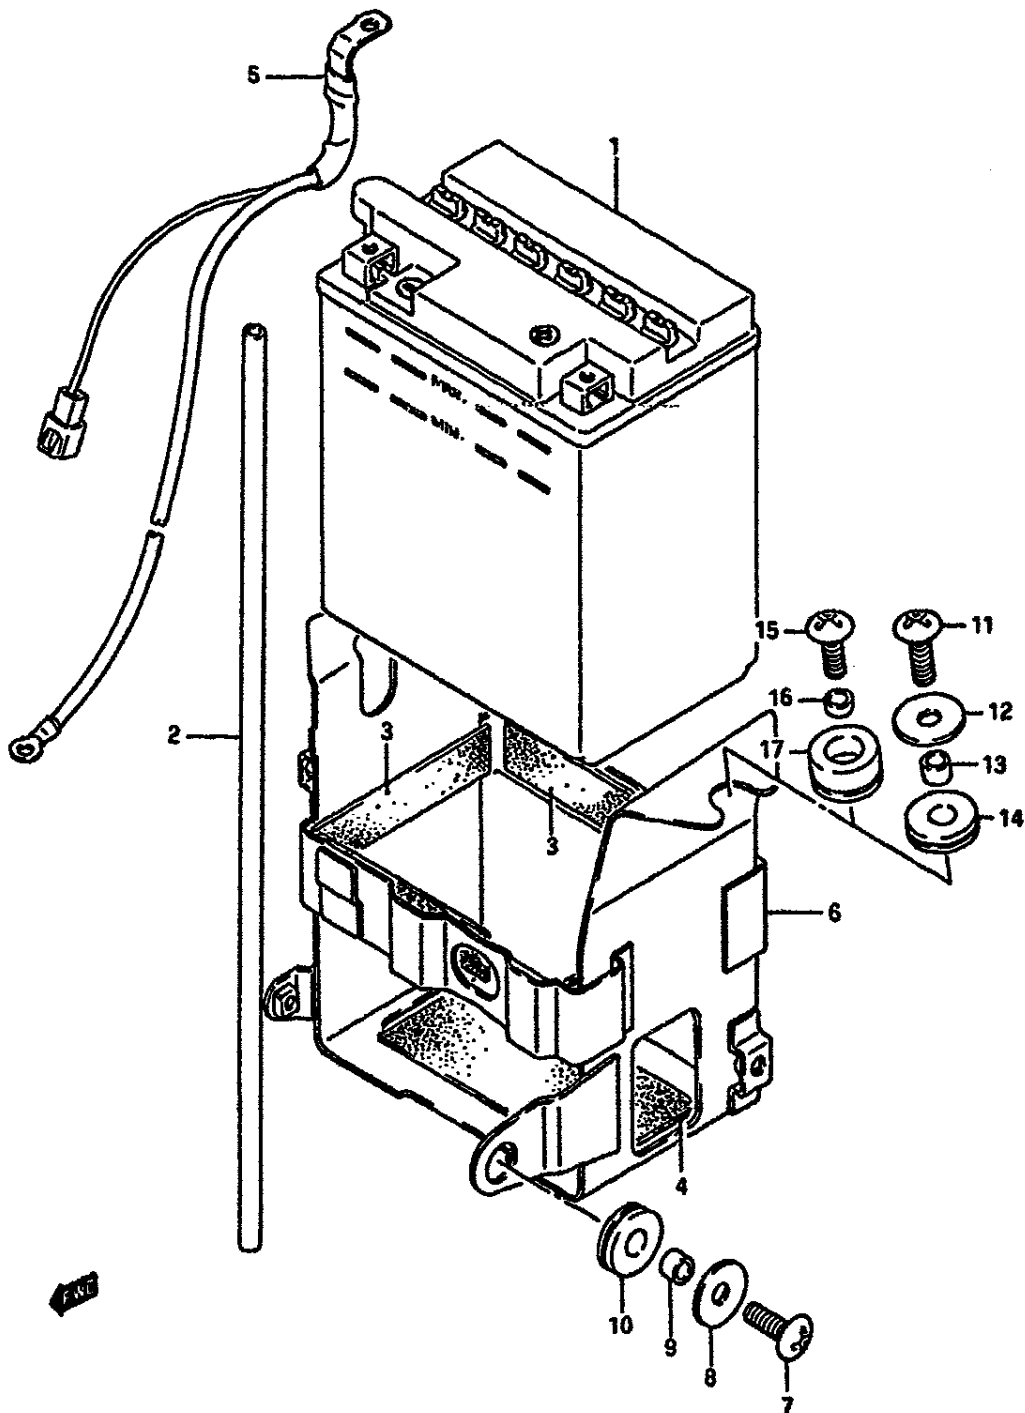


Ref No	Part No	Description
1	33610-49210	Battery (12v,14ah)
2	33680-31003	Hose,battery Exhaust
3	33652-29100	Protector (20x90)
4	33651-37D00	Cushion
5	33860-27A00	Lead Wire (-)
5	33860-06B00	Lead Wire (-)
6	41540-27A00	Holder,battery
7	02142-06167	Screw
8	09160-06004	Washer (6.5x24x1.6)
8	09160-06006	Washer (6.5x18x1.6)
9	09180-06152	Spacer (6.4x9x8.5)
10	09320-09021	Cushion
11	02142-06257	Screw
12	09160-06004	Washer (6.5x24x1.6)
13	09180-06152	Spacer (6.4x9x8.5)
14	09320-09021	Cushion
15	02142-06207	Screw
16	09180-06073	Spacer (6.4x9x5)
17	41549-34A00	Cushion

Ref No	Part No	Description
1	31800-49100	Relay,starting Motor
2	02112-06106	Screw
3	08310-11066	Nut
4	08321-21066	Lock Washer
5	33850-27A01	Lead Wire,starting Motor
6	31861-44500	Cap,terminal
7	33410-27A00	Coil,ignition No.1
8	33420-27A00	Coil,ignition No.2
9	09180-06061	Spacer
10	02112-06356	Screw
11	33510-27A11	Cap,spark Plug
12	33510-27A60	Cap,spark Plug
13	33541-27A22	Seal,plug
14	33542-98000	Seal,high-tension Cord
15	33543-27A21	Cover

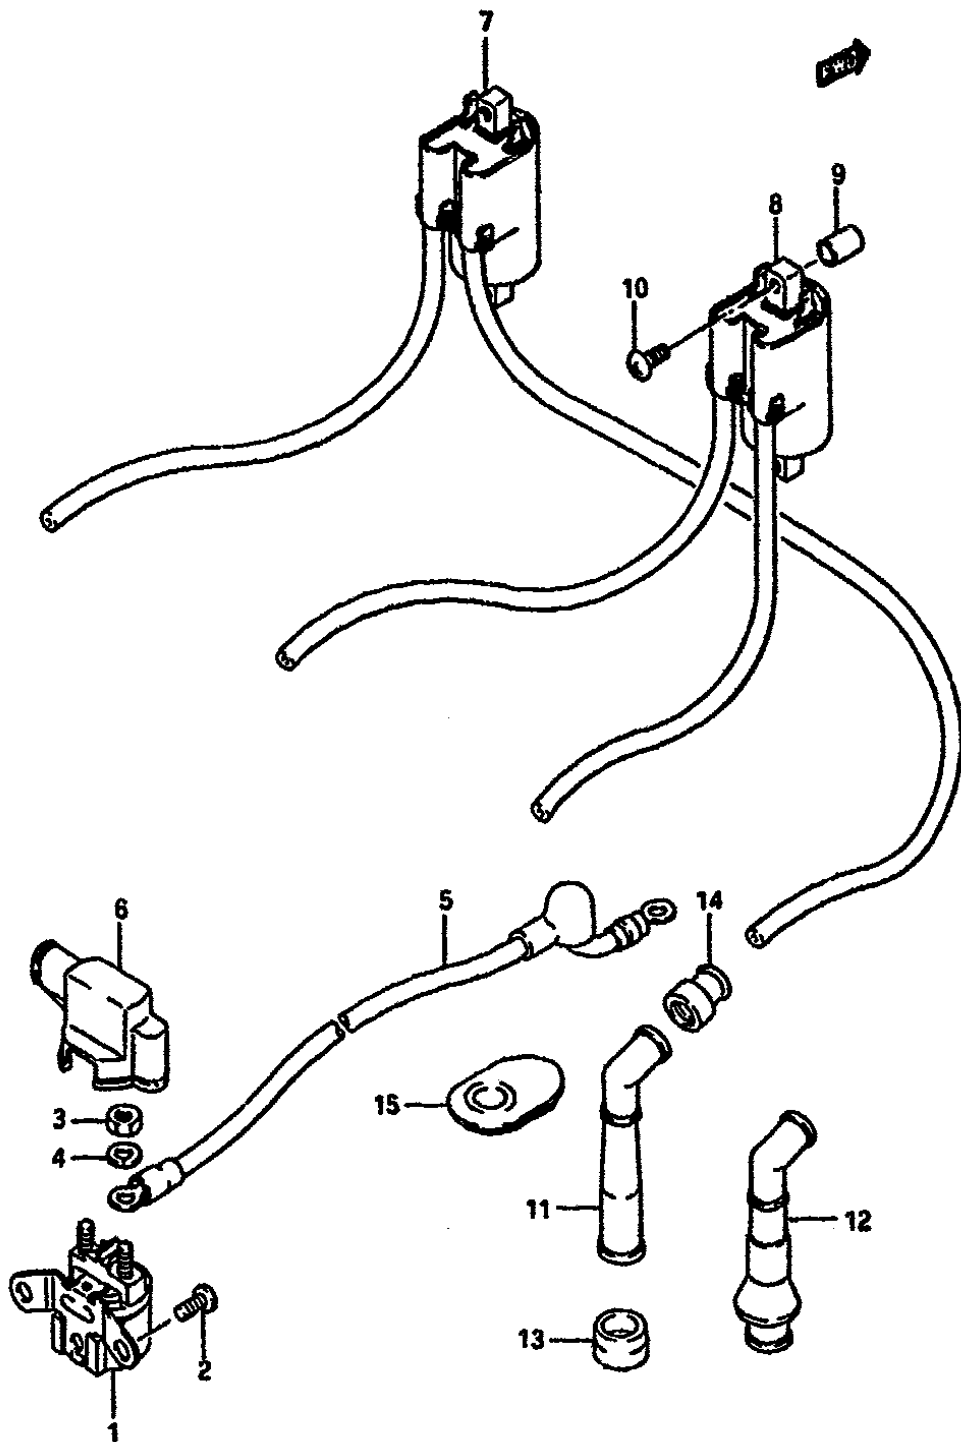


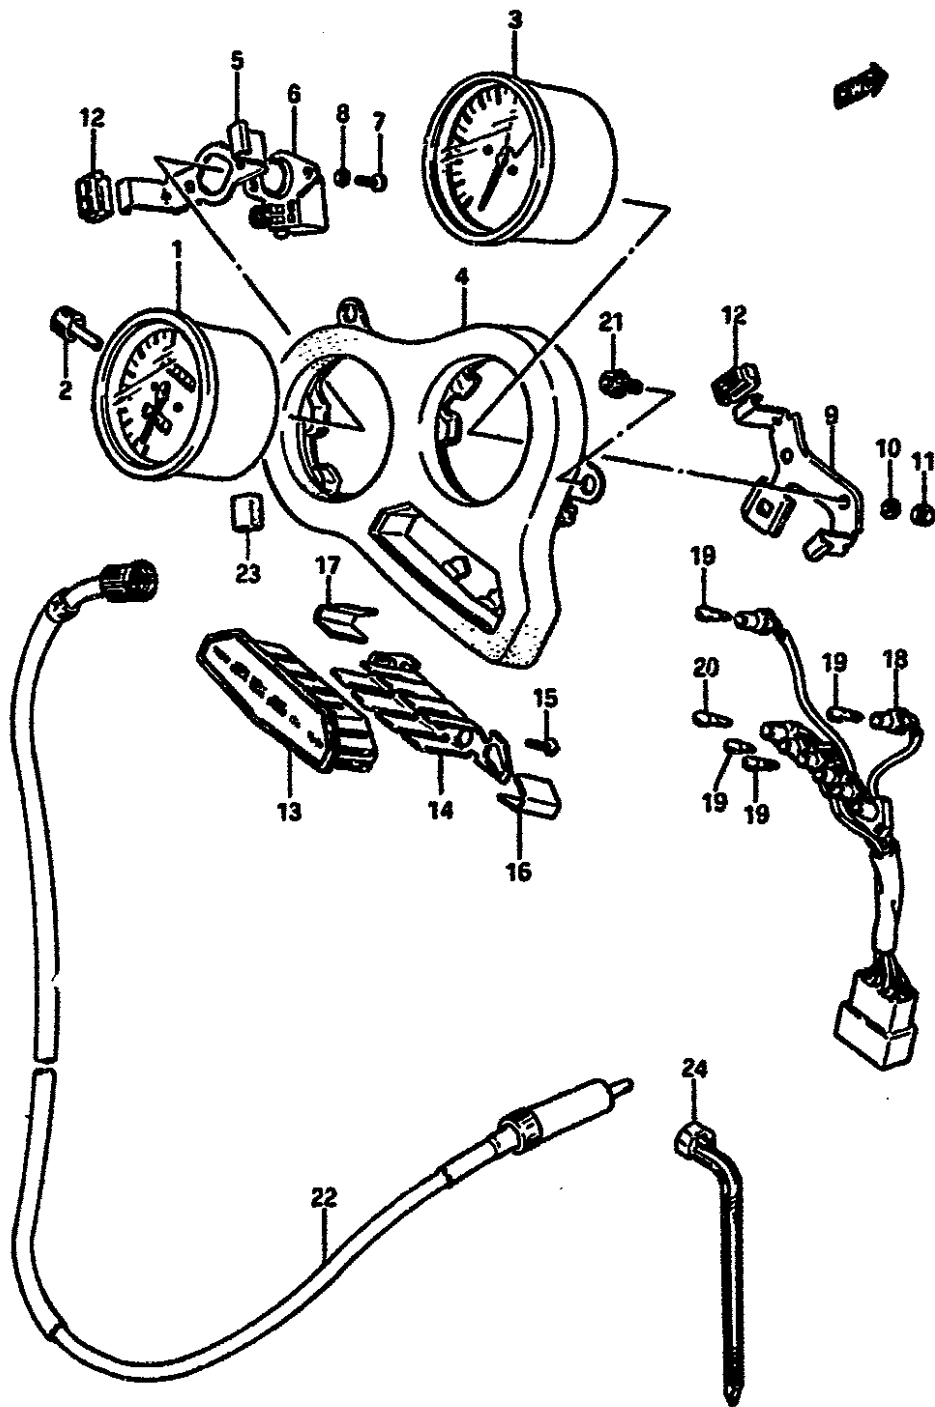


Ref No	Part No	Description
1	34110-27A10	Speedometer (kilo)
1	34110-27A20	Speedometer (mile/kilo)
2	34124-27A00	Knob,trip
3	34210-27A00	Tachometer (r/min)
3	34210-27A60	Tachometer (r/min)
3	34210-27A80	Tachometer (rpm)
4	34950-27A10	Bracket,meter
4	34950-27A11	Bracket,meter
5	34111-27A00	Plate,speedometer
6	34131-27A00	Box,meter Gear
7	02112-04105	Screw
8	08321-21045	Lock Washer
9	34211-27A00	Plate,tachometer
10	34181-27A00	Washer
11	08310-21035	Nut
12	34189-27A00	Cushion
13	36381-27A10	Case,pilot Lamp
13	36381-27A40	Case,pilot Lamp
13	36381-27A70	Case,pilot Lamp
14	36382-27A00	Plate,pilot Lamp
15	36387-27A00	Screw
16	36383-27A00	Plate,turn Rh
17	36384-27A00	Plate,turn Lh
18	34170-27A10	Socket,meter
18	34170-27A40	Socket,meter
19	09471-12085	Bulb (12v,3w)
19	09471-12085	Bulb (12v,3w)
20	09471-12100	Bulb (12v,1.7w)
21	07120-06125	Bolt
22	34910-27A01	Cable Assy,speedometer
23	34191-27A00	Cushion,meter
24	09407-11401	Clamp

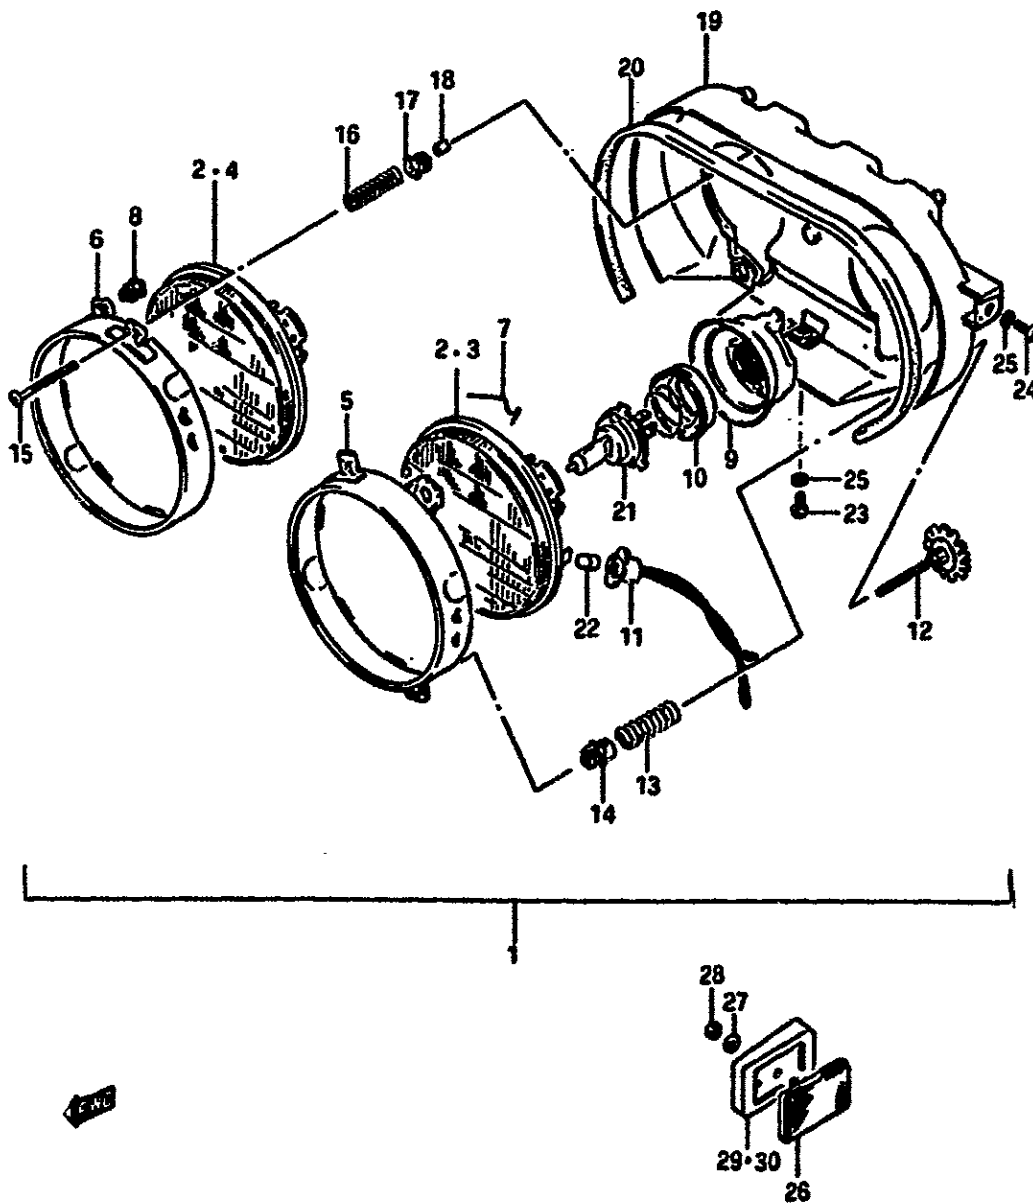



Ref No	Part No	Description
1	35100-27A33-999	Headlamp Assy
1	35100-27A03-999	Headlamp Assy
1	35100-27A42-999	Headlamp Assy
1	35100-27A53-999	Headlamp Assy
1	35100-27A62-999	Headlamp Assy
1	35100-27A72-999	Headlamp Assy
2	35121-27A30	• . Unit
2	35121-27A00	• . Unit
2	35121-27A40	• . Unit
3	35121-27A40	• . Unit,lh
4	35121-27A50	• . Unit,rh
4	35121-27A70	• . Unit,rh
5	35126-27A00	• . Ring,retaining Lh
6	35127-27A00	• . Ring,retaining Rh
7	35128-46720	• . Spring,insert
8	35162-04A00	• . Bearing,spherical
9	35173-20A01	• . Cover,socket
11	36118-04A00	• . Socket
11	36118-30500	• . Socket
11	36118-30500	• . Socket
12	35153-27A00	• . Screw,adjusting
13	35154-04A00	• . Spring
14	35152-27A00	• . Nut
15	35151-04A00	• . Screw,adjusting
16	35154-04A00	• . Spring
17	35155-04A00	• . Nut
18	35158-43400	• . Cap,screw
19	35240-27A03	• . Housing
20	35242-27A00	• . Gasket
21	09471-12102	Bulb (12v,45/45w)
21	09471-12049	Bulb (12v,45/40w)
22	09471-12001	Bult (12v,3.4w)
22	09471-12063	Bult (12v,4)
22	09471-12063	Bult (12v,4)
23	02112-06166	Screw
24	02112-06106	Screw
25	08321-21066	Lock Washer
26	35950-01A30	Reflex Reflector,front Side
27	08322-21055	Washer
28	08310-12055	Nut
29	35954-27A00	Spacer,rh
30	35955-27A00	Spacer,lh

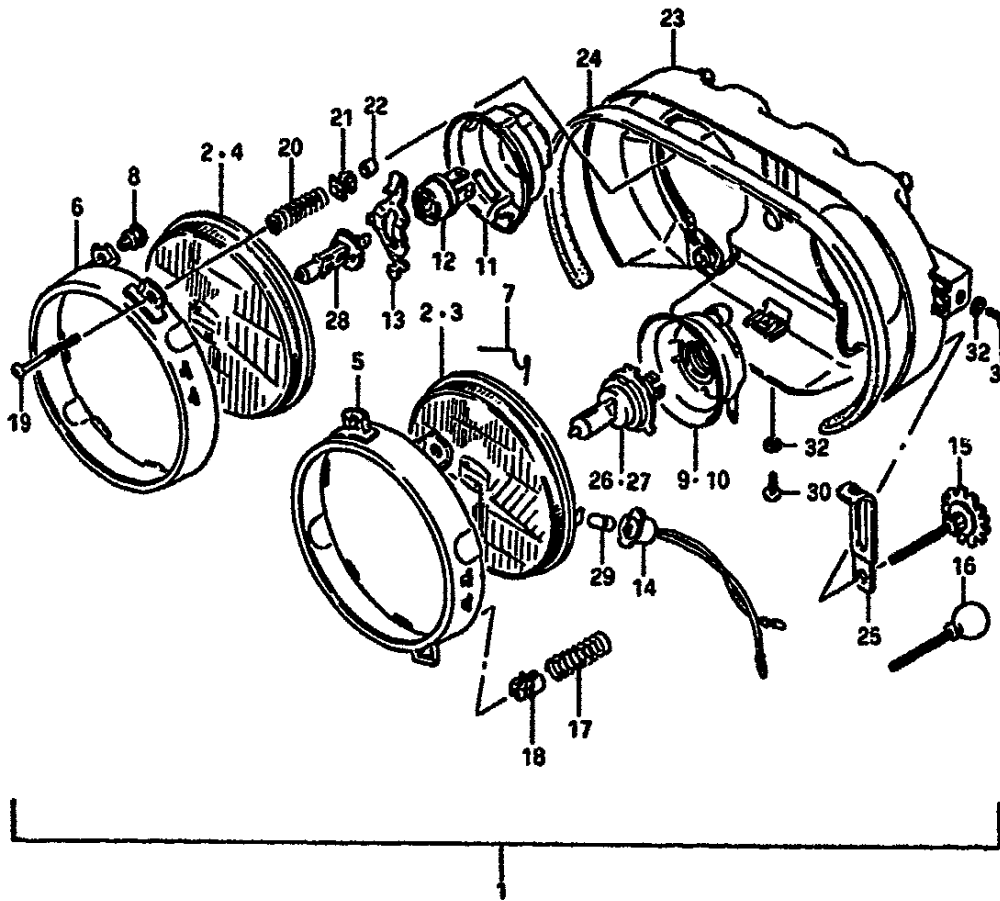


Ref No	Part No	Description
1	35100-06B30-999	Headlamp Assy
1	35100-06B00-999	Headlamp Assy
1	35100-06B40-999	Headlamp Assy
1	35100-06B80-999	Headlamp Assy
1	35100-06B60-999	Headlamp Assy
1	35100-06B50-999	Headlamp Assy
1	35100-06B70-999	Headlamp Assy
2	35121-06B30	. Unit
2	35121-06B00	. Unit
2	35121-06B50	. Unit
3	35121-06B50	. Unit,lh
4	35221-06B40	. Unit,rh
4	35121-06B80	. Unit,rh
4	35221-06B50	. Unit,rh
4	35221-06B70	. Unit,rh
5	35126-27A00	. Ring,retaining Lh
6	35127-27A00	. Ring,retaining Rh
7	35128-46720	. Spring,insert
8	35162-04A00	. Bearing,spherical
9	35173-20A01	. Cover,sprocket
10	35173-20A01	. Cover,sprocket Lh
11	35173-06B50	. Cover,sprocket Rh
12	35175-06B50	. Adapter
13	35172-06B50	. Spring,plate
14	36118-04A00	. Socket
14	36118-30500	. Socket
14	36118-04A00	. Socket
15	35153-27A00	. Screw,adjusting
16	35153-04A00	. Screw,adjusting
17	35154-04A00	. Spring
18	35152-27A00	. Nut
19	35151-04A00	. Screw,adjusting
20	35154-04A00	. Spring
21	35155-04A00	. Nut
22	35158-43400	. Cap,screw
23	35240-06B00	. Housing
24	35242-27A00	. Gasket
25	09404-05401	. Clamp
26	09471-12060	Bulb (12v,60/55w)
27	09471-12061	Bulb,lh (12v,60/55w)
27	09471-12060	Bulb,lh (12v,60/55w)
29	09471-12063	Bulb (12v,4w)
29	09471-12063	Bulb (12v,4w)
30	02112-06166	Screw
31	02112-06106	Screw
32	08321-21066	Lock Washer
33	38640-06B00	Relay Assy,headlamp
33	38640-06B00	Relay Assy,headlamp
34	38641-06B00	Bracket,relay
35	35950-01A30	Reflex Reflector,front Side
36	08322-21055	Washer
37	08310-12055	Nut
38	35954-27A00	Spacer,rh


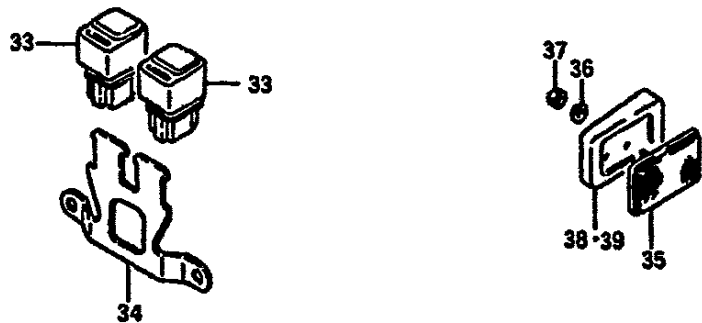


Ref No	Part No	Description
39	35955-27A00	Spacer,lh

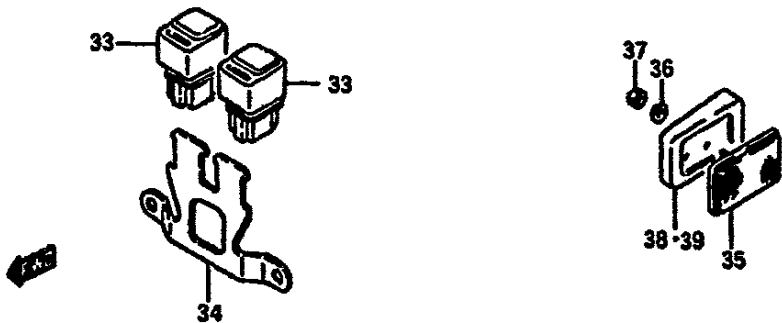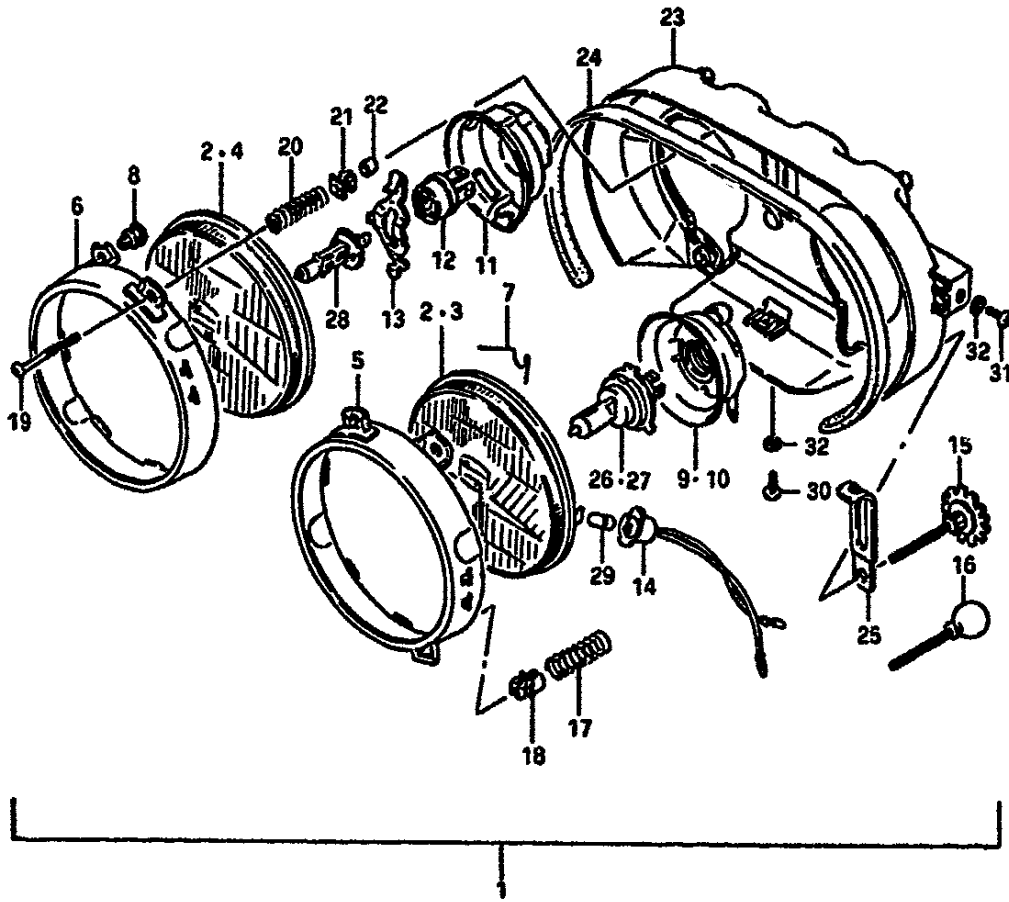

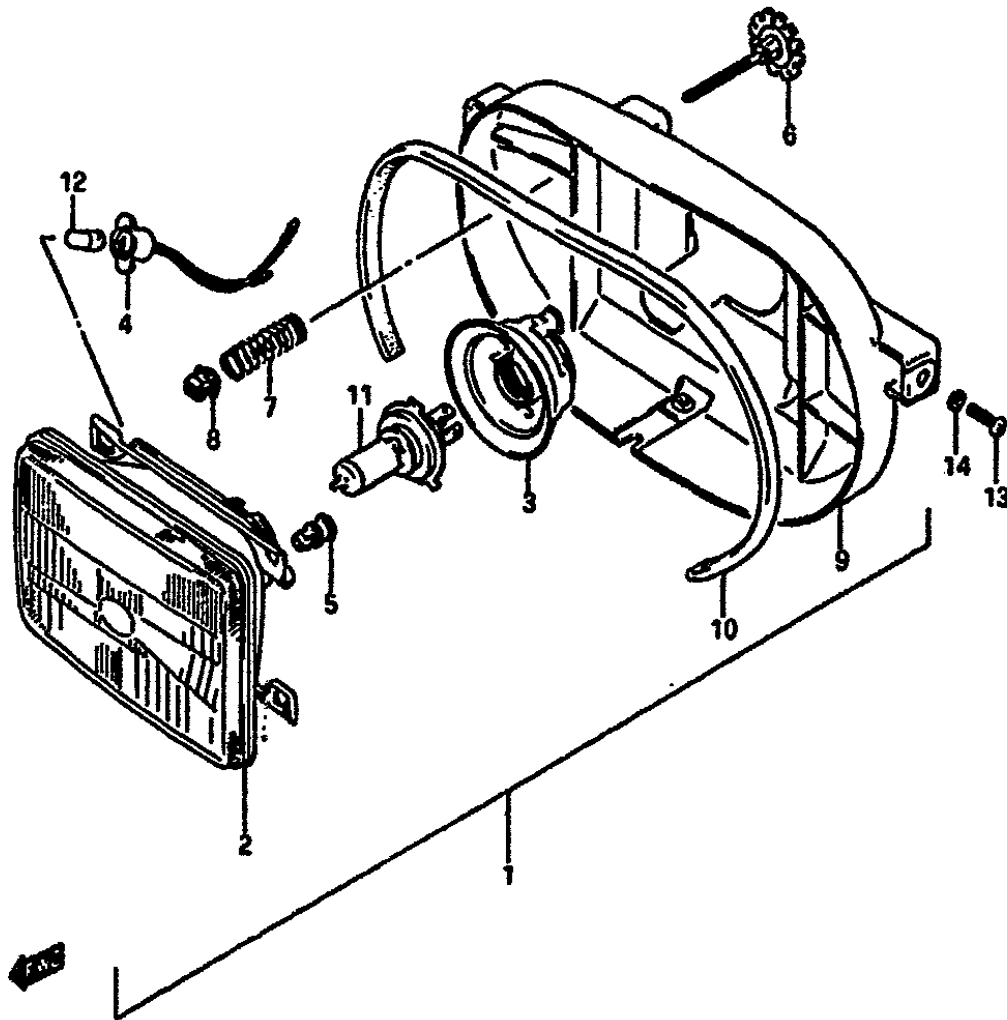


Ref No	Part No	Description
1	35100-27A82-999	Headlamp Assy
2	35121-27A80	• Unit
3	35173-20A01	• Cover,socket
4	36118-27A00	• Socket
5	35162-04A00	• Bearing,spherical
6	35153-27A00	• Screw,adjusting
7	35154-04A00	• Spring
8	35152-27A00	• Nut
9	35240-27A81	• Housing
10	35242-27A00	• Gasket
11	09471-12060	Bulb (12v,60/55w,hr)
12	09471-12063	Bulb (12v,4w)
13	02112-06166	Screw
14	08321-21066	Lock Washer

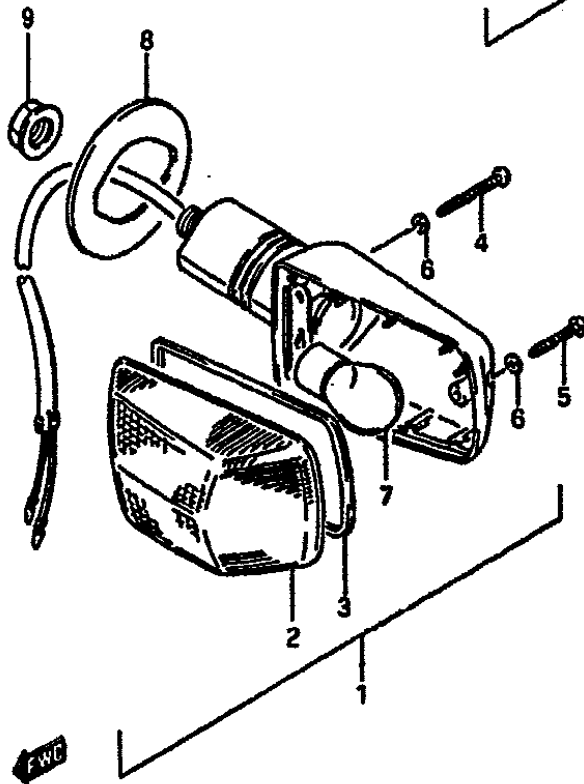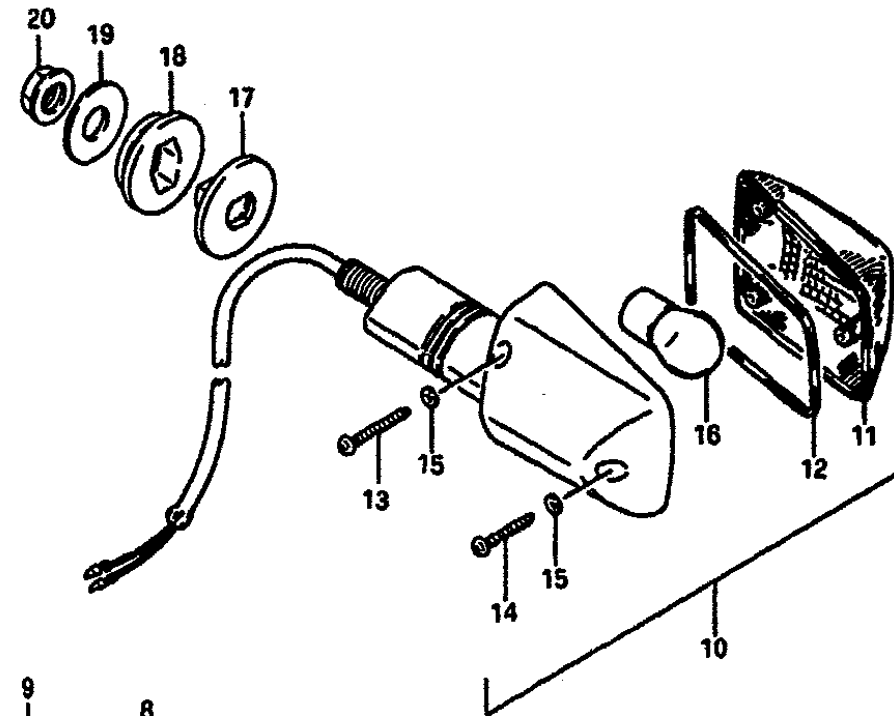


Ref No	Part No	Description
1	35601-27A02	Lamp Assy,front Turn Signal
1	35601-06B00	Lamp Assy,front Turn Signal
2	35612-27A00	. Lens
3	35613-27A00	. Gasket
4	35623-27A00	. Screw (3x30)
5	35725-40511	. Screw (3x20)
6	35627-27A02	. Gasket
7	09471-12006	. Bulb)12v,23w)
8	35674-27A00	Grommet,front
9	08316-26105	Nut
10	35601-27A02	Lamp Assy,rear Turn Signal
10	35603-06B10	Lamp Assy,rear Turn Signal
11	35612-27A00	. Lens
12	35613-27A00	. Gasket
13	35623-27A00	. Screw (3x30)
14	35725-40511	. Screw (3x20)
15	35627-27A02	. Gasket
16	09471-12006	. Bulb (12v,23w)
17	35695-06B00	Spacer
18	35692-06B00	Cushion
19	09160-10078	Washer (10.2x27x1.6)
20	08316-26105	Nut
21	38610-31310	Relay,turn Signal



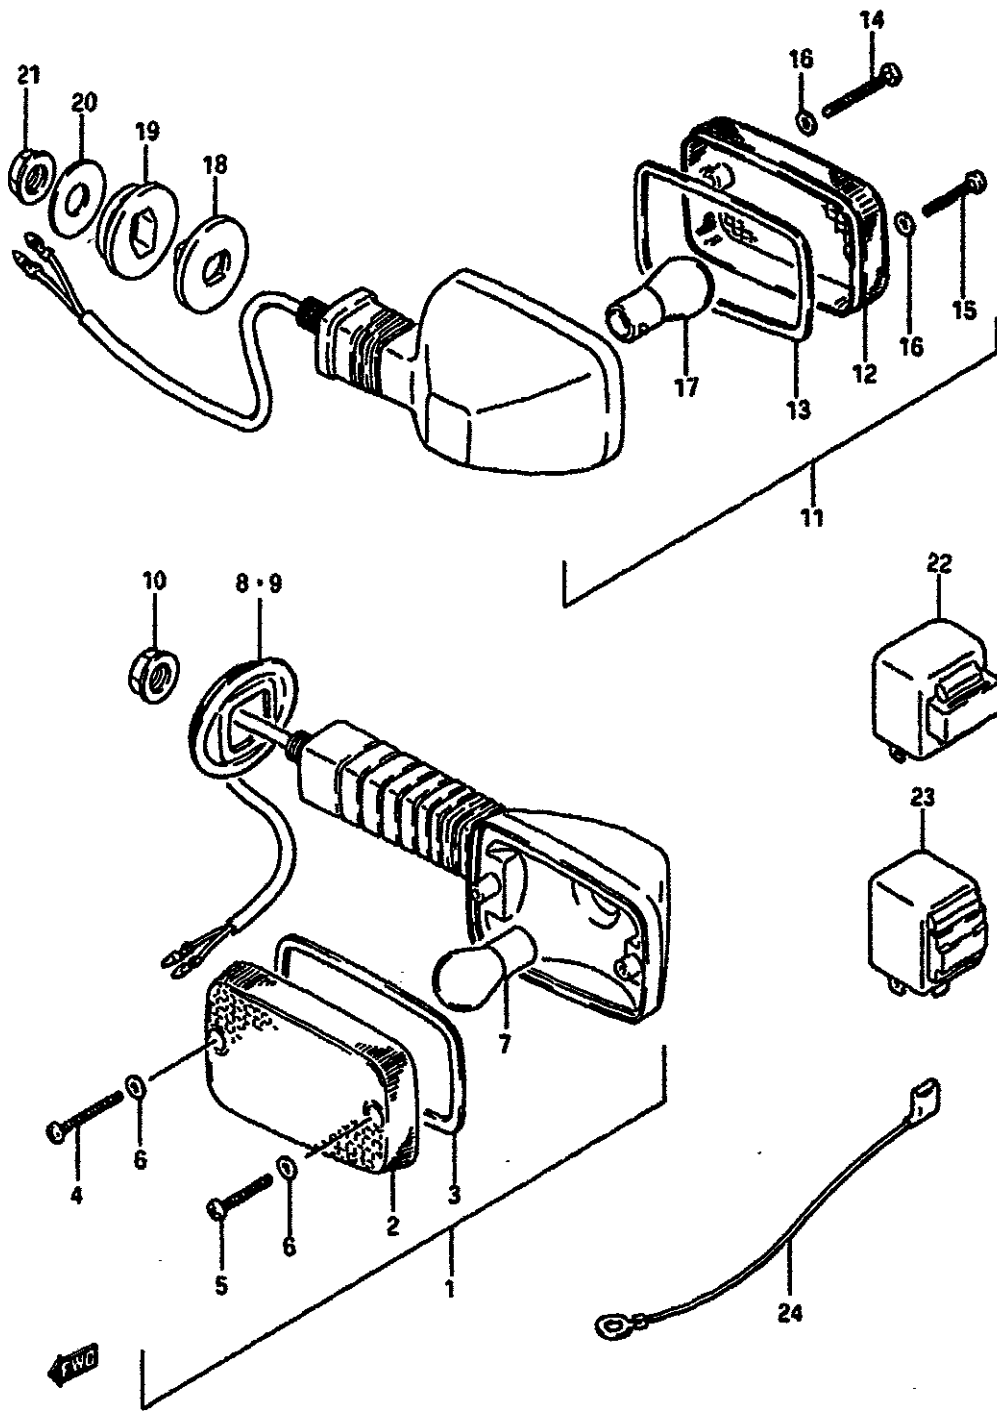



Ref No	Part No	Description
1	35601-06B40	Lamp Assy,front Turn Signal
1	35601-14A53	Lamp Assy,front Turn Signal
1	35601-06B50	Lamp Assy,front Turn Signal
2	35612-02181	. Lens
3	35613-48700	. Gasket
4	35623-02180	. Screw (4x38)
5	03211-04308	. Screw
6	35627-43010	. Gasket
7	09471-12045	. Bulb (12v,21w)
8	35674-27A30	Grommet,front Rh
8	35674-27A20	Grommet,front Rh
9	35684-27A30	Grommet,front Lh
9	35684-27A20	Grommet,front Lh
10	08316-26105	Nut
11	35603-14A52	Lamp Assy,rear Turn Signal
11	35603-06B40	Lamp Assy,rear Turn Signal
11	35603-14A72	Lamp Assy,rear Turn Signal
11	35603-06B50	Lamp Assy,rear Turn Signal
12	35652-02181	. Lens
13	35613-48700	. Gasket
14	35623-02180	. Screw (4x38)
15	03211-04308	. Screw
16	35627-43010	. Gasket
17	09471-12045	. Bulb (12v,21w)
18	35695-06B00	Spacer
19	35692-06B00	Cushion
20	09160-10078	Washer (10.2x27x1.6)
21	08316-26105	Nut
22	38610-31310	Relay,turn Signal
23	38610-45091	Relay,turn Signal
24	36851-35010	Wire,turn Signal Relay Earth

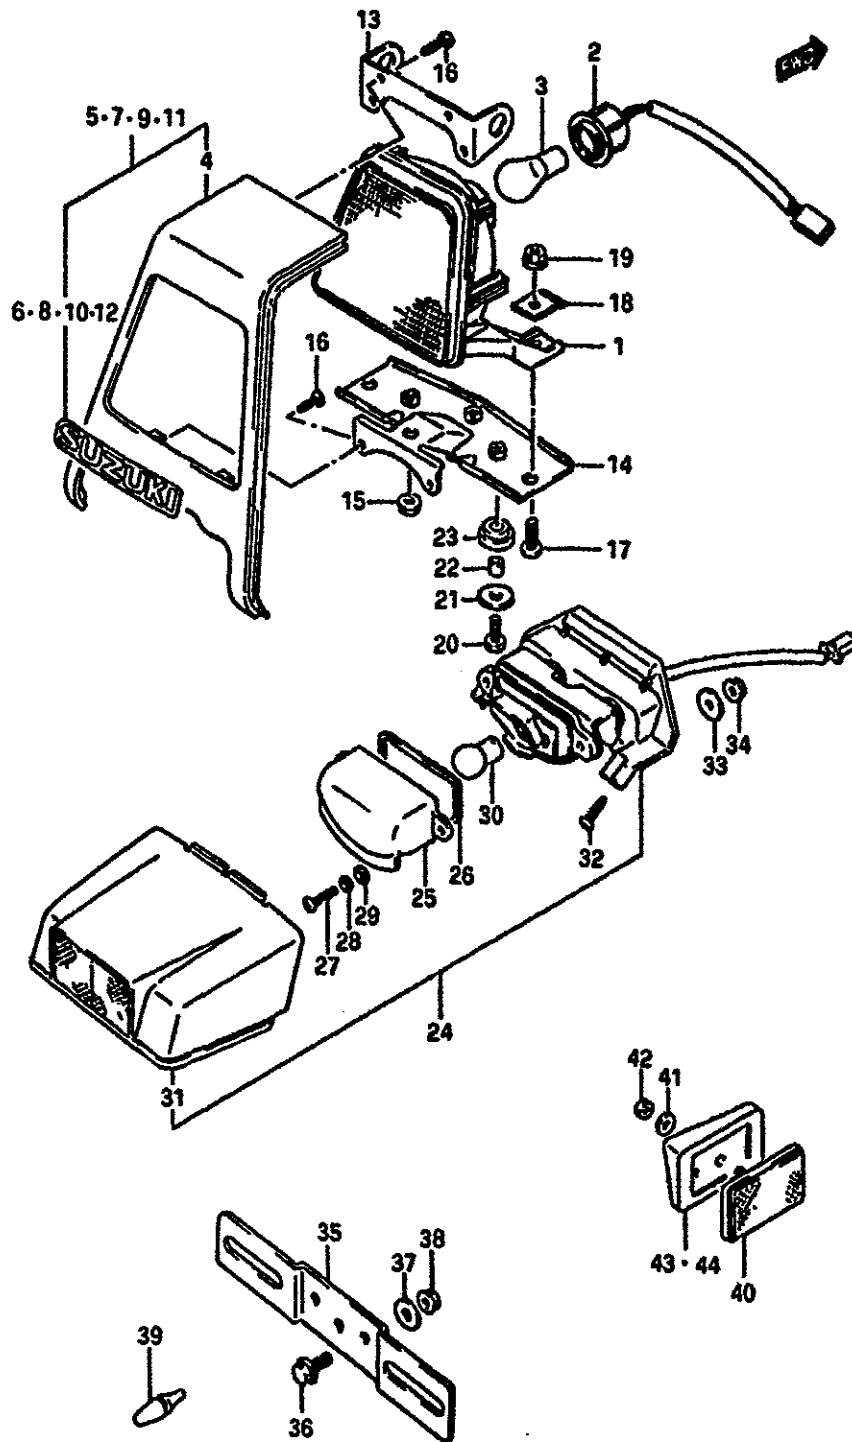


Ref No	Part No	Description
1	35740-27A01	Unit, rear Combination Lamp
1	35740-27A60	Unit, rear Combination Lamp
2	35718-27A00	Socket
3	09471-12084	Bulb (12v,23/8w)
4	35796-27A00-019	Cover, tail Lamp
4	35796-27A00-14L	Cover, tail Lamp
5	35796-27A10-019	Cover, tail Lamp
6	68166-31300-07G	. Emblem
7	35796-27A10-14L	Cover, tail Lamp
8	68166-31300-742	. Emblem
9	35796-27A10-02X	Cover, tail Lamp
10	68166-31300-742	. Emblem
11	35796-27A10-30H	Cover, tail Lamp
12	68166-31300-019	. Emblem
13	35716-27A00	Plate
14	35726-27A00	Bracket
15	08316-26066	Nut
16	03212-04169	Screw
17	02112-06166	Screw
18	35716-40A00	Plate
19	08316-26066	Nut
20	01107-06206	Bolt
21	09160-06020	Washer (6.5x20x1.6)
22	09180-06084	Spacer (6.1x9x7.5)
23	09320-09028	Cushion
24	35910-27A00	Lamp Assy, license
24	35910-06B30	Lamp Assy, license
25	35912-00A10	. Lens
26	35913-04A00	. Gasket
27	02112-04167	. Screw
28	08321-21047	. Lock Washer
29	08322-21047	. Washer
30	09471-12037	. Bulb (12v,8w)
31	35917-20A00	. Cover, license Lamp
31	35917-06B30	. Cover, license Lamp
32	03241-04165	. Screw
33	09160-05011	Washer (5.5x20x1.2)
34	08316-26056	Nut
35	35927-44110	Bracket, license Plate
36	01517-06164	Bolt
37	09160-06020	Washer (6.5x20x1.6)
38	08316-26066	Nut
39	09321-06023	Cushion
40	35950-01A50	Reflex Reflector, rear Side
41	09160-05013	Washer
42	08310-12055	Nut
43	35977-27A00	Spacer, rh
44	35978-27A00	Spacer, lh

Ref No	Part No	Description
1	36610-27A00	Harness,wiring
1	36610-27A30	Harness,wiring
1	36610-27A10	Harness,wiring
2	36618-30610	Boot,harness
3	09403-07315	Clamp
4	09407-11401	Clamp (l:95)
4	09407-14403	Clamp (l:125)
4	09407-18402	Clamp (l:165)
4	09407-25403	Clamp (l:235)
5	36856-27A10	Wire,headlamp Lead
5	36856-06B11	Wire,headlamp Lead
5	36856-27A00	Wire,headlamp Lead
5	36856-06B01	Wire,headlamp Lead
5	36856-27A20	Wire,headlamp Lead
5	36856-27A30	Wire,headlamp Lead
5	36856-06B31	Wire,headlamp Lead
5	36856-27A40	Wire,headlamp Lead
6	36740-27A00	Fuse Box Assy
6	36740-05A01	Fuse Box Assy
7	09481-10101	• . Fuse (10a)
7	09481-10101	• . Fuse (10a)
8	09481-15101	• . Fuse (15a)
9	02112-06128	Screw
10	08322-21067	Washer
11	36750-05A00	Breaker Assy,circuit
12	37110-08A00	Switch Assy,ignition
12	37110-06B00	Switch Assy,ignition
13	37152-47011	• . Bolt
14	08321-21067	• . Lock Washer
15	37145-16700	Key,blank
16	37740-24A00	Switch Assy,stop Lamp
17	09443-06056	Spring
18	43251-27A00	Bracket,stop Lamp Switch
19	01547-06207	Bolt
20	37840-14A01	Switch,side Stand Warning
21	02112-05205	Screw
22	08321-21055	Lock Washer
23	08322-21055	Washer
24	42361-27A00	Bracket,side Stand Switch
25	02112-06128	Screw
26	08321-21067	Lock Washer
27	38500-27A02	Horn Assy
27	38500-27A11	Horn Assy
28	38500-06B00	Horn Assy
28	38500-06B21	Horn Assy
28	38500-06B10	Horn Assy
29	02112-06104	Screw
30	08322-21064	Washer
31	36619-04A00	Clamp,handle Switch Wire
31	36619-06B00	Clamp,handle Switch Wire
32	02112-06125	Screw
33	08321-21064	Lock Washer

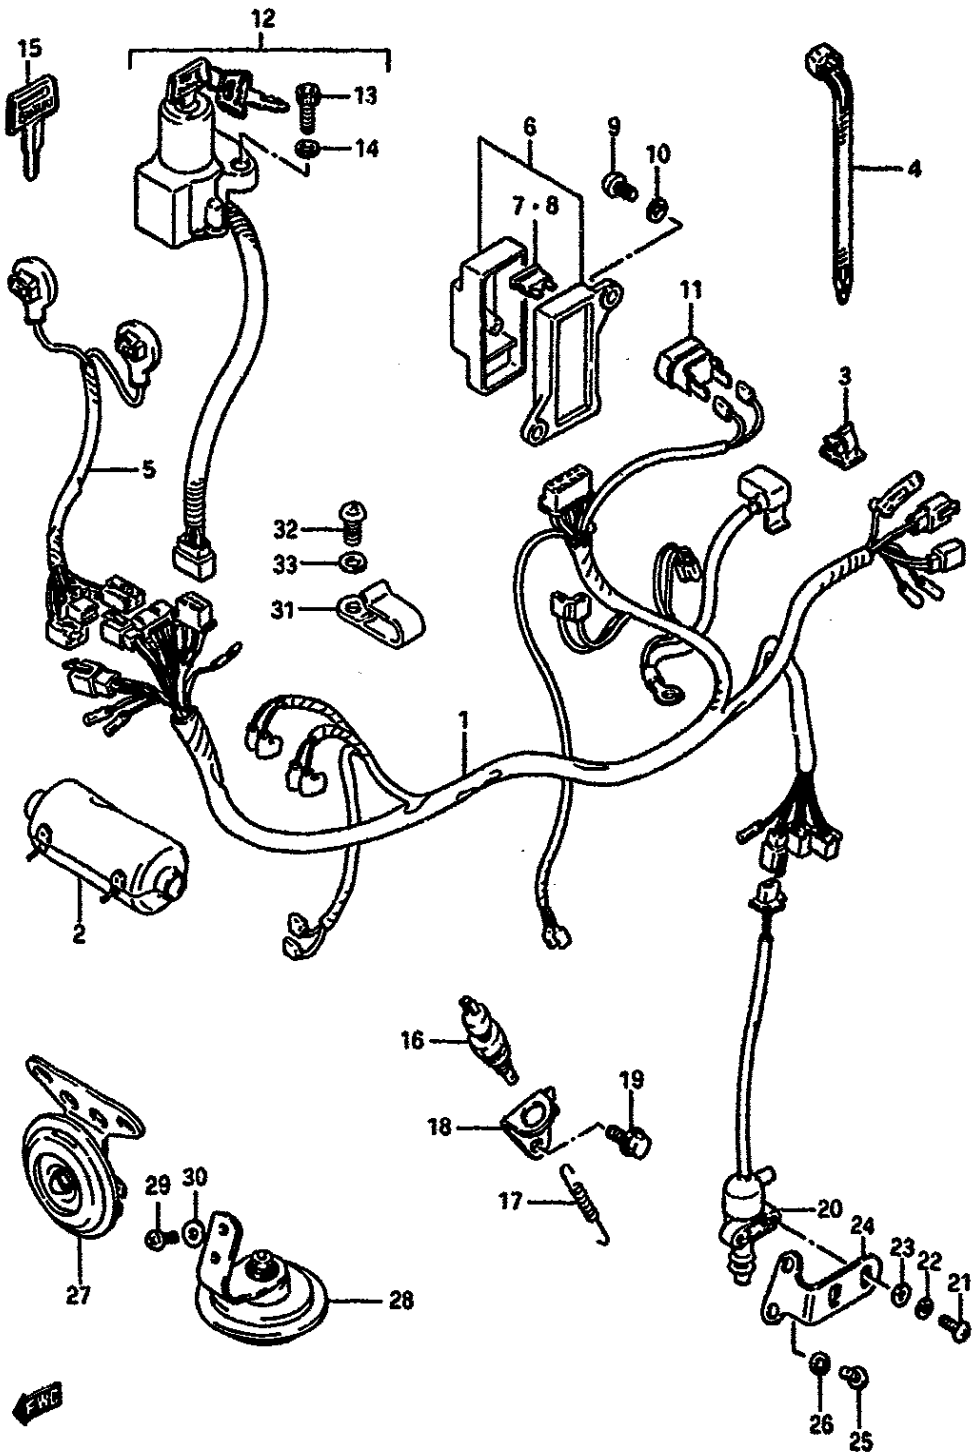


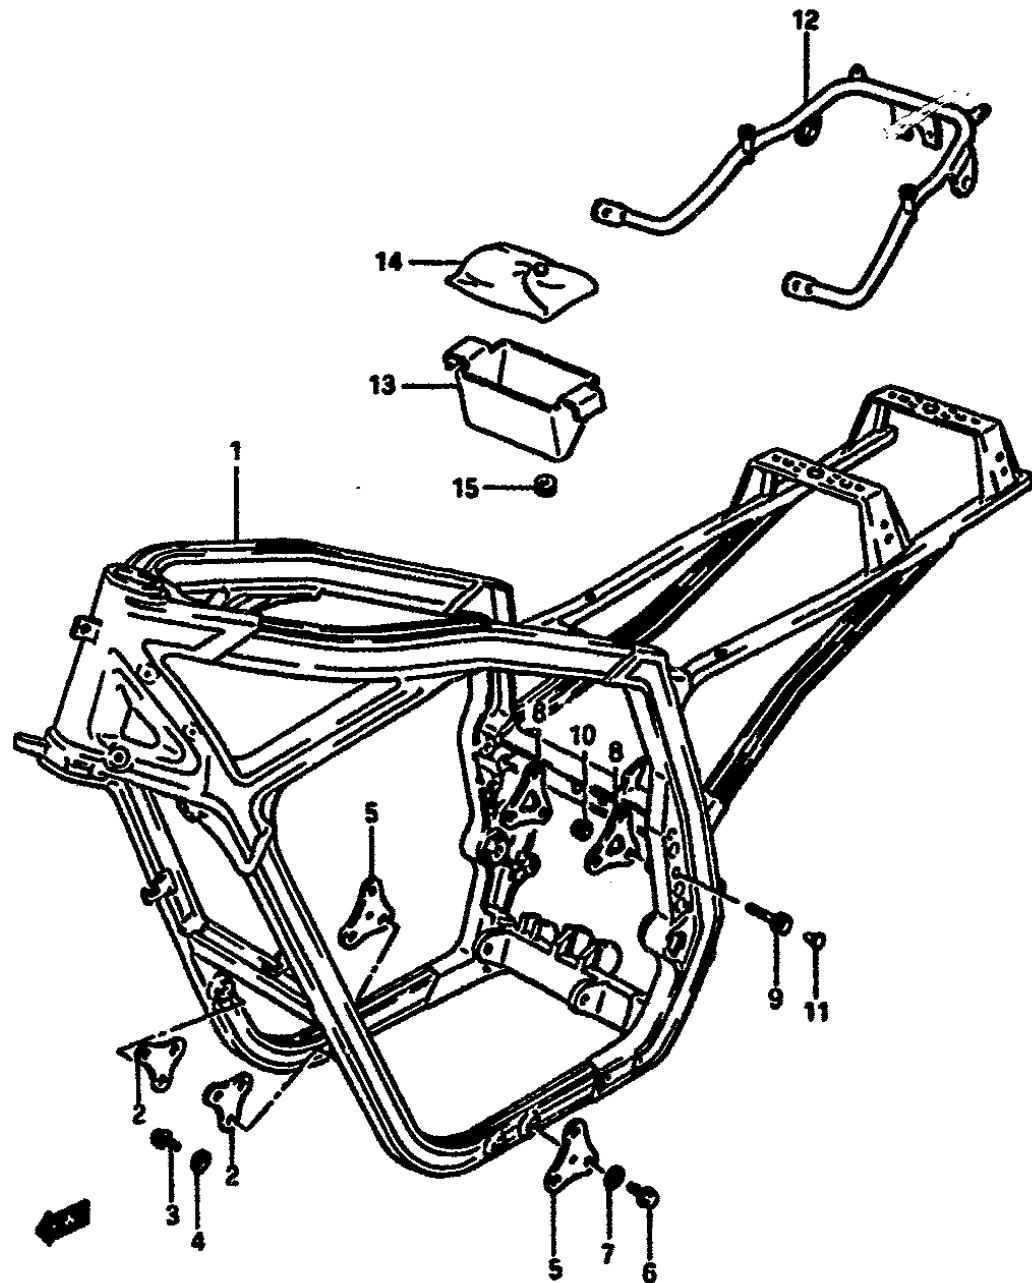


Ref No	Part No	Description
1	41100-27A01	Frame
1	41100-27A02	Frame
1	41100-27A04	Frame
1	41100-27A21	Frame
1	41100-27A22	Frame
1	41100-27A24	Frame
2	41911-27A00	Plate,engine Mount No.1
3	01517-08258	Bolt
4	09160-08010	Washer (8.2x20x1.6)
5	41921-27A00	Plate,engine Mount No.2
6	07110-08408	Bolt
7	09160-08010	Washer (8.2x20x1.6)
8	41931-27A00	Plate,engine Mount No.3
9	07110-08458	Bolt
10	08319-31087	Nut
11	41575-04A00	Cap
12	43980-27A01	Grip,rear
12	43980-06B00	Grip,rear
12	43980-06B01	Grip,rear
13	47431-27A01	Holder,tool
14	09800-00295	Tool Assy
14	09800-00344	Tool Assy
15	09320-05008	Cushion

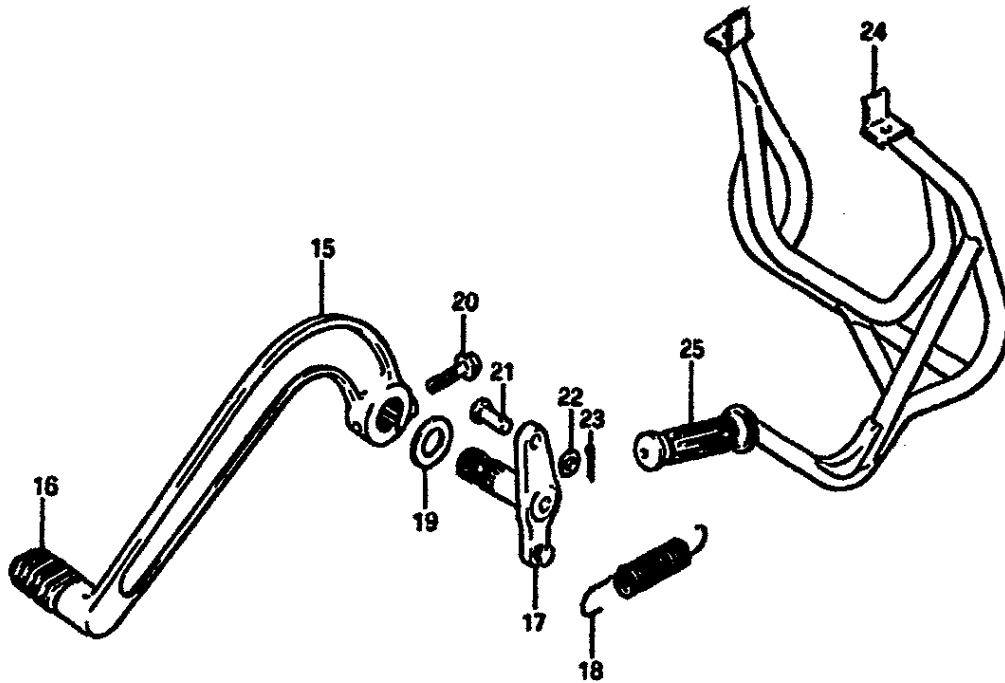


Ref No	Part No	Description
1	42310-27A01-13L	Stand,prop (silver)
2	09443-14040	Spring
3	42310-27A11-13L	Stand,prop (silver)
3	42310-27B10-13L	Stand,prop (silver)
4	09443-17018	Spring
5	42310-27A21-13L	Stand,prop (silver)
5	42310-27B20-13L	Stand,prop (silver)
6	09443-14030	Spring,inner
7	09443-22003	Spring,outer
8	09111-10036	Bolt
9	08310-22107	Nut
10	42330-27A01-13L	Bracket,prop Stand (silver)
10	42330-27B10	Bracket,prop Stand (silver)
11	07110-08358	Bolt
12	41575-04A00	Cap
13	09164-08015	Washer
14	08316-16088	Nut
15	43110-27A01	Pedal,brake
16	43151-04701	Rubber,brake Pedal
17	43120-27A00	Arm,brake Rod
18	09443-14044	Spring
19	43212-04A00	Washer,brake Pedal
20	01547-06208	Bolt
20	09103-06119	Bolt
21	09200-06037	Pin
22	08322-21067	Washer
23	04111-20158	Cotter Pin
24	42100-27A00	Stand Assy,rear
25	57211-49510	• . Grip,stand

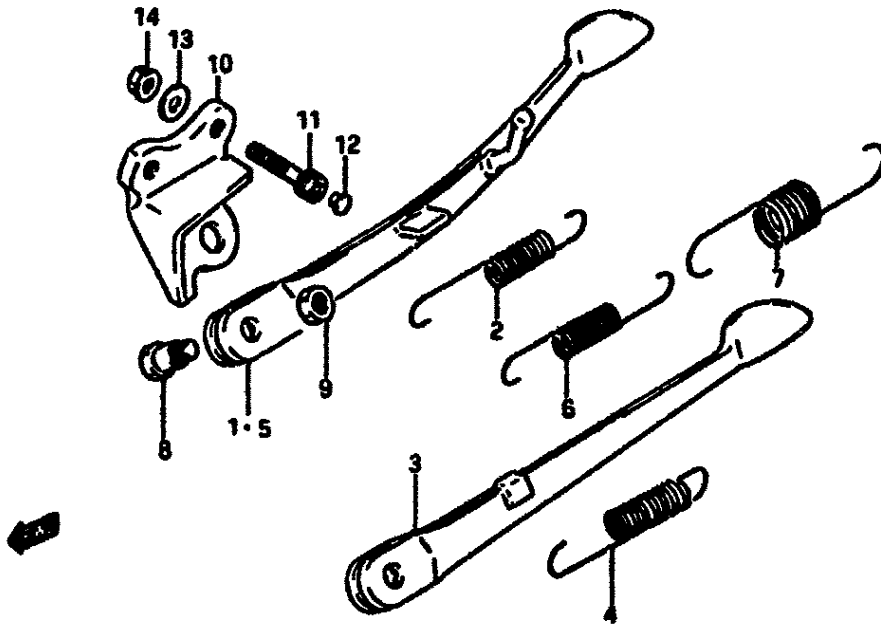


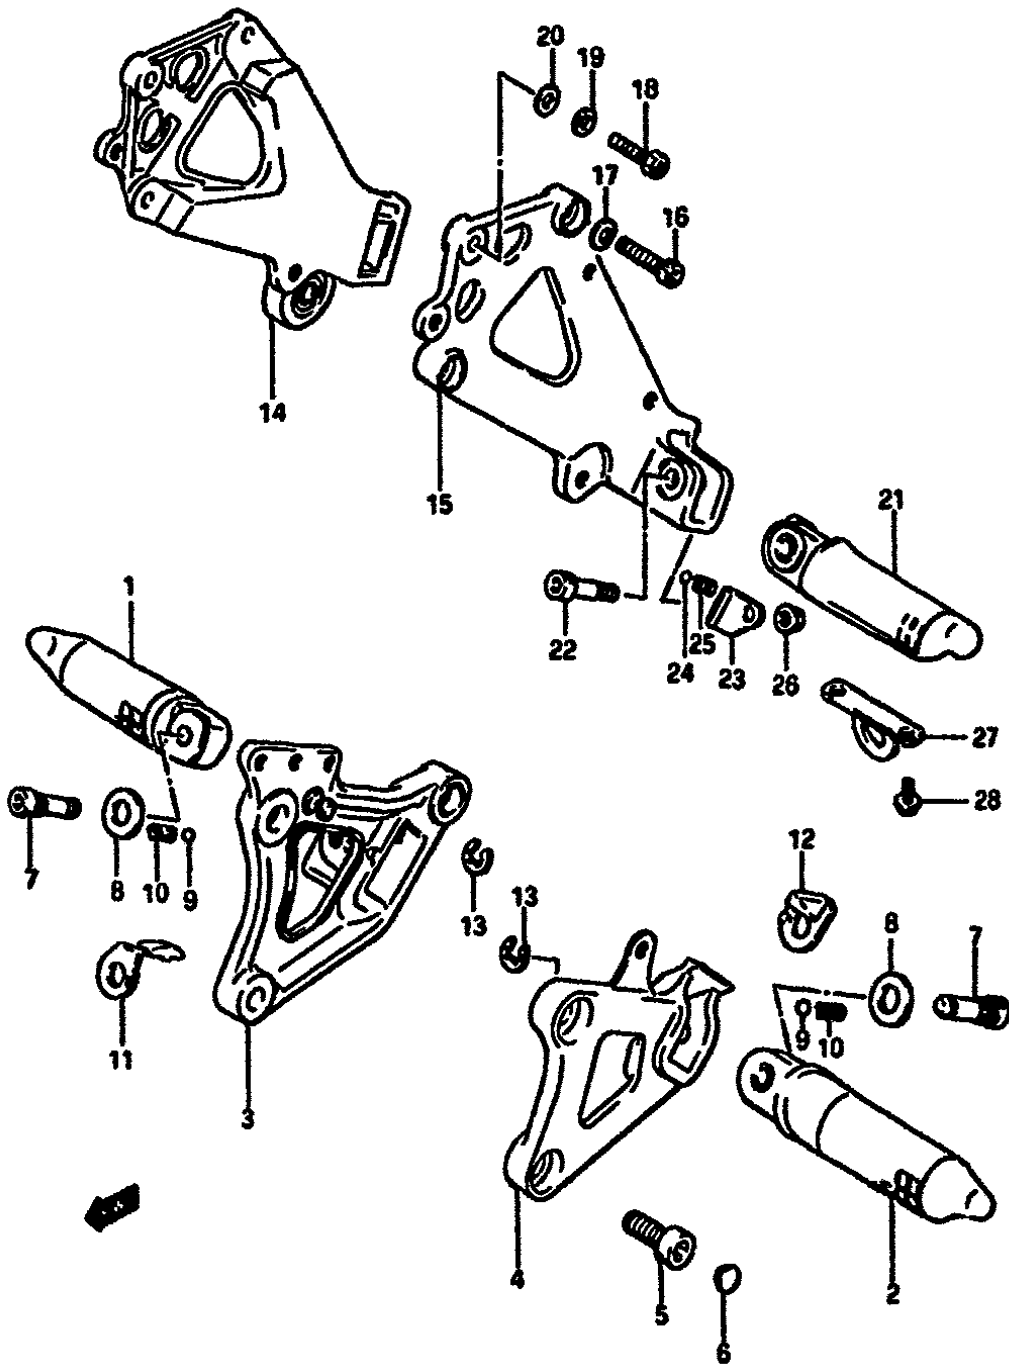

Ref No	Part No	Description
1	43501-27A00	Footrest Assy,front Rh
1	43501-27A02	Footrest Assy,front Rh
2	43502-27A00	Footrest Assy,front Lh
2	43502-27A02	Footrest Assy,front Lh
3	43510-27A00	Bracket,footrest Rh
4	43522-27A00	Bracket,footrest Lh
5	07110-10258	Bolt
6	43575-34500	Cap
7	43529-27A00	Bolt,front Footrest
8	43596-27A00	Plate,spring Stop
9	06112-07004	Ball
10	09440-05003	Spring
11	43580-06B10	Cushion,front Footrest Rh
12	43590-06B10	Cushion,front Footrest Lh
13	08332-11068	E Ring
14	43810-27A00	Bracket,footrest Rh
14	43810-27A01	Bracket,footrest Rh
15	43821-27A00	Bracket,footrest Lh
15	43821-27A01	Bracket,footrest Lh
16	07110-06257	Bolt
17	09164-06009	Washer
18	01107-06307	Bolt
19	08321-21067	Lock Washer
20	08322-21067	Washer
21	43601-27A00	Footrest Assy,pillion Rh
21	43602-27A00	Footrest Assy,pillion Lh
22	43642-04A00	Bolt
23	43635-04A00	Plate,spring Stop Rh
23	43735-04A00	Plate,spring Stop Lh
24	06112-07004	Ball
25	09440-05003	Spring
26	08319-31065	Nut
27	43619-27A00	Hook
28	02152-04128	Screw

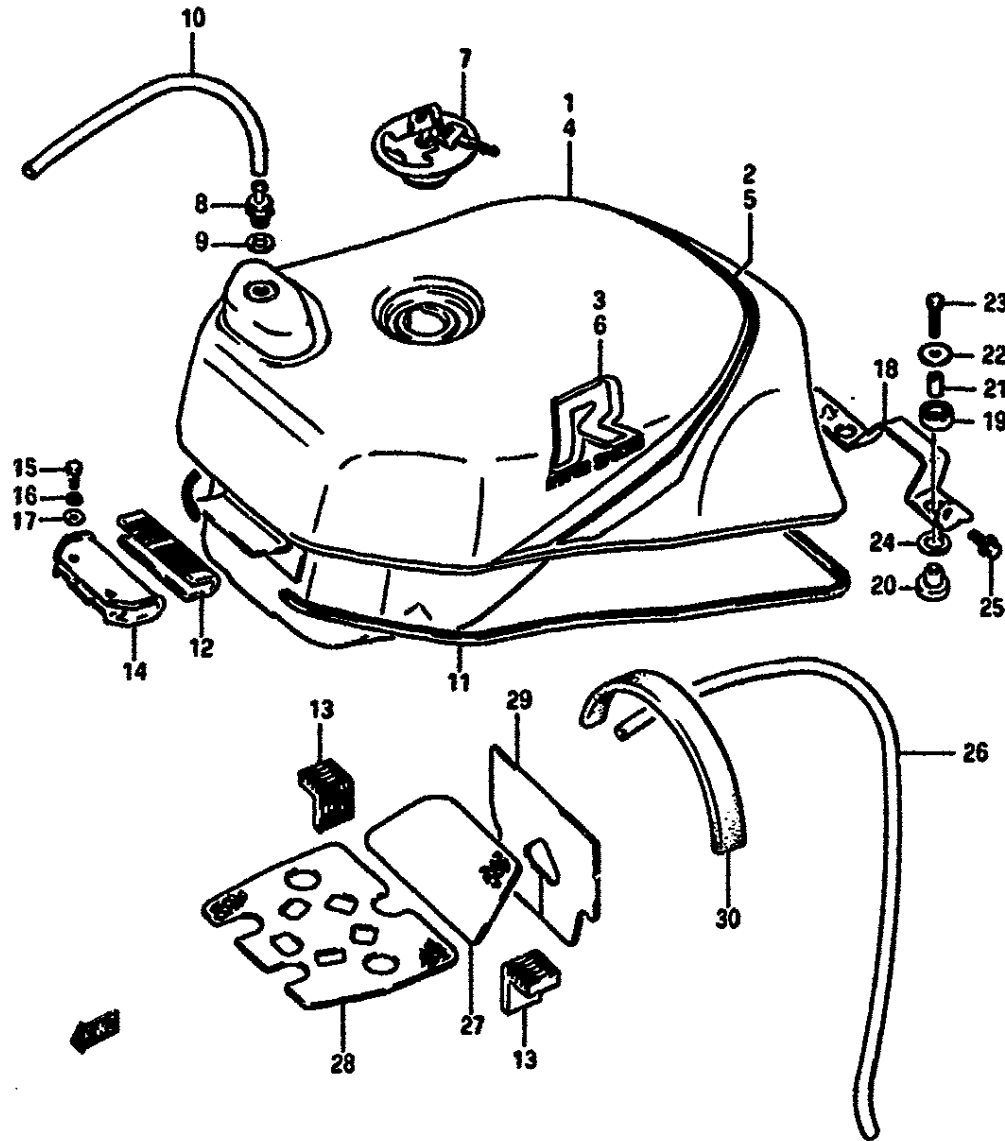


Ref No	Part No	Description
1	44100-27A00-7GF	Tank Assy,fuel
1	44100-27A30-7GF	Tank Assy,fuel
1	44100-27A10-7GF	Tank Assy,fuel
1	44100-27A40-7GF	Tank Assy,fuel
1	44100-27A00-7JK	Tank Assy,fuel
1	44100-27A30-7JK	Tank Assy,fuel
1	44100-27A10-7JK	Tank Assy,fuel
1	44100-27A40-7JK	Tank Assy,fuel
2	68110-27A10-7UC	. . Tape Set,fuel Tank
2	68110-27A10-7VE	. . Tape Set,fuel Tank
3	68111-27A00-7TW	. . Emblem
3	68111-27A00-7JS	. . Emblem
4	44100-27A90-7GF	Tank Assy,fuel
4	44100-27A90-7JK	Tank Assy,fuel
5	68110-28A01-7UC	. . Tape Set,fuel Tank
5	68110-28A01-7VE	. . Tape Set,fuel Tank
6	68111-27A00-7TW	. . Emblem
6	68111-27A00-7JS	. . Emblem
7	44200-20A00-KEY	Cap Assy,fuel Tank
8	44240-40A00	Plug,fuel Tank Breather
9	09168-12012	Gasket
10	09343-05165	Hose,breather (l:890-720)
11	68241-27A00	Holding,fuel Tank
12	44511-27A00	Cushion,fuel Tank Front
13	44545-27A00	Cushion,fuel Tank Side
13	44545-27A01	Cushion,fuel Tank Side
14	44521-27A00	Bracket,fuel Tank Front
15	01107-06205	Bolt,front
16	08321-21064	Lock Washer
17	08322-21064	Washer
18	45211-27A00	Bracket,rear
19	09320-14013	Cushion,rear
19	09320-14017	Cushion,rear
20	09320-10020	Cushion,rear
20	09320-10038	Cushion,rear
21	09180-06072	Spacer
22	09160-06072	Washer (6.5x24x1.6)
23	01107-06356	Bolt,rear Lower
24	09160-12004	Washer,rear Lower
25	09138-06038	Bolt,rear Upper
26	09343-05165	Hose,drain (l:890-790)
27	44191-27A00	Heat Shield,lower Rear
28	44192-27A00	Heat Shield,lower Front
29	44194-27A00	Heat Shield, Fuel Tank Lower
30	44193-27A02	Heat Shield,air Cleaner

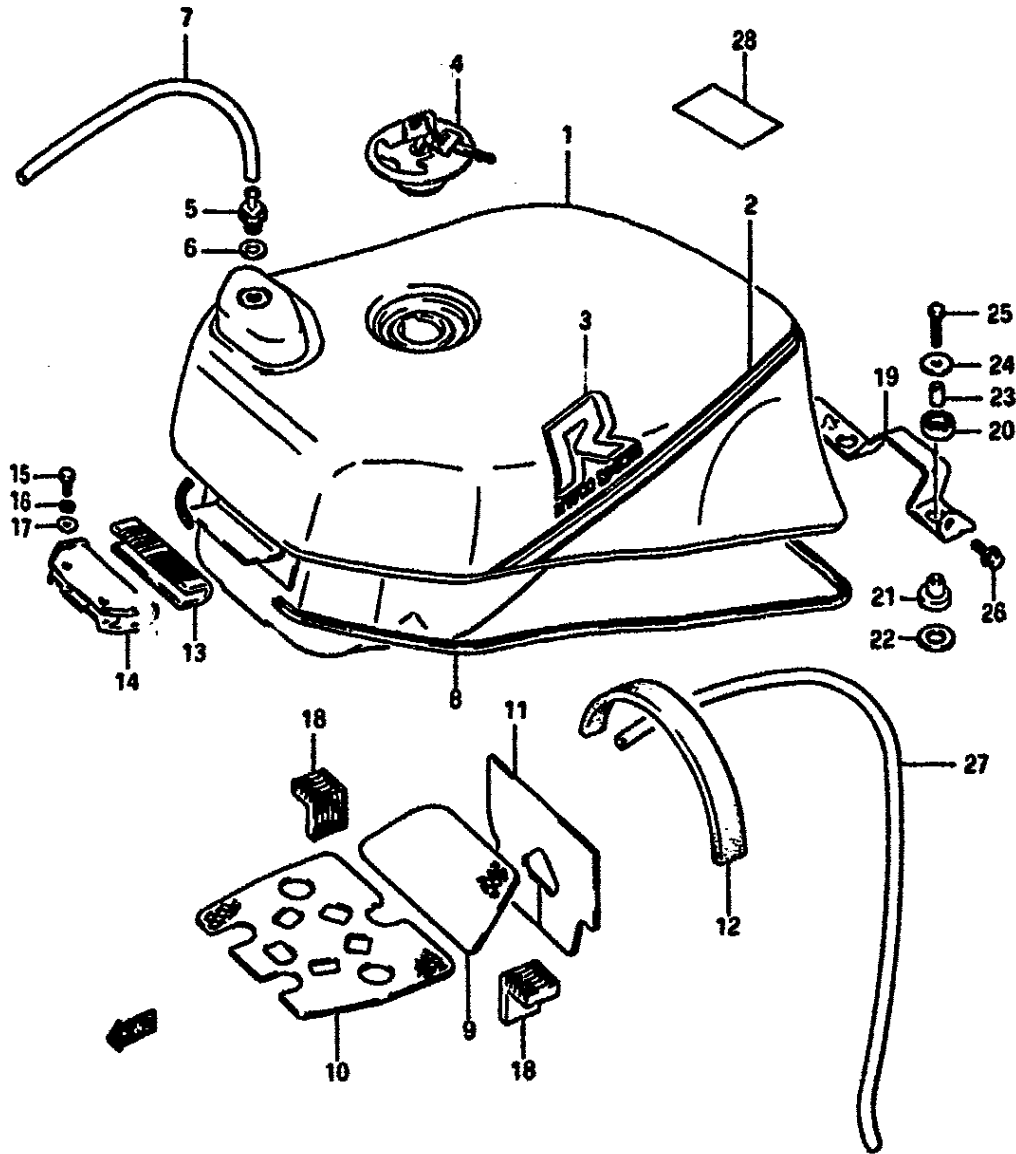


Ref No	Part No	Description
1	44100-28A50-7JK	Tank Assy,fuel
1	44100-28A60-7JK	Tank Assy,fuel
1	44100-28A50-9HE	Tank Assy,fuel
1	44100-28A60-9HE	Tank Assy,fuel
2	68110-27A30-9JH	. . Tape Set,fuel Tank
2	68110-27A30-9JJ	. . Tape Set,fuel Tank
3	68111-27A00-7TS	. . Emblem
3	68111-27A00-7TW	. . Emblem
4	44200-20A00-KEY	Cap Assy,fuel Tank
5	44240-06B10	Plug,fuel Tank Breather
6	09168-12012	Gasket
7	09343-05129	Hose,breather
8	68241-27A00	Holding,fuel Tank
9	44191-27A00	Heat Shield,lower Rear
10	44192-27A00	Heat Shield,lower Front
11	44194-27A00	Heat Shield,lower
12	44193-27A02	Heat Shield,air Cleaner
13	44511-27A10	Cushion,front
14	44521-27A00	Bracket,front
15	01107-06205	Bolt,front
16	08321-21064	Lock Washer
17	08322-21064	Washer
18	44545-27A10	Cushion,side
19	45211-27A00	Bracket,rear
20	09320-14017	Cushion,rear Upper
21	09320-10038	Cushion,rear Lower
22	09160-12004	Washer
23	09180-06072	Spacer
24	09160-06072	Washer
25	01107-06356	Bolt
26	09138-06038	Bolt,rear Side
27	09343-05165	Hose,water Drain
28	86932-73060	Label,fuel Caution


Ref No	Part No	Description
--------	---------	-------------

- | | | |
|---|-------------|----------------|
| 1 | 44300-27A00 | Cock Assy,fuel |
| 1 | 44300-28A02 | Cock Assy,fuel |
| 2 | 09128-06006 | Bolt |
| 3 | 09168-06010 | Gasket |
| 4 | 09343-07152 | Hose |
| 5 | 09440-13020 | Spring |
| 6 | 09401-10402 | Clip |

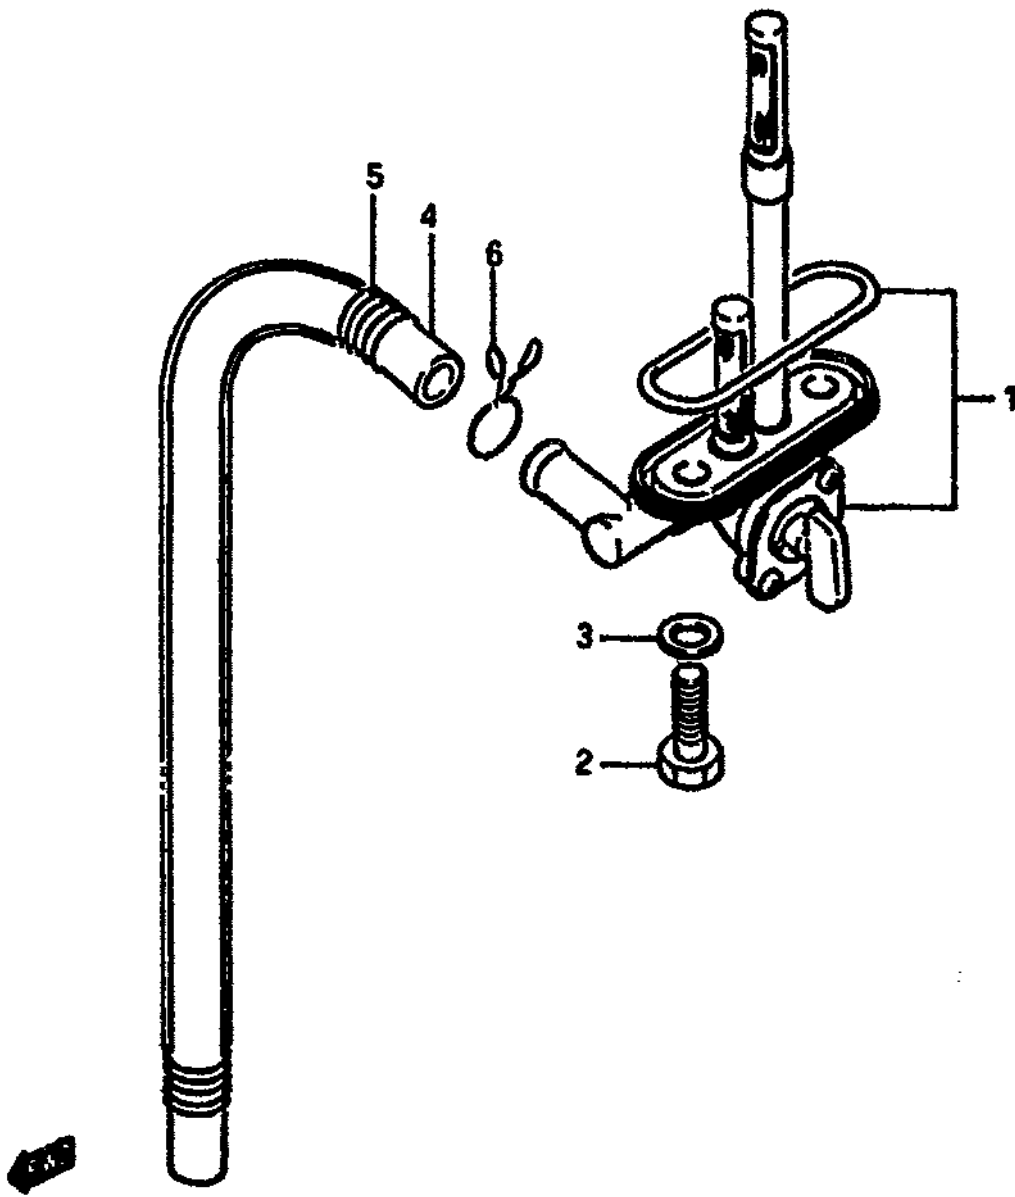


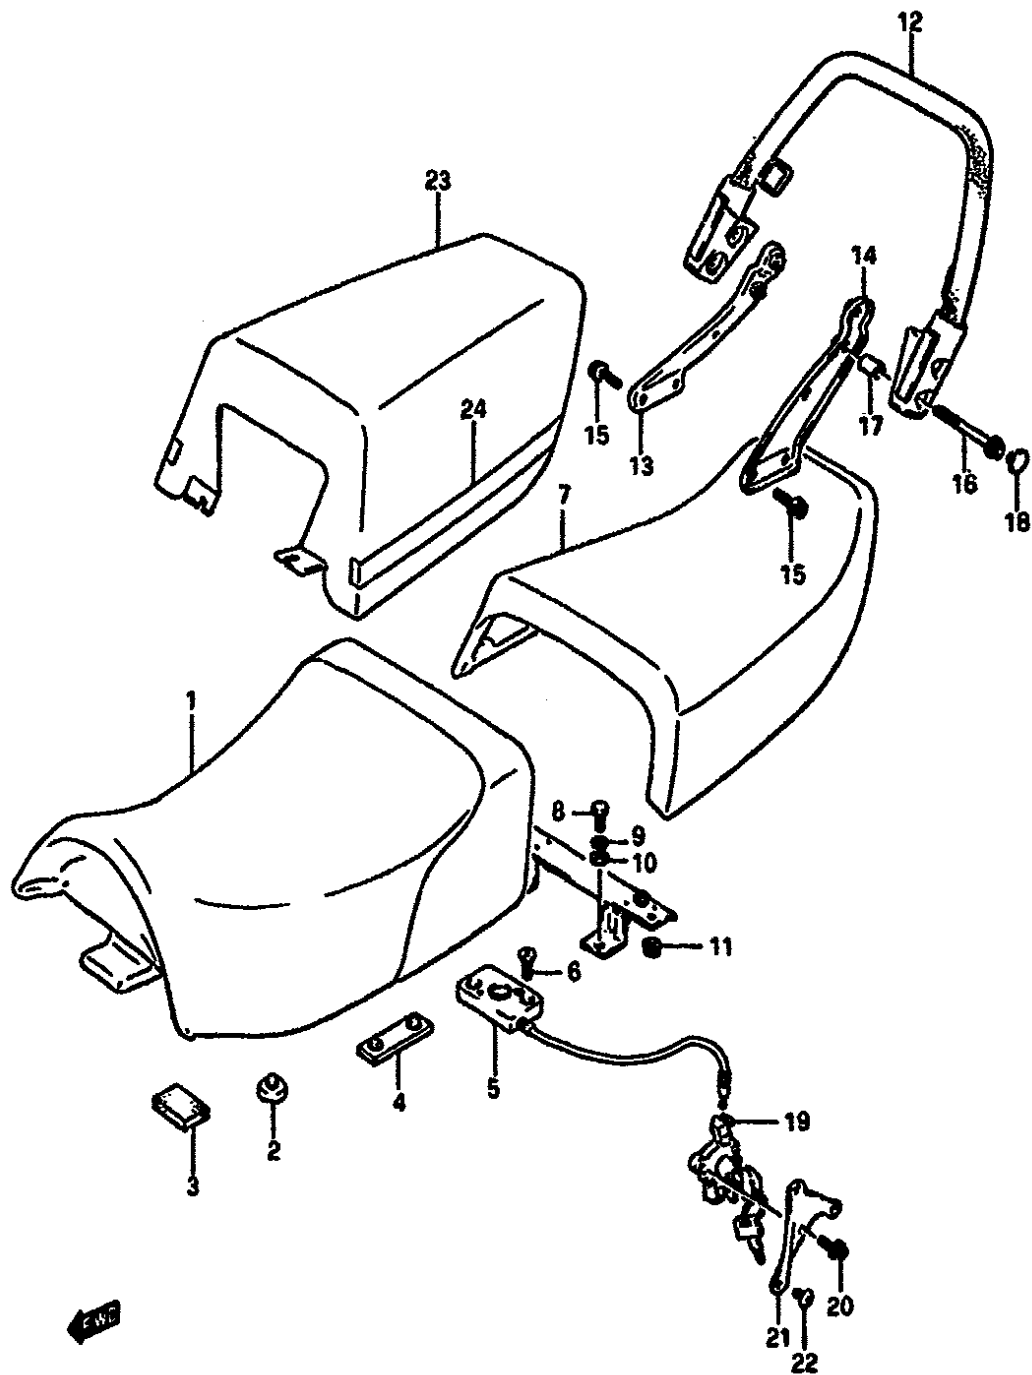


Ref No	Part No	Description
1	45100-27A00-54G	Seat Assy (blue)
1	45100-27A00-40K	Seat Assy (red)
2	09321-10002	• . Cushion
3	45255-15510	• . Cushion,battery Stopper
4	09321-08009	• . Cushion
5	45220-27A01	Barcket,seat Support Rear
6	02122-06255	Screw
7	45300-27A10-54G	Seat Assy,pillion (blue)
7	45300-27A10-40K	Seat Assy,pillion (red)
7	45300-27A20-54G	Seat Assy,pillion (blue)
7	45300-27A20-4DK	Seat Assy,pillion (red)
8	01107-06166	Bolt
9	08321-21066	Lock Washer
10	09160-06019	Washer (6.5x16x1.2)
11	08316-26066	Nut
12	46210-27A00	Handle,pillion Rider
12	46210-27A01	Handle,pillion Rider
13	46240-27A00	Plate,pillion Handle Rh
14	46250-27A00	Plate,pillion Handle Lh
15	07120-06168	Bolt,plate
16	09106-08061	Bolt,handle
17	09180-08125	Spacer
18	09250-06008	Cap
19	95700-27A00-KEY	Lock Assy,seat/helmet
20	07120-06205	Bolt
21	45285-27A00	Bracket,seat Lock
22	02142-06125	Screw
23	45550-27820-14L	Box Set,seat Tail (white)
23	45550-27820-019	Box Set,seat Tail (black)
24	68650-27A10-08L	• . Tape Set,tail Box (blue)
24	68650-27A10-064	• . Tape Set,tail Box (white)

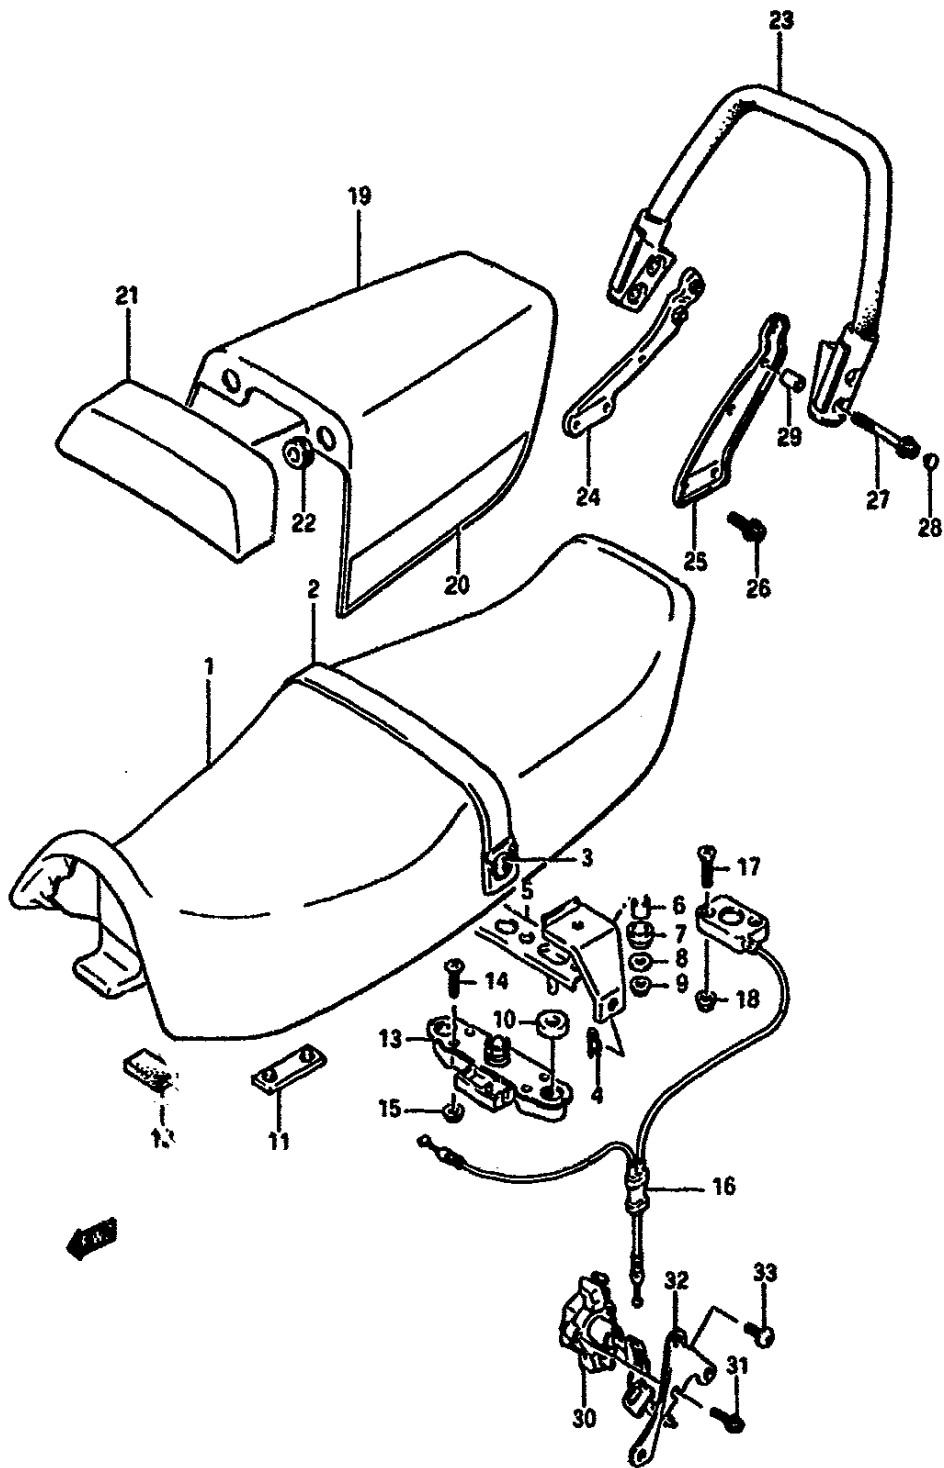

Ref No	Part No	Description
1	45100-06B10-58D	Seat Assy (blue)
1	45100-06B10-58E	Seat Assy (red)
1	45100-06B00-58D	Seat Assy,(blue)
1	45100-06B00-58E	Seat Assy (red)
2	45180-06B00-58D	• . Band,seat Grip (blue)
2	45180-06B00-58E	• . Band,seat Grip (red)
3	45186-06B00	• . Bolt
4	09385-06001	• . Clip
5	45210-06B00	• . Striker,seat Lock
6	45215-06B00	• . Spacer
7	45216-06B00	• . Cushion
8	09160-06020	• . Washer
9	08316-16066	• . Nut
10	45213-31300	• . Cushion,boss
11	09321-08009	• . Cushion
12	45255-27A00	• . Cushion
13	45220-13601	Bracket,seat Support Rear
14	02112-06305	Screw
15	08316-26065	Nut
16	45220-06B00	Bracket,seat Support Rear
17	02122-06255	Screw
18	08316-26065	Nut
19	45550-06840-14L	Box,seat Tail (white)
19	45550-06840-019	Box,seat Tail (black)
20	68650-27A20-08L	• . Tape Set,tail Box (blue)
20	68650-27A20-064	• . Tape Set,tail Box (white)
21	46220-27A00-58D	• . Backrest,seat (blue)
21	46220-27A00-58E	• . Backrest,seat (red)
22	09320-12031	• . Cushion
23	46210-27A01	Handle,pillion Rider
24	46240-27A00	Plate,rh
25	46250-27A00	Plate,lh
26	07120-06168	Bolt,plate
27	09106-08061	Bolt,handle
28	09250-06008	Cap
29	09180-08125	Spacer
30	95700-27A00-KEY	Lock Assy,seat/helmet
31	07120-06205	Bolt
32	45285-27A00	Bracket,seat Lock
33	02142-06125	Screw

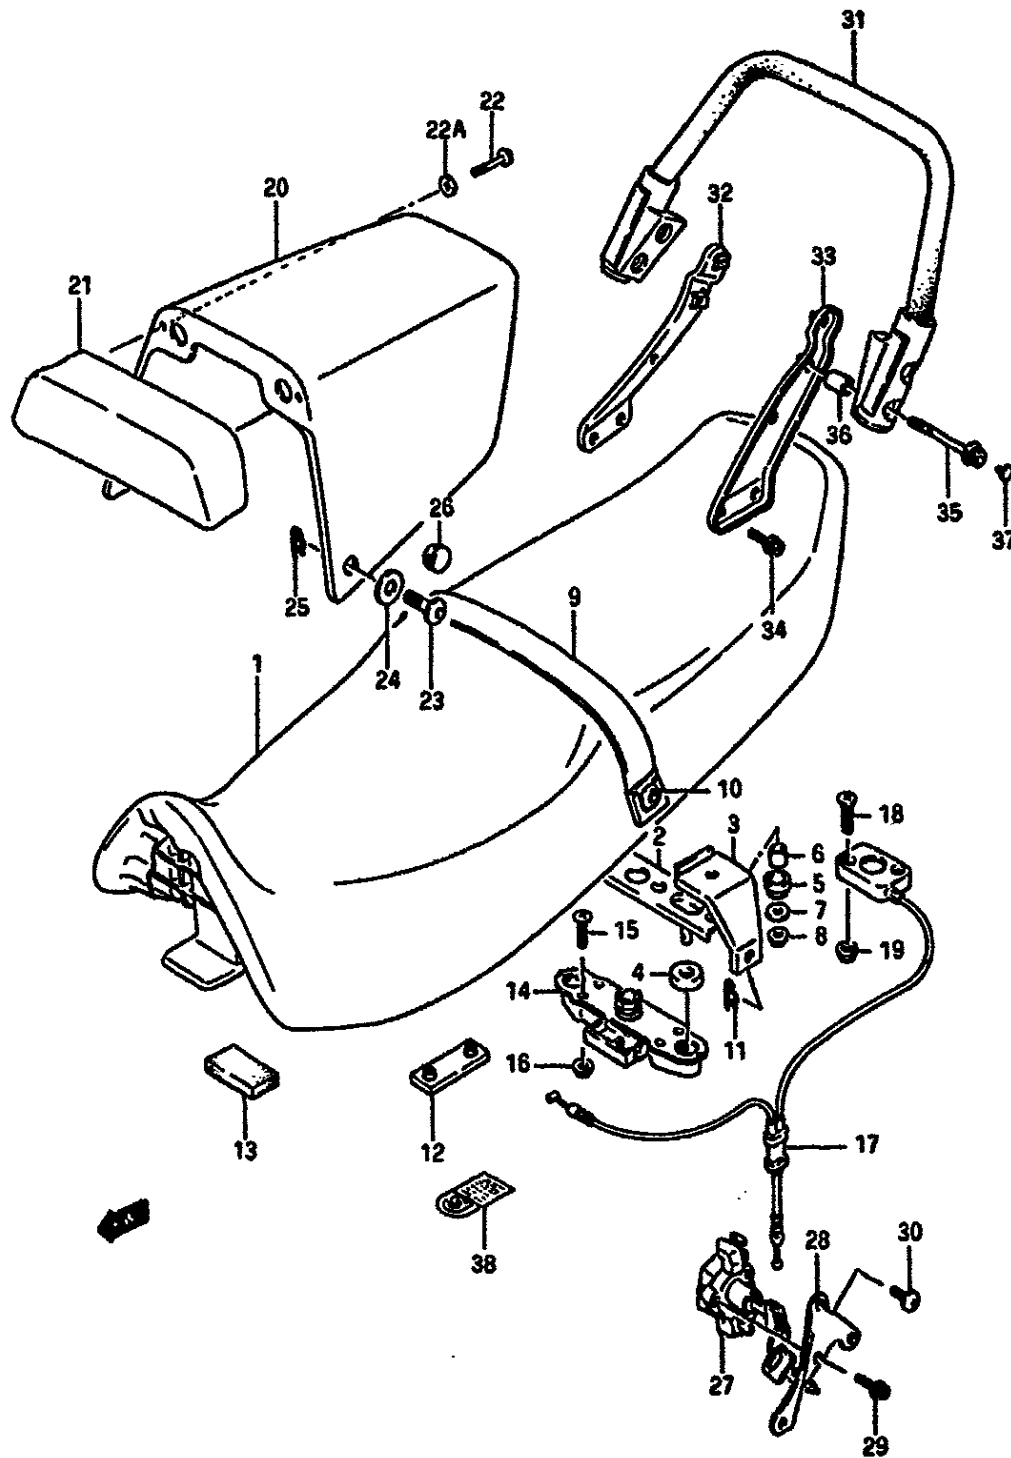



Ref No	Part No	Description
1	45100-06B10-58R	Seat Assy (black)
1	45100-06B10-49T	Seat Assy (blue)
2	45210-06B00	. Striker,seat Lock
3	45230-06B00	. Bracket,seat Grip Band
4	45213-31300	. Cushion,boss
5	45215-06B00	. Cushion,bracket
6	45216-06B00	. Spacer,bracket
7	09160-06020	. Washer
8	08316-16066	. Nut
12	09321-08009	. Cusion
13	45255-27A00	. Cushion,battery Stopper
14	45220-13601	Bracket,seat Support Center
15	02112-06305	Screw
16	08316-26065	Nut
17	45220-06B00	Bracket,seat Support Rear
18	02112-06255	Screw
19	08316-26065	Nut
20	45550-06862-019	Box Set,seat Tail (black)
20	45550-06862-30H	Box Set,seat Tail (white)
21	46220-27A01-58R	. Backrest,seat (black)
21	46220-27A01-49T	. Backrest,seat (blue)
22	02142-06205	. Screw
22a	09160-06039	. Washer
23	45186-06B00	. Bolt,seat Rail Box
24	09161-10010	. Washer
25	09385-06001	. Clip
26	45581-27A00	. Cap,seat Tail Cover
27	95700-27A00-KEY	Lock Assy,seat/helmet
28	45285-27A00	Bracket,seat Lock
29	02142-06125	Screw
30	07120-06205	Bolt
31	46210-27A01	Handle,pillion Rider
32	46240-27A00	Plate,pillion Handle Rh
33	46250-27A00	Plate,pillion Handle Lh
34	07120-06168	Bolt,plate
35	09106-08061	Bolt,handle
36	09180-08125	Spacer
37	09250-06008	Cap
38	11967-82000	Label,asbestos Warning

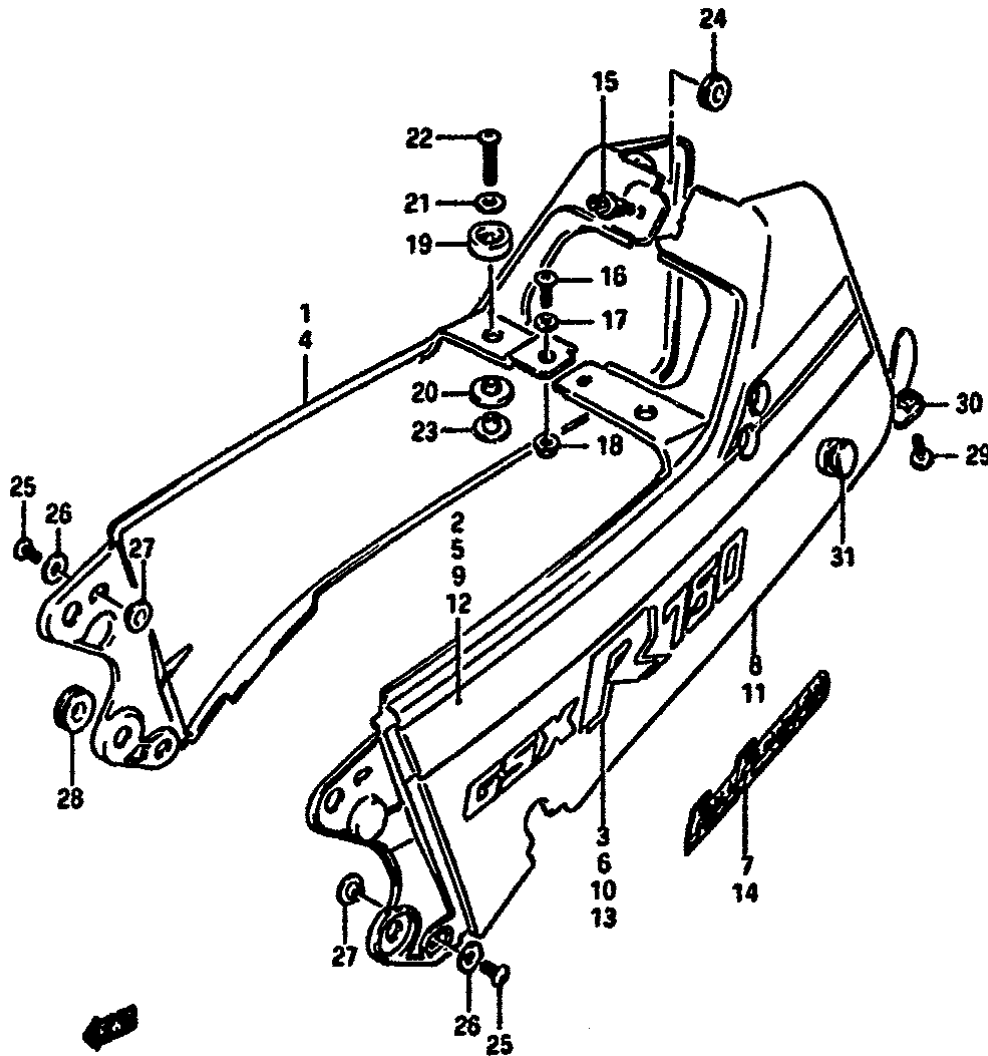


Ref No	Part No	Description
1	45510-27A10-7TG	Cover,seat Tail Rh
1	45510-27A20-7TG	Cover,seat Tail Rh
1	45510-27A10-7JK	Cover,seat Tail Rh
1	45510-27A20-7JK	Cover,seat Tail Rh
2	68167-27A10-81F	. . Tape Set,rh
2	68167-27A10-65G	. . Tape Set,rh
3	68166-27A00-7VS	. . Emblem
3	68166-27A00-7JL	. . Emblem
4	45510-27A70-7TG	Cover,seat Tail Rh
4	45510-27A50-7TG	Cover,seat Tail Rh
4	45510-27A70-7JK	Cover,seat Tail Rh
4	45510-27A50-7JK	Cover,seat Tail Rh
5	68167-27A11-81F	. . Tape Set,tail Cover Rh
5	68167-27A11-65G	. . Tape Set,tail Cover Rh
6	68166-27A00-7VS	. . Emblem
6	68166-27A00-7JL	. . Emblem
7	68235-40A10-69L	. . Emblem,full Floater
7	68235-40A10-66P	. . Emblem,full Floater
8	45590-27A10-7TG	Cover,seat Tail Lh
8	45590-27A20-7TG	Cover,seat Tail Lh
8	45590-27A10-7JK	Cover,seat Tail Lh
8	45590-27A20-7JK	Cover,seat Tail Lh
9	68168-27A10-81F	. . Tape Set,lh
9	68168-27A10-65G	. . Tape Set,lh
10	68166-27A00-7VS	. . Emblem
10	68166-27A00-7JL	. . Emblem
11	45590-27A70-7TG	Cover,seat Tail Lh
11	45590-27A50-7TG	Cover,seat Tail Lh
11	45590-27A70-7JK	Cover,seat Tail Lh
11	45590-27A50-7JK	Cover,seat Tail Lh
12	68168-27A11-81F	. . Tape Set,tail Cover Lh
12	68168-27A11-65G	. . Tape Set,tail Cover Lh
13	68166-27A00-7VS	. . Emblem
13	68166-27A00-7JL	. . Emblem
14	68235-40A10-69L	. . Emblem,full Floater
14	68235-40A10-66P	. . Emblem,full Floater
15	09409-06307	Clip,rear
16	02142-05167	Screw,front
17	08322-21057	Washer
18	08319-21058	Nut
19	45149-04A00	Cushion,tail Cover Upper
20	45326-04A00	Cushion,tail Cover Upper
21	09160-06069	Washer (6.5x16x1.2)
22	02142-06305	Screw
23	45537-04A00	Spacer,seat Tail Cover
24	09320-08013	Cushion
25	02142-06166	Screw
26	09160-06057	Washer,outer
27	09169-06031	Washer,inner
28	09320-08018	Cushion
29	02142-05107	Screw,rear
29	02142-05126	Screw,rear
30	45530-27A00	Plate,seat Tail Cover Rh

Ref No	Part No	Description
30	45530-27A10	Plate,seat Tail Cover Lh
31	45581-27A00	Cap

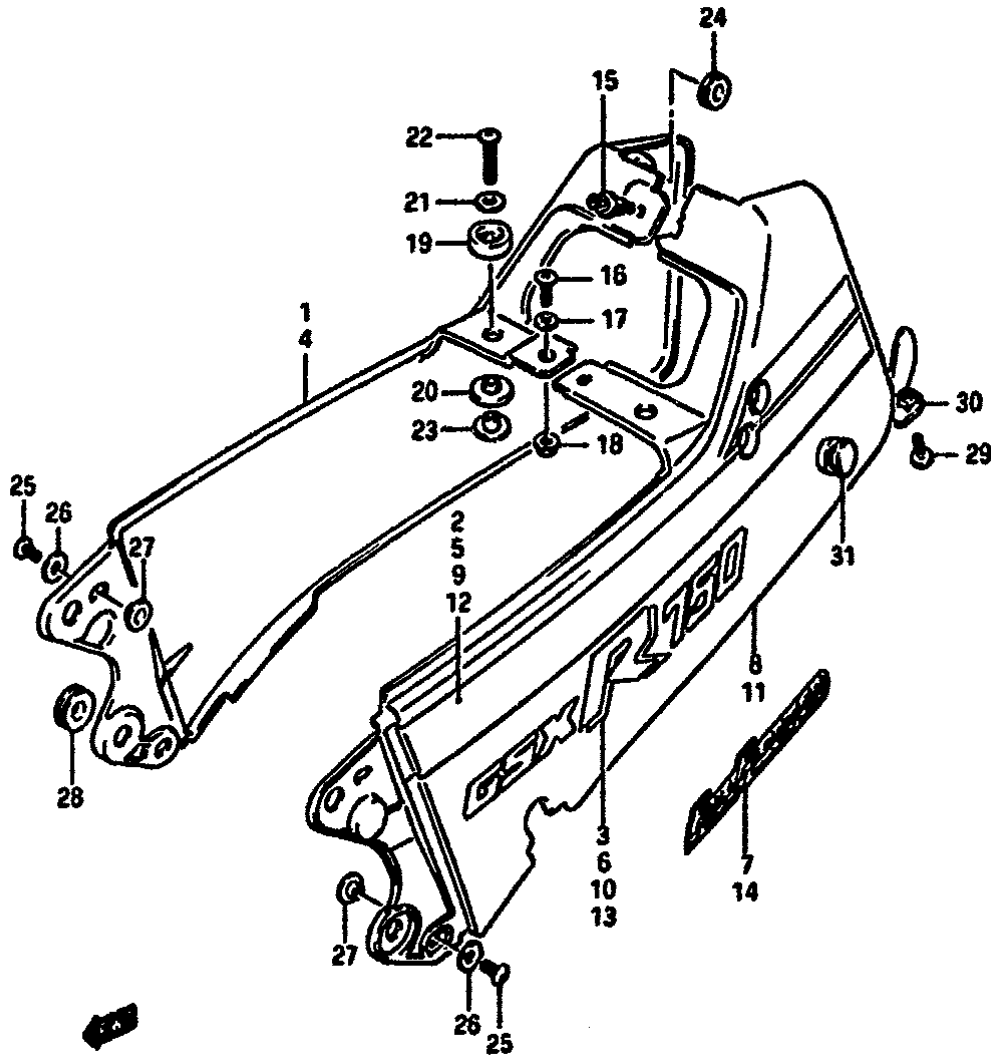

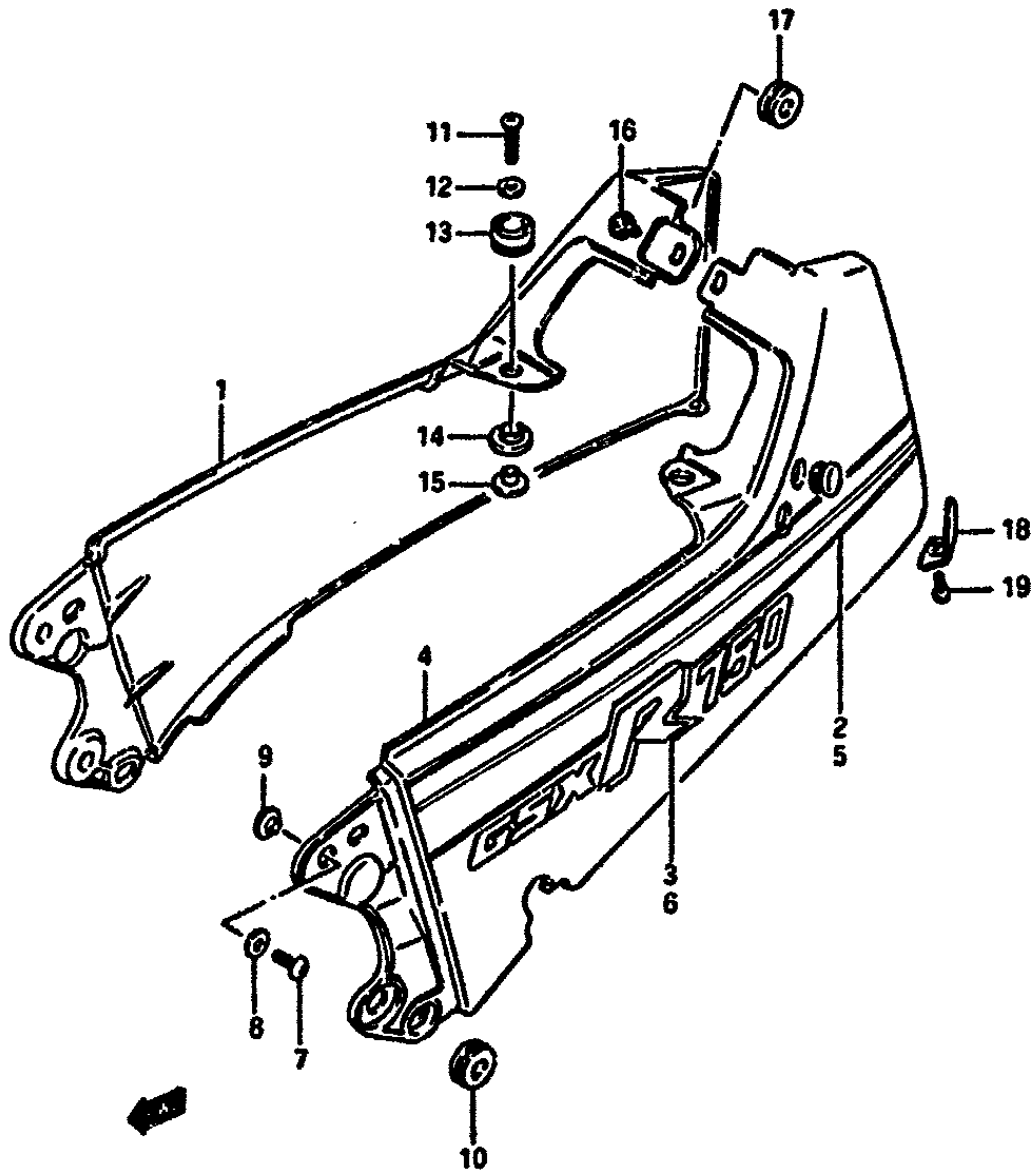


Ref No	Part No	Description
1	45510-06B40-7JK	Cover,seat Tail Rh
1	45510-06B20-7JK	Cover,seat Tail Rh
1	45510-06B40-9HF	Cover,seat Tail Rh
1	45510-06B20-9HF	Cover,seat Tail Rh
2	68167-27A30-9HW	. . Tape Set,seat Tail Rh
2	68167-27A30-9HY	. . Tape Set,seat Tail Rh
3	68166-27A00-7JL	. . Emblem
3	68166-27A00-7VS	. . Emblem
4	45590-06B40-7JK	Cover,seat Tail Lh
4	45590-06B20-7JK	Cover,seat Tail Lh
4	45590-06B40-9HF	Cover,seat Tail Lh
4	45590-06B20-9HF	Cover,seat Tail Lh
5	68168-27A30-9HW	. . Tape Set,seat Tail Lh
5	68168-27A30-9HY	. . Tape Set,seat Tail Lh
6	68166-27A00-7JL	. . Emblem
6	68166-27A00-7VS	. . Emblem
7	02142-06166	Screw,front
8	09160-06057	Washer,outer
9	09169-06031	Washer,inner
10	09320-08018	Cushion,front
11	02142-06305	Screw,center
12	09160-06069	Washer
13	45149-04A00	Cushion,upper
14	45326-04A00	Cushion,lower
15	45537-04A00	Spacer
16	09409-06307	Clip
17	09320-08013	Cushion,rear
18	45530-27A00	Plate,seat Tail Cover Rh
18	45530-27A10	Plate,seat Tail Cover Lh
19	02142-05126	Screw,plate

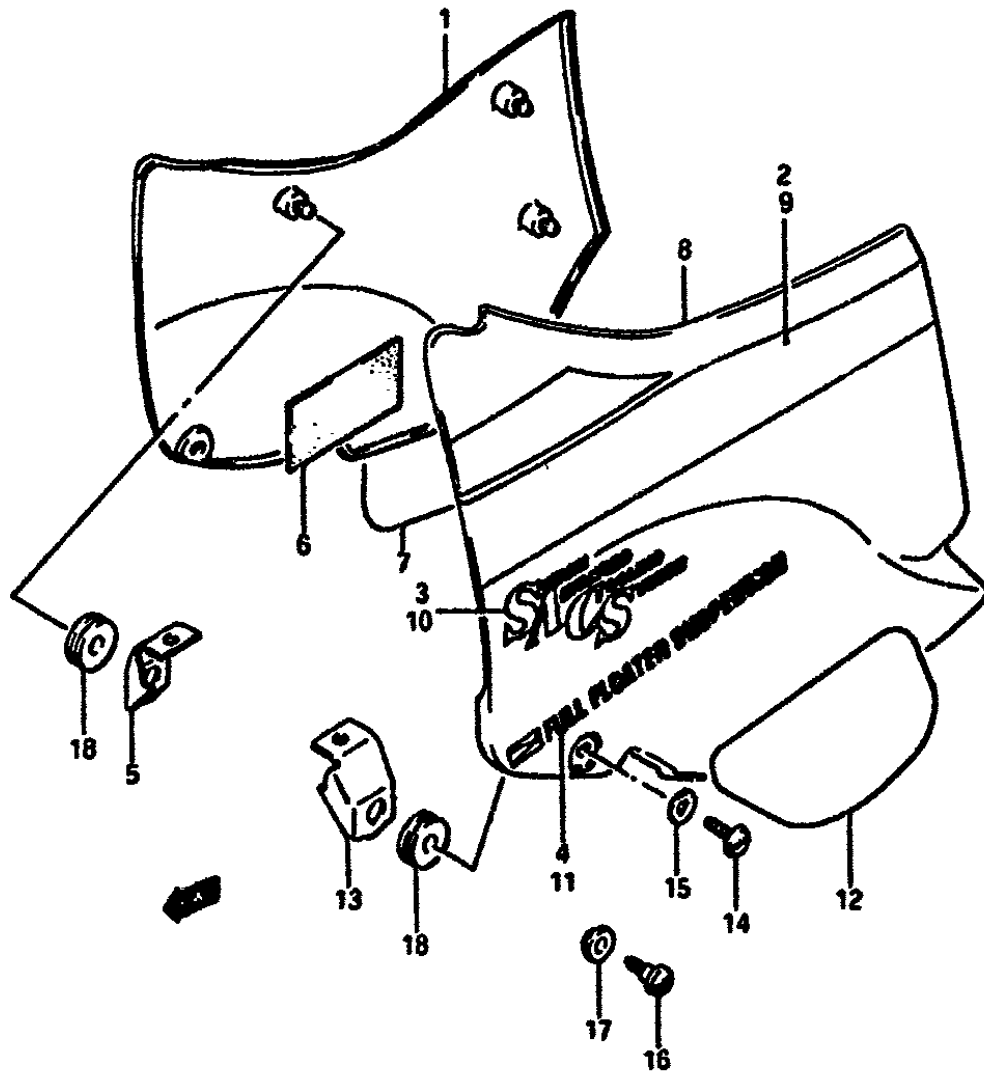


Ref No	Part No	Description
1	47110-27A00-7TG	Cover,frame Rh
1	47110-27A30-7TG	Cover,frame Rh
1	47110-27A00-7JK	Cover,frame Rh
1	47110-27A30-7JK	Cover,frame Rh
2	68130-27A10-81F	. Tape Set,rh
2	68130-27A11-81F	. Tape Set,rh
2	68130-27A10-65G	. Tape Set,rh
2	68130-27A11-65G	. Tape Set,rh
3	68131-27A00-7VR	. Emblem
3	68131-27A00-7JL	. Emblem
4	68235-31300-87W	. Emblem,full Floater
4	68235-31300-91R	. Emblem,full Floater
5	47171-27A00	Holder,frame Cover Rh
5	47171-27A01	Holder,frame Cover Rh
6	47161-27A00	Rubber
7	47261-06B00	Protector,rh
8	47210-27A00-7TG	Cover,frame Lh
8	47210-27A30-7TG	Cover,frame Lh
8	47210-27A00-7JK	Cover,frame Lh
8	47210-27A30-7JK	Cover,frame Lh
9	68140-27A10-81F	. Tape Set,lh
9	68140-27A11-81F	. Tape Set,lh
9	68140-27A10-65G	. Tape Set,lh
9	68140-27A11-65G	. Tape Set,lh
10	68131-27A00-7VR	. Emblem
10	68131-27A00-7JL	. Emblem
11	68235-31300-87W	. Emblem,full Floater
11	68235-31300-91R	. Emblem,full Floater
12	47261-27A00	Protector,lh
13	47141-27A00	Holder,frame Cover Lh
13	47141-27A01	Holder,frame Cover Lh
14	09125-06052	Screw
15	09160-06019	Washer
16	09139-06044	Screw
17	09320-08043	Cushion
18	09320-08018	Cushion


Ref No	Part No	Description
--------	---------	-------------

- | | | |
|----|-----------------|-----------------------------|
| 1 | 47110-27A50-7JK | Cover,frame Rh |
| 1 | 47110-27A50-9HF | Cover,frame Rh |
| 2 | 68130-27A20-9HW | • . Tape Set,frame Cover Rh |
| 2 | 68130-27A20-9HY | • . Tape Set,frame Cover Rh |
| 3 | 68235-40A10-60K | • . Emblem,full Floater |
| 3 | 68235-40A10-65G | • . Emblem,full Floater |
| 4 | 47171-27A01 | Holder,frame Cover Rh |
| 5 | 09320-08018 | Cushion |
| 6 | 47161-27A00 | Rubber,rh |
| 7 | 47261-06B00 | Protector,rh |
| 8 | 47210-27A50-7JK | Cover,frame Ly |
| 8 | 47210-27A50-9HF | Cover,frame Lh |
| 9 | 68140-27A20-9HW | • . Tape Set,frame Cover Lh |
| 9 | 68140-27A20-9HY | • . Tape Set,frame Cover Lh |
| 10 | 68235-40A10-60K | • . Emblem,full Floater |
| 10 | 68235-40A10-65G | • . Emblem,full Floater |
| 11 | 47141-27A01 | Holder,frame Cover Lh |
| 12 | 09320-08018 | Cushion |
| 13 | 47261-27A00 | Protector,lh |
| 14 | 09139-06044 | Screw |
| 15 | 08322-11084 | Washer |
| 16 | 09320-08043 | Cushion |

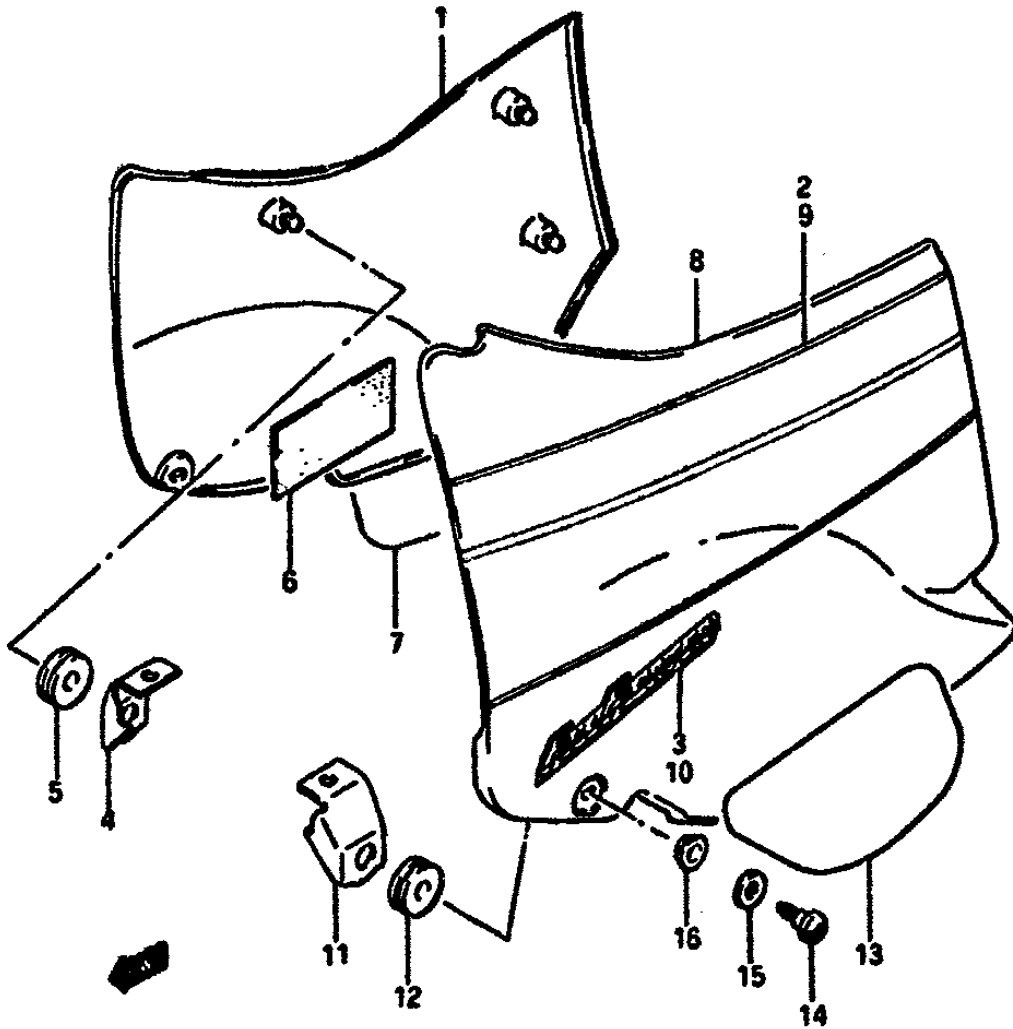


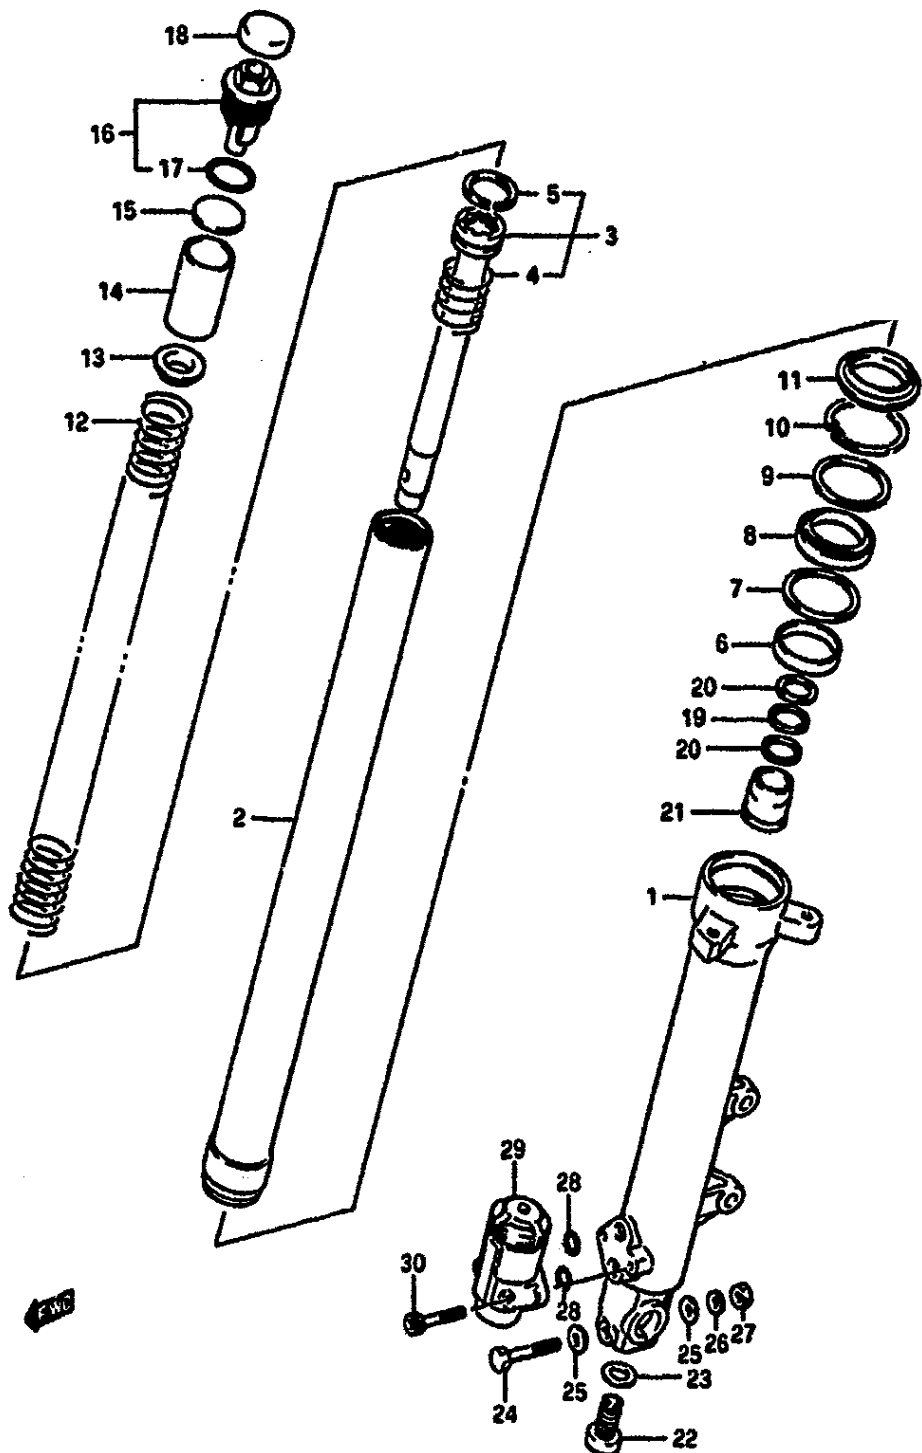

Ref No	Part No	Description
16	51103-27A00	Damper Assy,rh
16	51103-27A80	Damper Assy,rh
1	51130-27A00	. Tube,outer Rh
1	51130-27A80	. Tube,outer Rh
2	51110-27A00	. Tube,inner
3	51146-27A00	. Cylinder
4	51177-27A00	.. Spring,rebound
5	51196-24A00	. Ring,piston
6	51167-05A00	. Slid Metal
7	51158-05A00	. Washer
8	51153-05A00	. Oil Seal
9	51158-27A00	. Washer
10	51156-49440	. Snap Ring
11	51173-05A00	. Dust Seal
12	51171-27A00	. Spring
13	51172-27A00	. Guide,spring
14	51176-27A00	. Spacer
15	51192-27A00	. Washer
16	51351-27A00	. Cap
17	51117-24A00	.. O Ring
18	51189-00A00	. Cap
19	51123-27A00	. Washer
20	51125-27A00	. Spring,leaf
21	51195-27A00	. Piece,oil Lock
22	51147-14200	. Bolt,cylinder
23	51148-14200	. Gasket
24	01107-08558	. Bolt
25	08322-11088	. Washer
26	08321-31086	. Lock Washer
27	08310-12088	. Nut
28	51799-00A00	. O Ring
29	51770-27A00	. P.d.f Assy
30	07110-06408	. Bolt

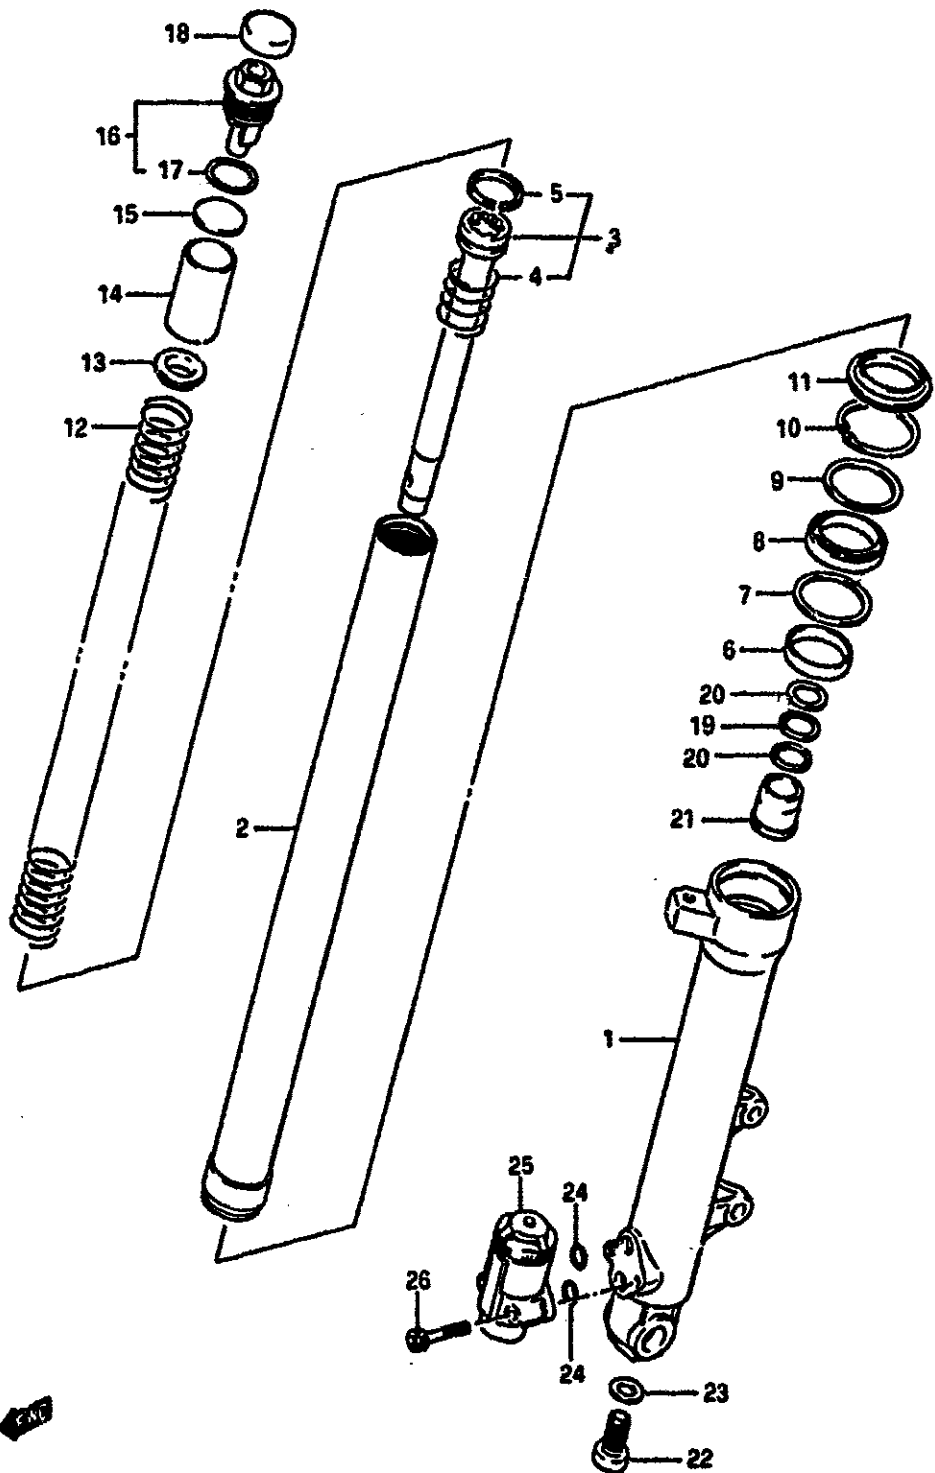


Ref No	Part No	Description
30	51104-27A00	Damper Assy,lh
30	51104-27A80	Damper Assy,lh
1	51140-27A00	. Tube,outer Lh
1	51140-27A80	. Tube,outer Lh
2	51110-27A00	. Tube,inner
3	51146-27A00	. Cylinder
4	51177-27A00	.. Spring,rebound
5	51196-24A00	.. Ring,piston
6	51167-05A00	. Slide Metal
7	51158-05A00	. Washer
8	51153-05A00	. Oil Seal
9	51158-27A00	. Washer
10	51156-49440	. Snap Ring
11	51173-05A00	. Dust Seal
12	51171-27A00	. Spring
13	51172-27A00	. Guide,spring
14	51176-27A00	. Spacer
15	51192-27A00	. Washer
16	51351-27A00	. Cap
17	51117-24A00	.. O Ring
18	51189-00A00	. Cap
19	51123-27A00	. Washer
20	51125-27A00	. Spring,leaf
21	51195-27A00	. Piece,oil Lock
22	51147-14200	. Bolt,cylinder
23	51148-14200	. Gasket
24	51799-00A00	. O Ring
25	51770-27A00	. P.d.f Assy
26	07110-06408	. Bolt

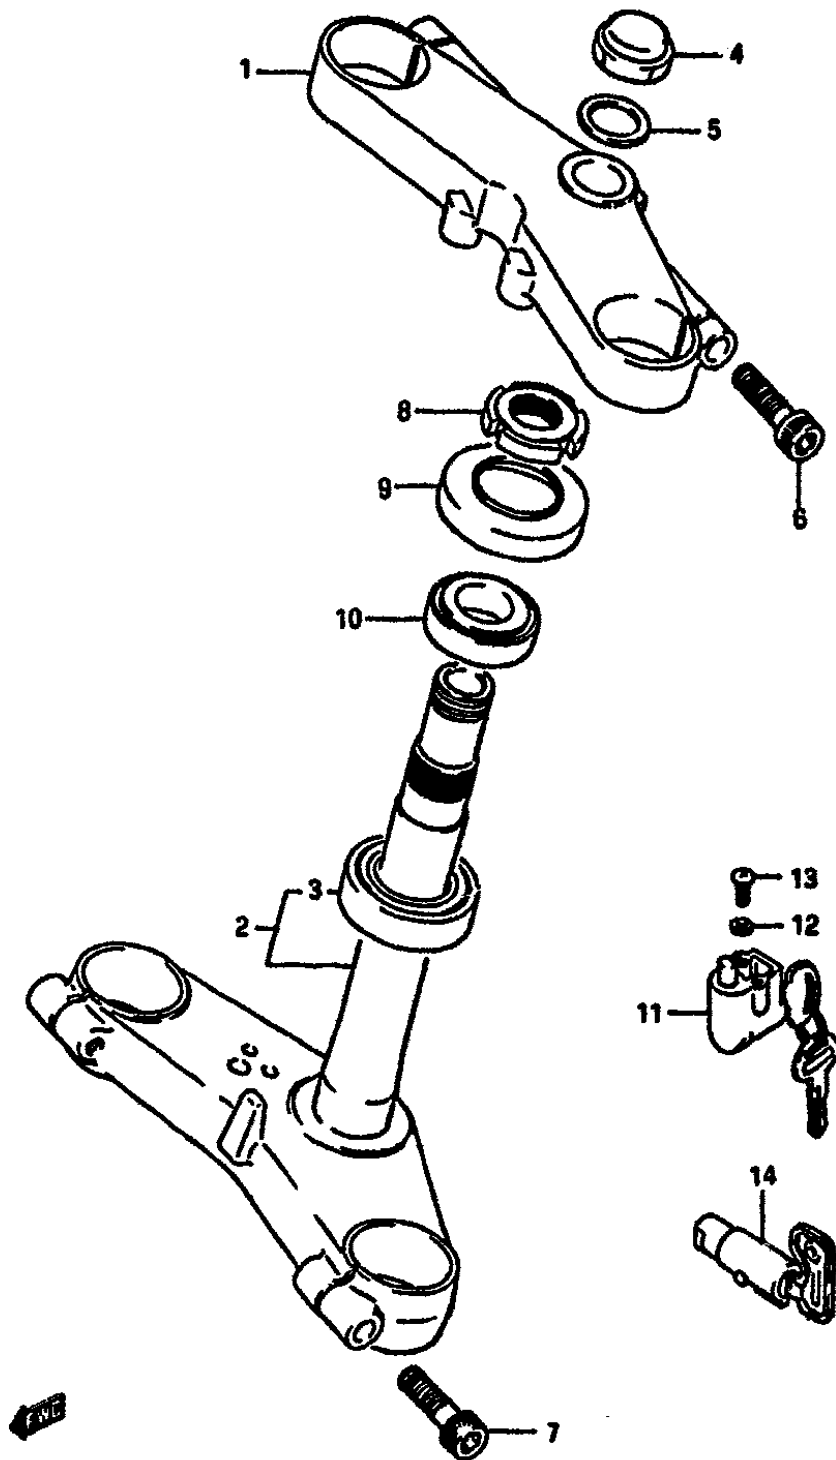


Ref No	Part No	Description
1	51311-27A00-291	Head,steering Stem (black)
2	51410-27A10	Stem,steering
3	09265-30005	• Bearing
4	51353-27A00	Nut
4	51353-27A80	Nut
5	51356-27A00	Washer
6	51352-00A00	Bolt,upper
7	07110-10408	Bolt,lower
8	51631-28000	Nut,steering Stem
9	51643-27A00	Dust Cover,steering Upper
10	09265-25008	Bearing
11	51900-08014-KEY	Lock Assy,steering
12	08321-21057	Lock Washer
13	02112-05208	Screw
14	51900-22662	Lock Assy,steering (executed Locally)


Ref No	Part No	Description
1	53111-27A20-019	Fender,front (black)
1	53111-27A20-23Z	Fender,front (blue)
1	53111-28A00-019	Fender,front (black)
1	53111-28A00-30H	Fender,front (white)
1	53111-27A10-019	Fender,front (black)
1	53111-27A10-23Z	Fender,front (blue)
1	53111-28A10-019	Fender,front (white)
1	53111-28A10-30H	Fender,front (white)
1	53111-28A40-019	Fender,front (black)
1	53111-28A40-30H	Fender,front (white)
2	53114-27A00	Brace,front Fender
3	09139-06027	Screw
4	09139-05025	Screw,fender & Brace
5	09169-05008	Washer
6	08319-31056	Nut
7	53311-25600	Mud Guard
8	02142-05128	Screw
9	09160-05017	Washer (5.5x16x1.2)
10	08316-26056	Nut
11	58621-21203	Guide,cable

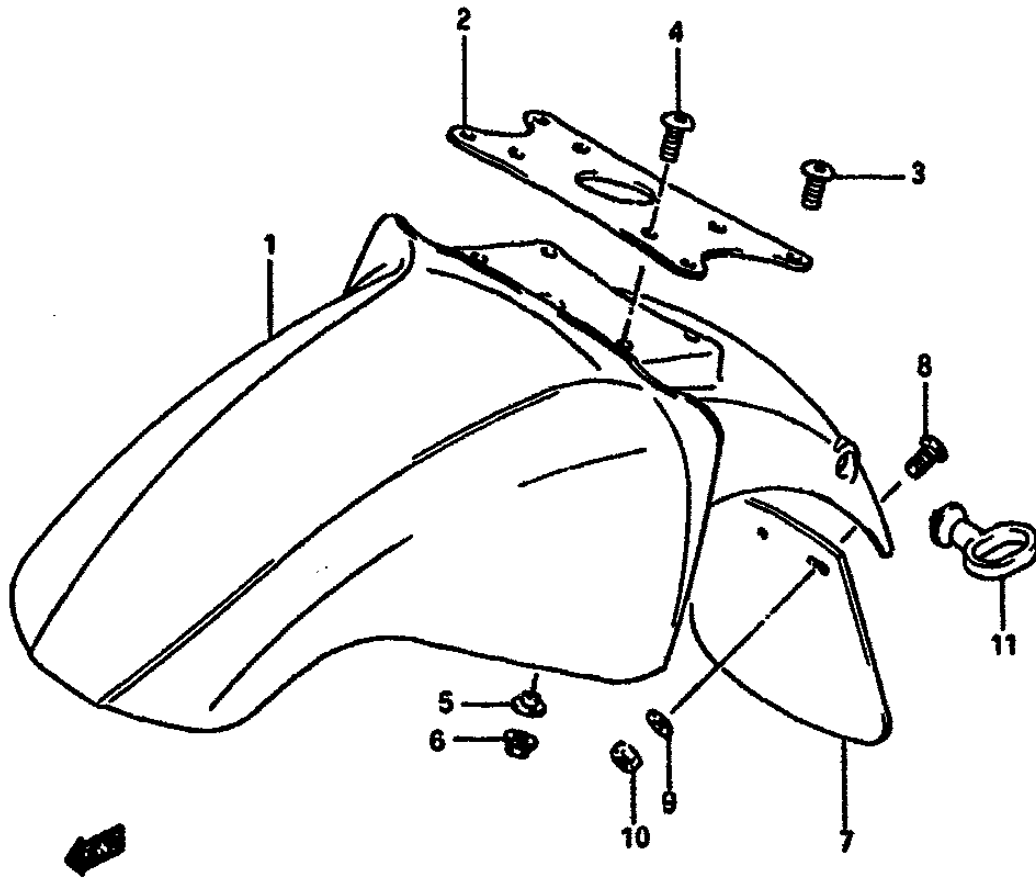


Ref No Part No Description

1	54111-27A00-291	Wheel,front (2.50x18) Black
2	08123-63027	Bearing
3	09180-15069	Spacer
4	54711-27A10	Axle,front
5	09159-12019	Nut
6	54740-27A01	Spacer,bearing Rh
7	54741-49101	Spacer,axle Lh
8	54600-27A01	Box,speedometer Gear
9	59210-27A00	Disc,front Brake Rh
10	59220-27A00	Disc,front Brake Lh
11	09106-08062	Bolt
12	55100-27A40	Tire,t/l Front (110/80v-18)
12	55100-28A00	Tire,t/l Front (110/80v-18)
13	43130-75150	Valve
14	55411-00A00-291	Balancer (10g) Black
14	55412-00A00-291	Balancer (20g) Black
14	55413-00A00-291	Balancer (30g) Black

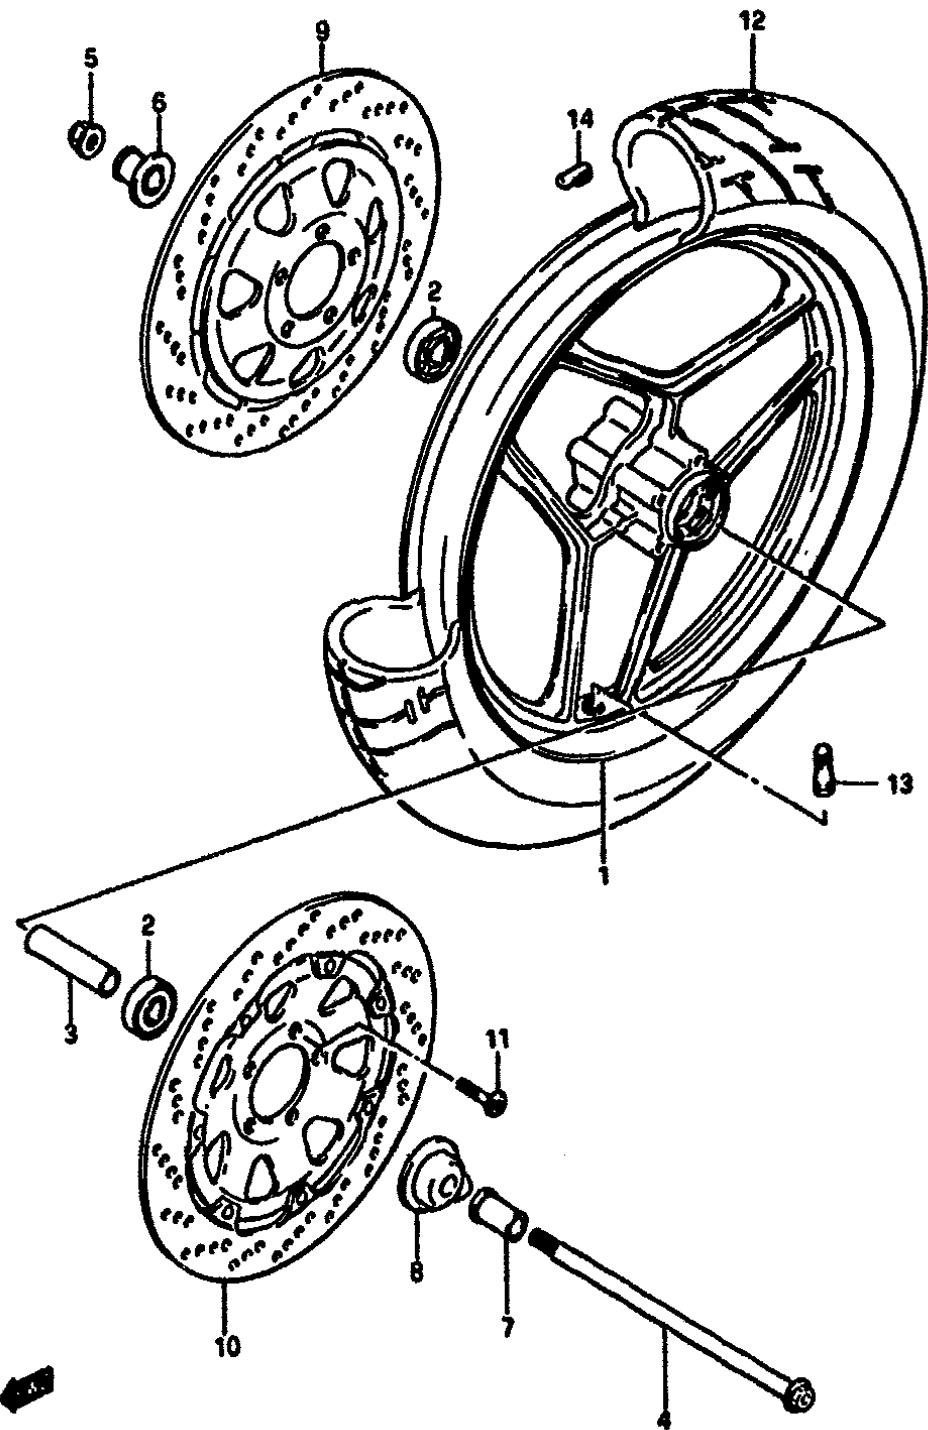

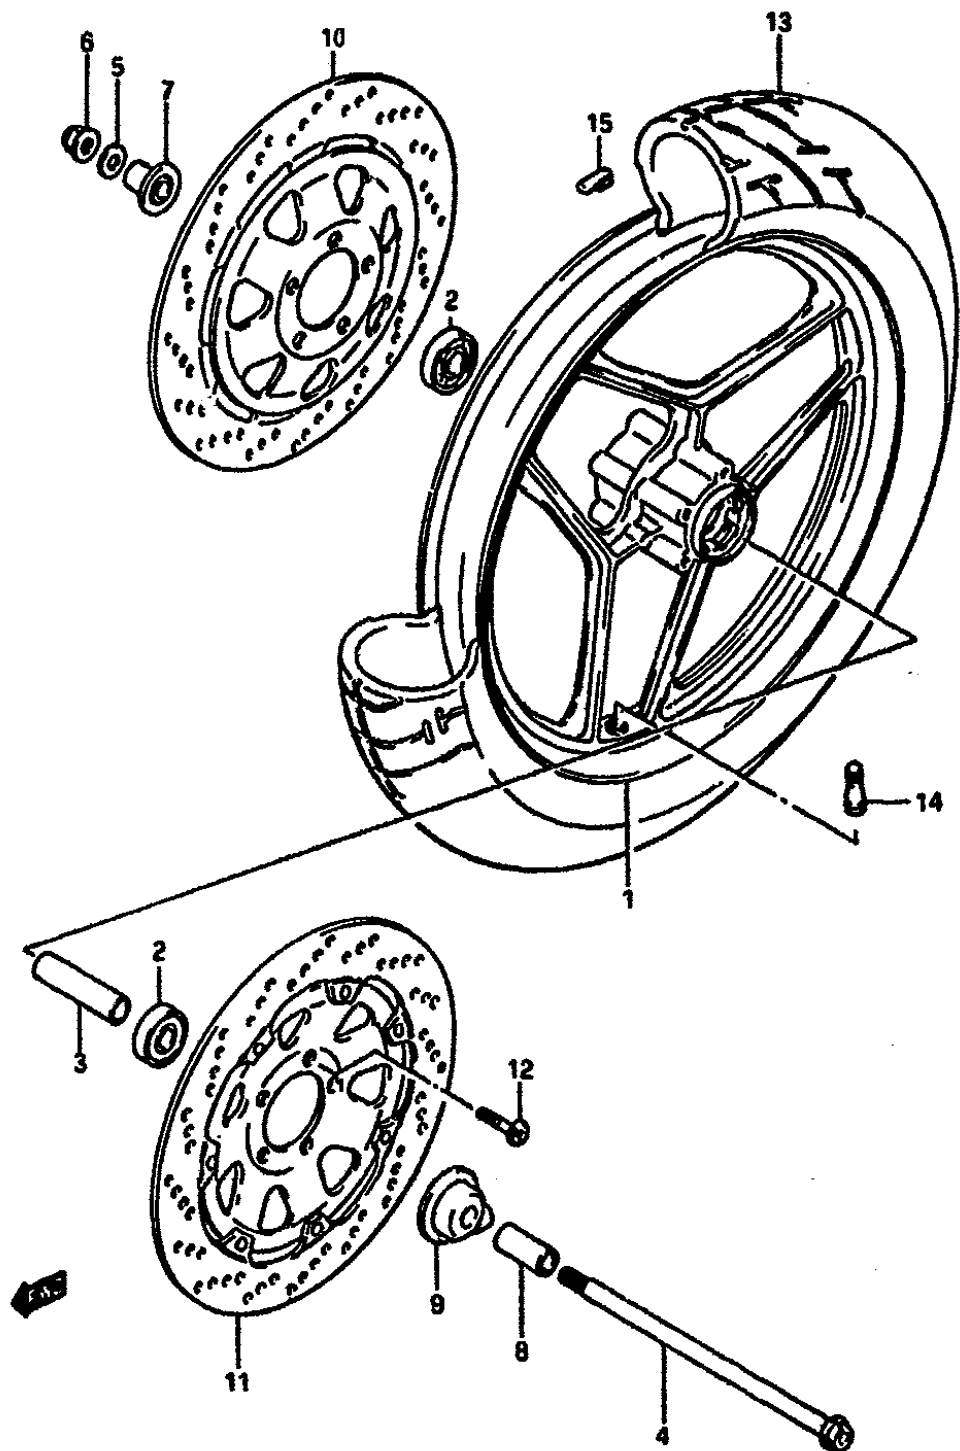


Ref No	Part No	Description
1	54111-27A00-291	Wheel,front (2.50x18) Black
2	09262-17034	Bearing
3	09180-17089	Spacer
4	54711-27A30	Axle,front
5	08322-11168	Washer
6	09159-16013	Nut
7	54740-27A10	Spacer,bearing Rh
8	54741-27A20	Spacer,axle Lh
9	54600-27A10	Box,speedometer Gear
10	59210-27A00	Disc,front Brake Rh
11	59220-27A00	Disc,front Brake Lh
12	09106-08062	Bolt
13	55100-28A00	Tire,t/l Front (110/80v-18)
14	43130-75150	Valve
15	55411-00A00	Balancer (10g)
15	55412-00A00	Balancer (20g)
15	55413-00A00	Balancer (30g)

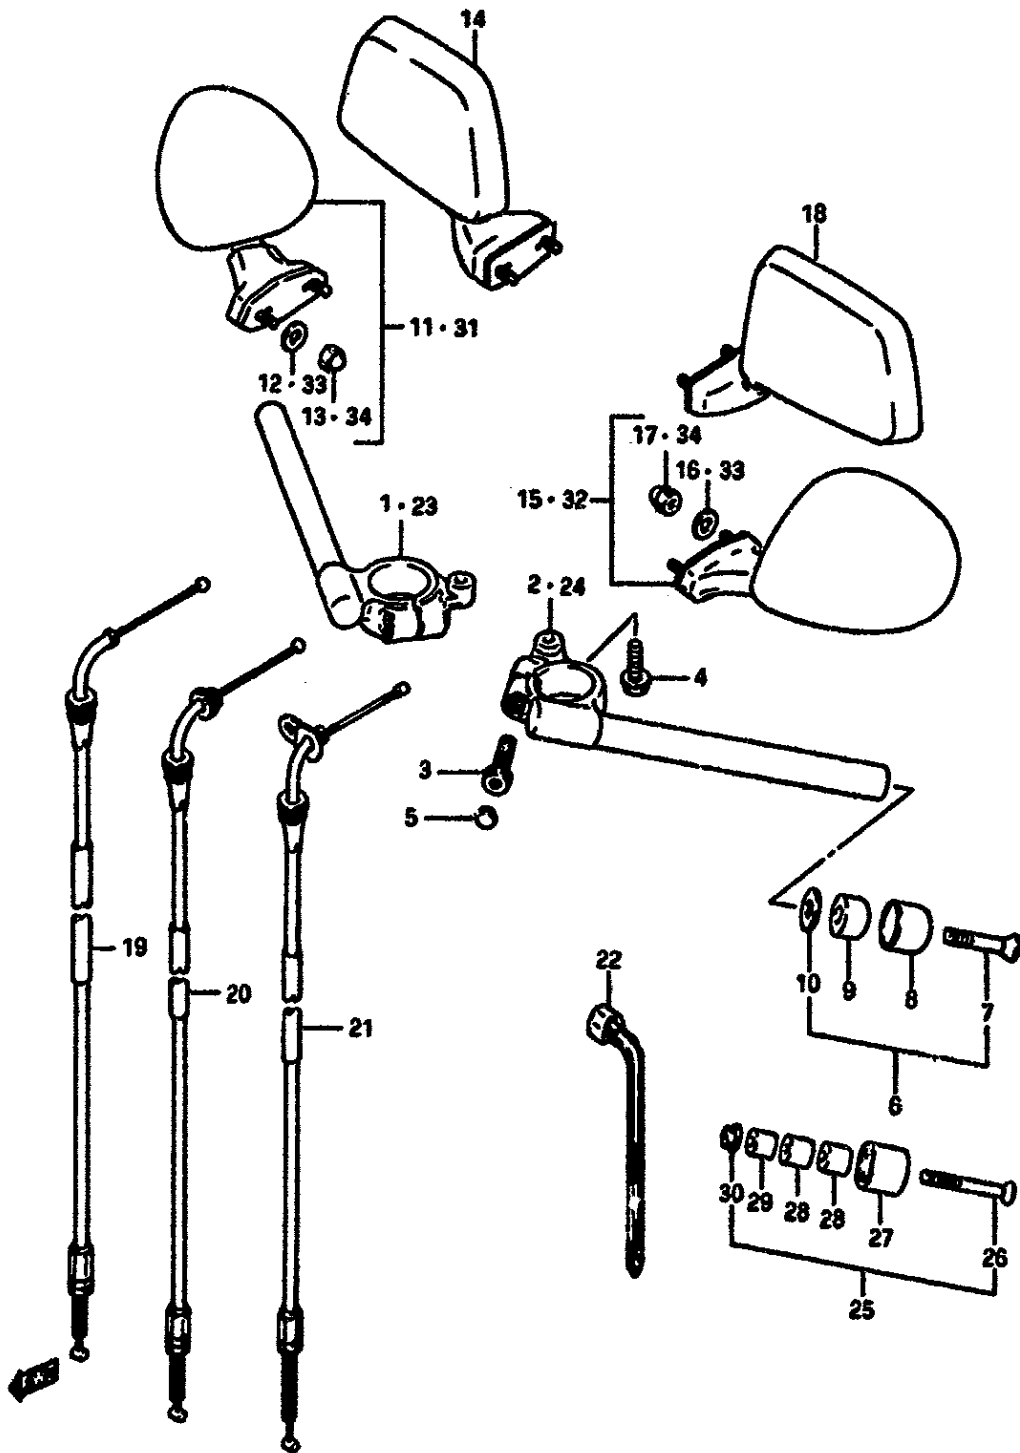



Ref No	Part No	Description
1	56111-27A01	Handlebar,rh
1	56111-27A30	Handlebar,rh
1	56111-27A11	Handlebar,rh
2	56151-27A01	Handlebar,lh
2	56151-27A30	Handlebar,lh
2	56151-27A11	Handlebar,lh
3	07110-08355	Bolt,handlebar
4	01517-06205	Bolt,handlebar Set
5	09250-06008	Cap,handlebar Set
6	56200-27810	Balancer Set,handlebar
7	02132-06505	. . Screw
8	56274-05350	. . Cap,balancer
9	56271-49400	. . Balancer,handlebar
10	56275-34400	. . Spacer,balancer
11	56500-27A00	Mirror Assy,rear View Rh
11	56500-27A21	Mirror Assy,rear View Rh
11	56500-27A60	Mirror Assy,rear View Rh
12	08322-21064	. . Washer
13	08313-11065	. . Nut
14	56500-27A10	Mirror Assy,rear View Rh
15	56600-27A00	Mirror Assy,rear View Lh
15	56600-27A21	Mirror Assy,rear View Lh
15	56600-27A60	Mirror Assy,rear View Lh
16	08322-21064	. . Washer
17	08313-11065	. . Nut
18	56600-27A10	Mirror Assy,rear View Lh
19	58300-27A01	Cable Assy,throttle No.1
19	58300-27A20	Cable Assy,throttle No.1
20	58300-27A11	Cable Assy,throttle No.2
20	58300-27A30	Cable Assy,throttle No.2
20	58300-27A31	Cable Assy,throttle No.2
21	58300-06B00	Cable Assy,throttle
22	09407-18402	Clamp,cable
23	56111-27A50	Handlebar,rh
24	56151-27A50	Handlebar,lh
25	56200-27840	Balancer Set
26	09127-06014	. . Screw
27	56274-27A00	. . Cap
28	56271-43500	. . Balancer
29	56272-44500	. . Expander
30	09159-06024	. . Nut
31	56500-28A00	Mirror Assy,rear View Rh
32	56600-28A00	Mirror Assy,rear View Lh
33	08322-21064	. . Washer
34	08313-11065	. . Nut

Ref No	Part No	Description
1	57110-27A00	Grip,throttle
2	57420-05A10	Lever,brake
3	57431-05A00	Bolt
4	08319-21065	Nut
5	37200-27A61	Switch Assy,handle Rh
6	02112-05205	• . Screw
7	57460-33700	Switch Assy,stop
8	57465-18601	• . Holder
9	57481-33010	• . Cover
10	09125-03105	• . Screw
11	57211-49500	Grip,lh
12	57620-08A00	Lever,clutch
13	57431-05A00	Bolt
14	08319-21065	Nut
15	37400-27A01	Switch Assy,handle Lh
16	02112-05205	• . Screw
17	37250-27A00	Switch Assy,lighting

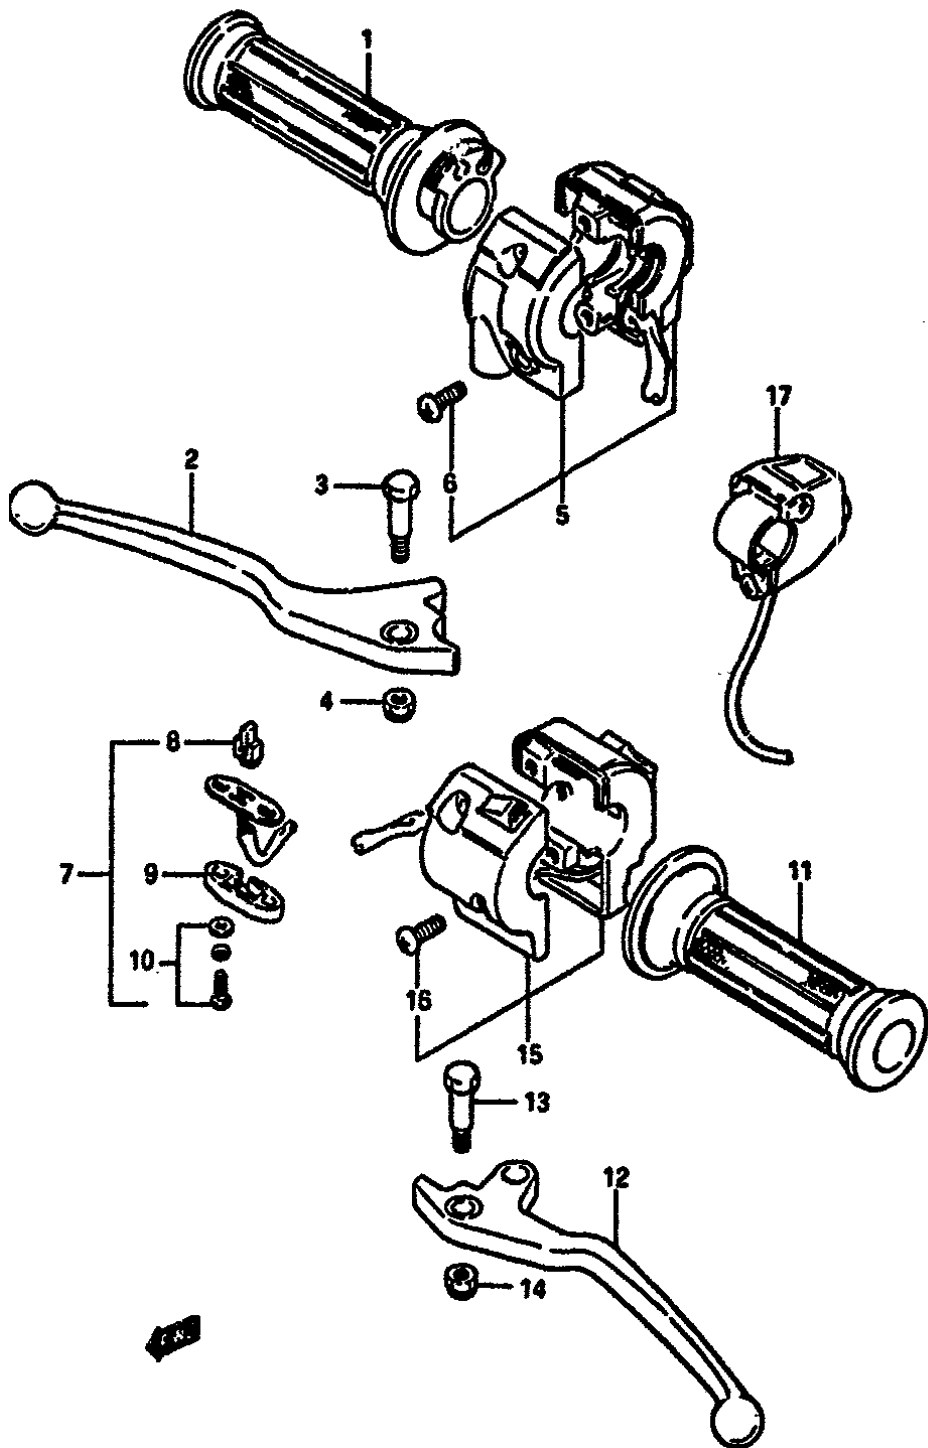


Ref No	Part No	Description
1	57110-27A00	Grip,throttle
2	57420-05A10	Lever,brake
3	57431-05A00	Bolt
4	08319-21065	Nut
5	37200-27A80	Switch Assy,handle Rh
6	02112-05455	• . Screw
7	57460-33700	Switch Assy,stop
8	57465-18601	• . Holder
9	57481-33010	• . Cover
10	09125-03105	• . Screw
11	57211-49500	Grip,lh
12	57620-08A00	Lever,clutch
13	57431-05A00	Bolt
14	08319-21065	Nut
15	37400-06B00	Switch Assy,handle Lh
16	02112-05405	• . Screw

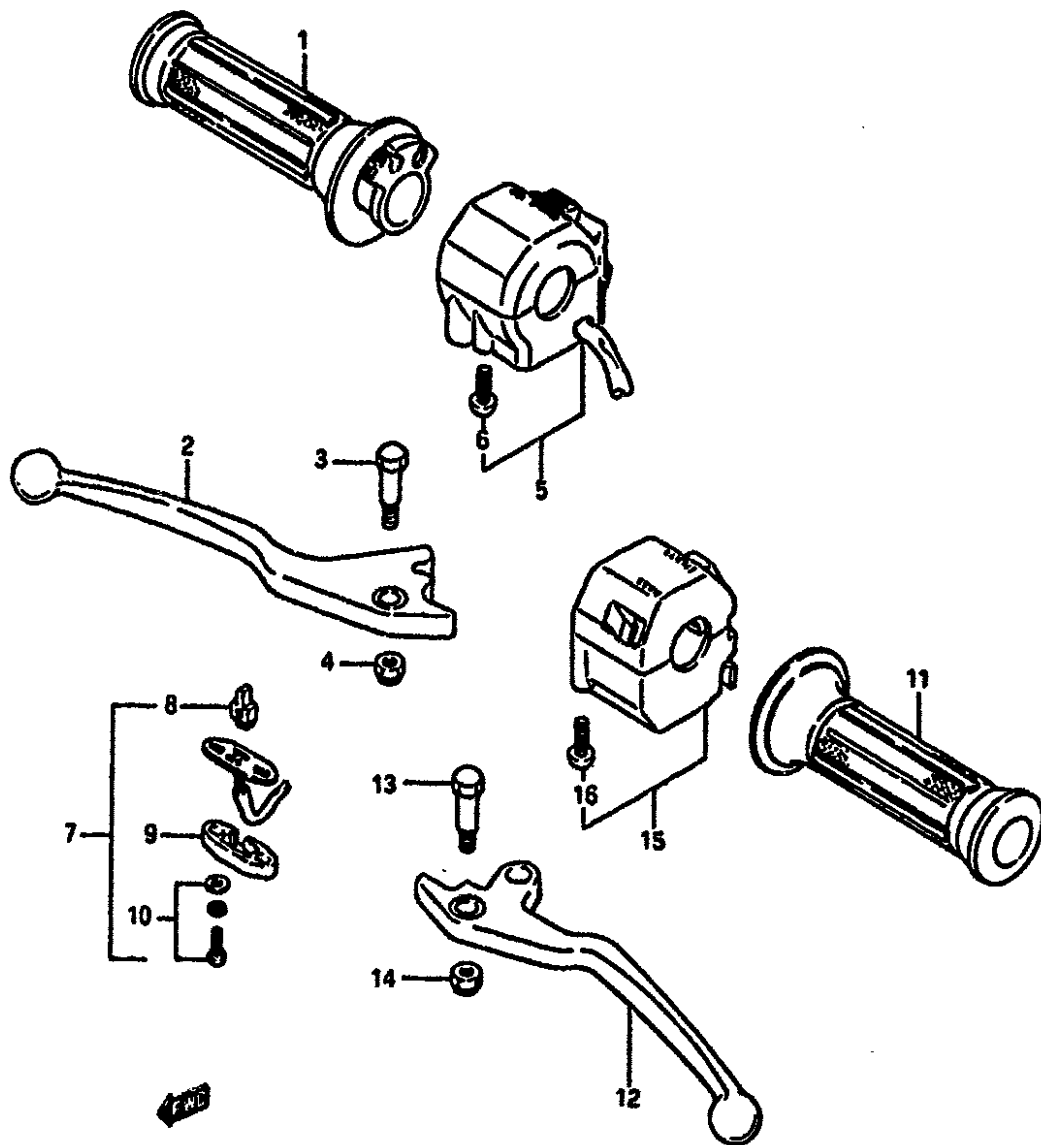


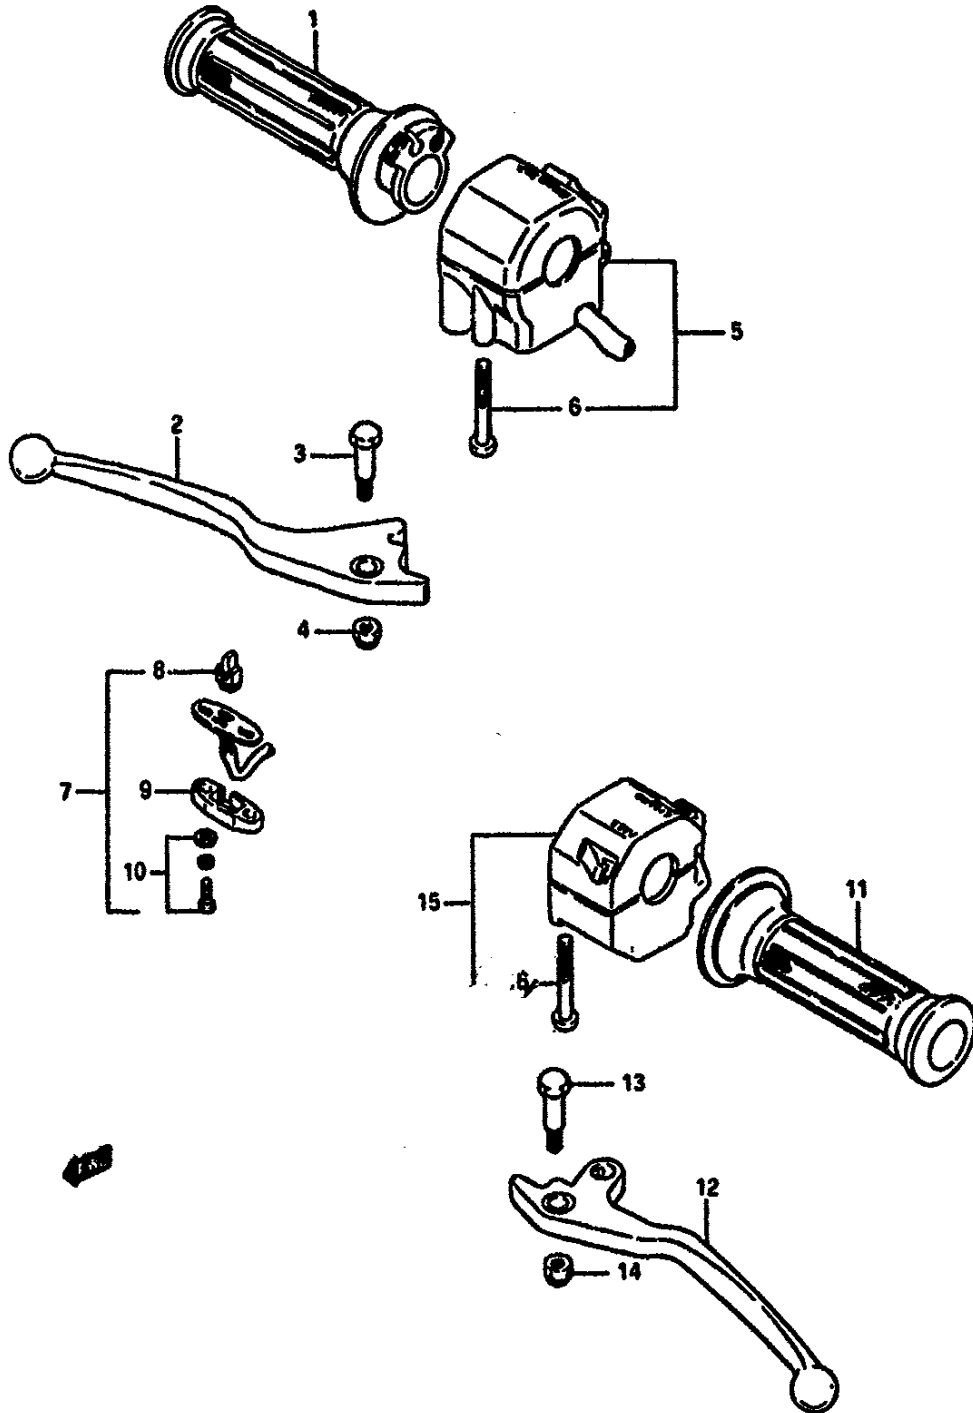


Ref No	Part No	Description
1	57110-49500	Grip,throttle
2	57420-05A10	Lever,brake
3	57431-05A00	Bolt
4	08319-21065	Nut
5	37200-06B00	Switch Assy,handle Rh
6	02112-05455	• . Screw
7	57460-33700	Switch Assy,stop
8	57465-18601	• . Holder
9	57481-33010	• . Cover
10	09125-03105	• . Screw
11	57211-49500	Grip,lh
12	57620-08A00	Lever,clutch
13	57431-05A00	Bolt
14	08319-21065	Nut
15	37400-06B00	Switch Assy,handle Lh
16	02112-05405	• . Screw

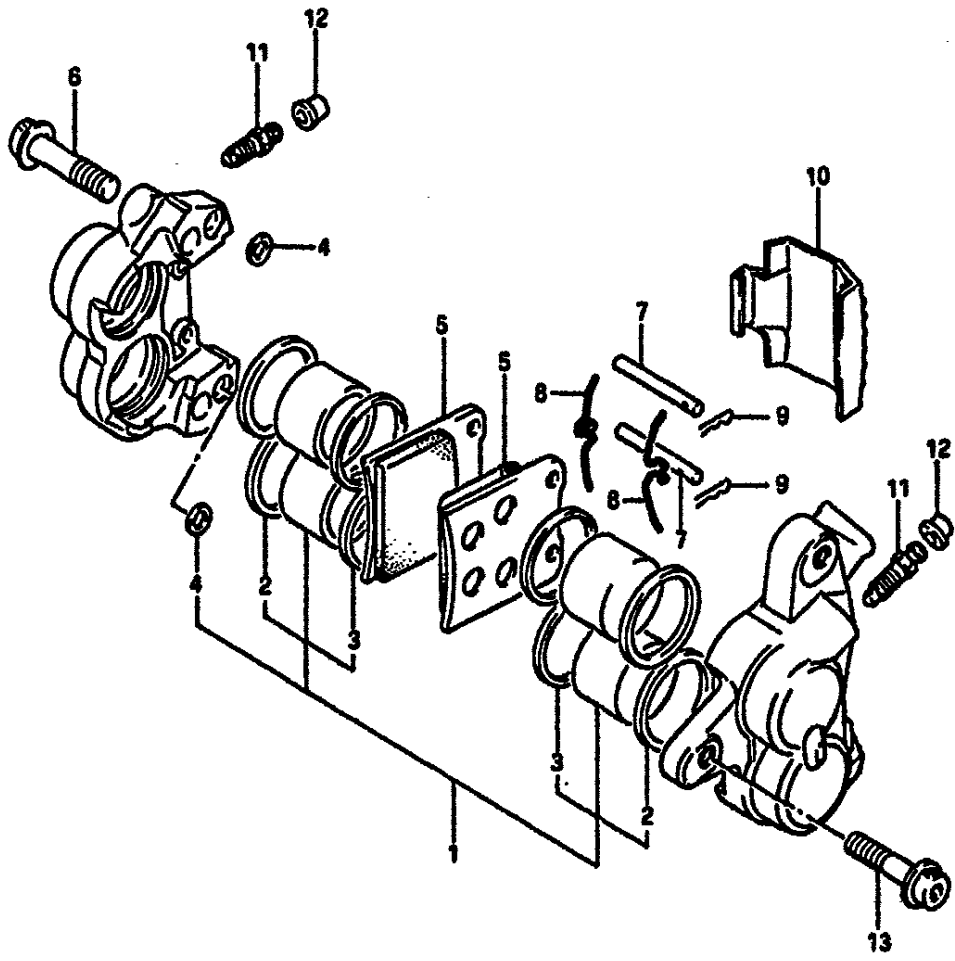

Ref No	Part No	Description
16	59100-27A10	Calipers Assy,rh
16	59300-27A10	Calipers Assy,lh
1	59300-27820	• . Piston Set
2	59107-27A10	•• .. Seal,piston
3	59108-27A10	•• .. Seal,wiper
4	69107-34200	•• .. Seal
5	59130-27A10	• . Pad
6	59145-16700	• . Bolt
7	69141-45000	• . Pin
8	59143-16700	• . Spring
9	69142-45000	• . Clip
10	59151-04A01	• . Cover
11	59121-18410	• . Bleeder
12	59122-18410	• . Cap
13	07120-08358	Bolt

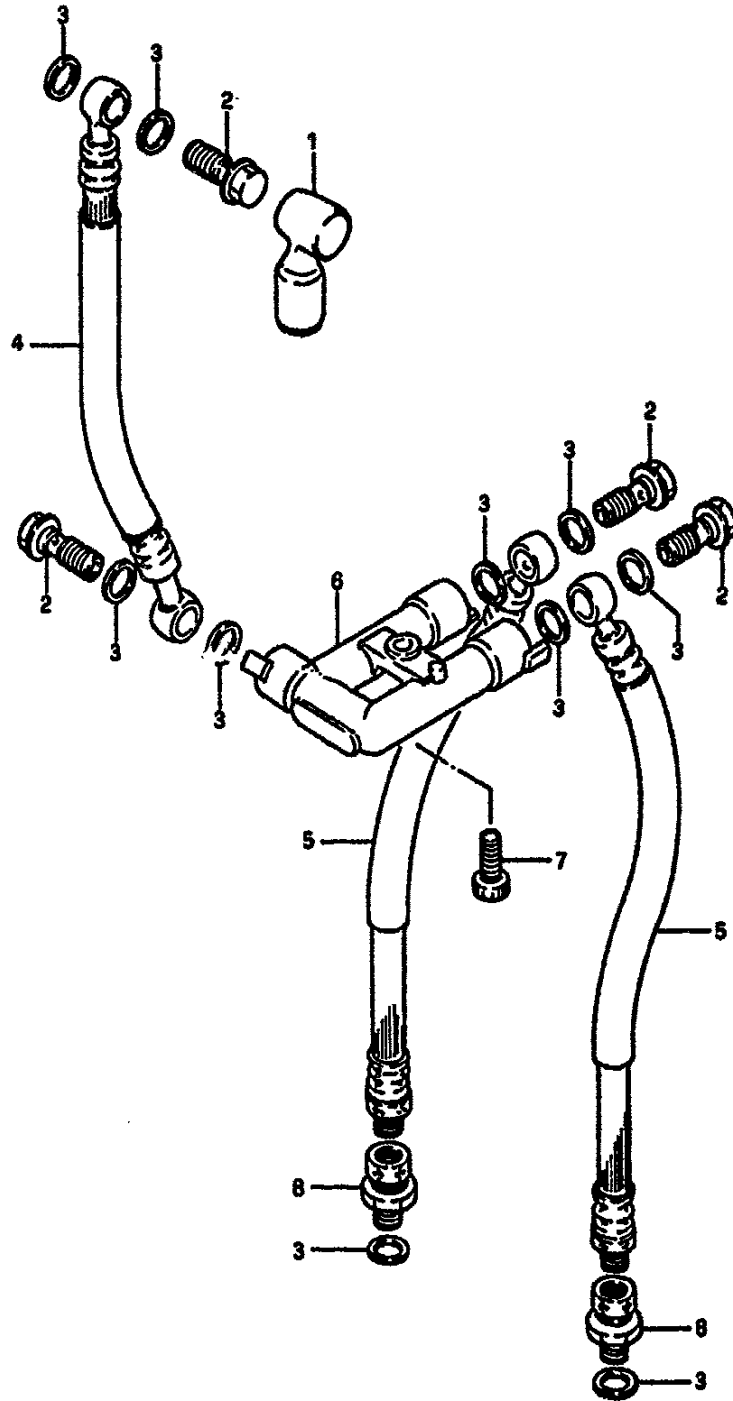


Ref No	Part No	Description
1	59711-04700	Boot,master Cylinder
2	09360-10017	Bolt
3	09161-10009	Washer
4	59480-27A00	Hose,front Brake No.1
5	59240-27A00	Hose,front Brake No.2
6	59491-27A00	Joint,brake Hose
7	07110-06165	Bolt
8	59290-43500	Adaptor,brake Hose

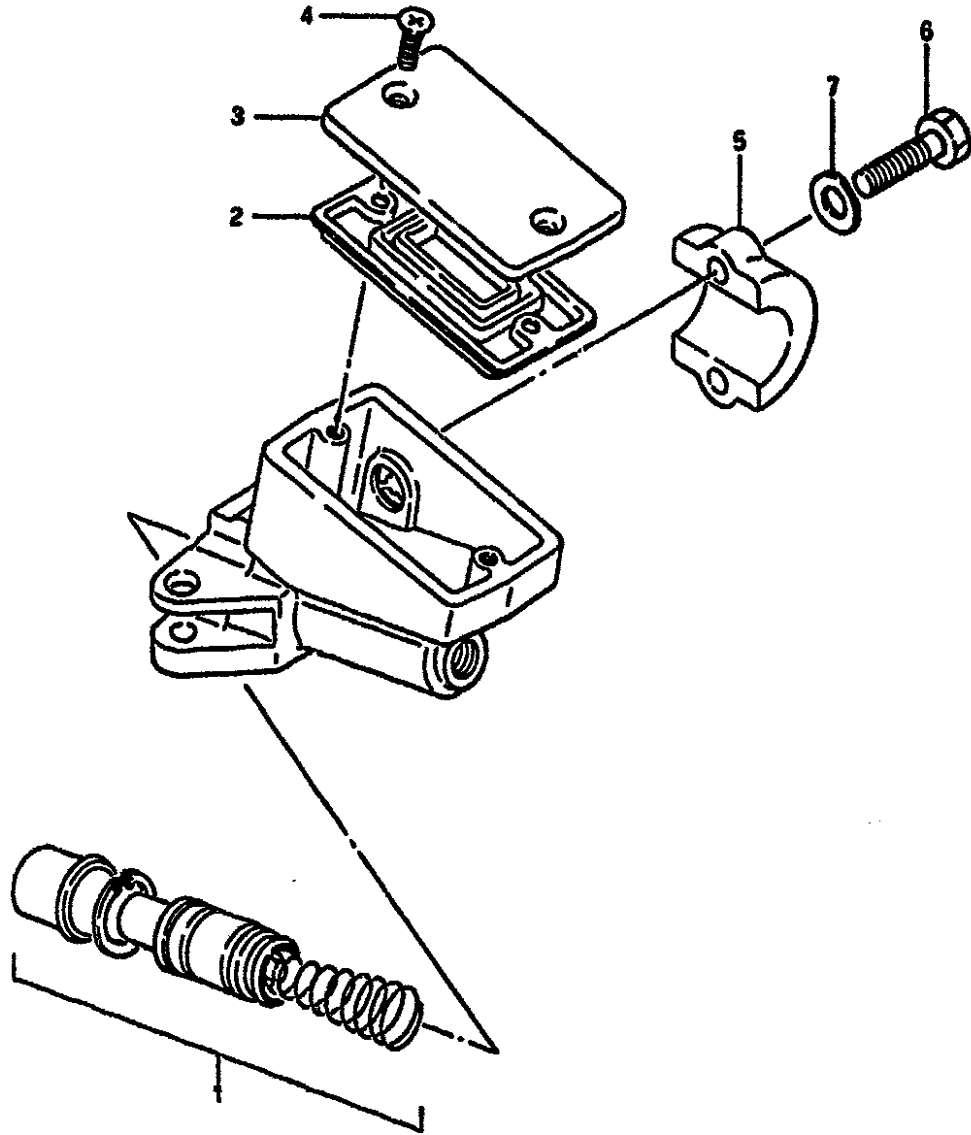


Ref No	Part No	Description
8	59600-08A30	Master Cylinder Assy
1	59600-45860	• . Piston & Cup Set
2	59667-49460	• . Diaphragm
3	59669-04A10	• . Cup
4	69689-49300	• . Screw
5	59671-16700	• . Holder
6	01107-06255	• . Bolt
7	08322-21064	• . Washer




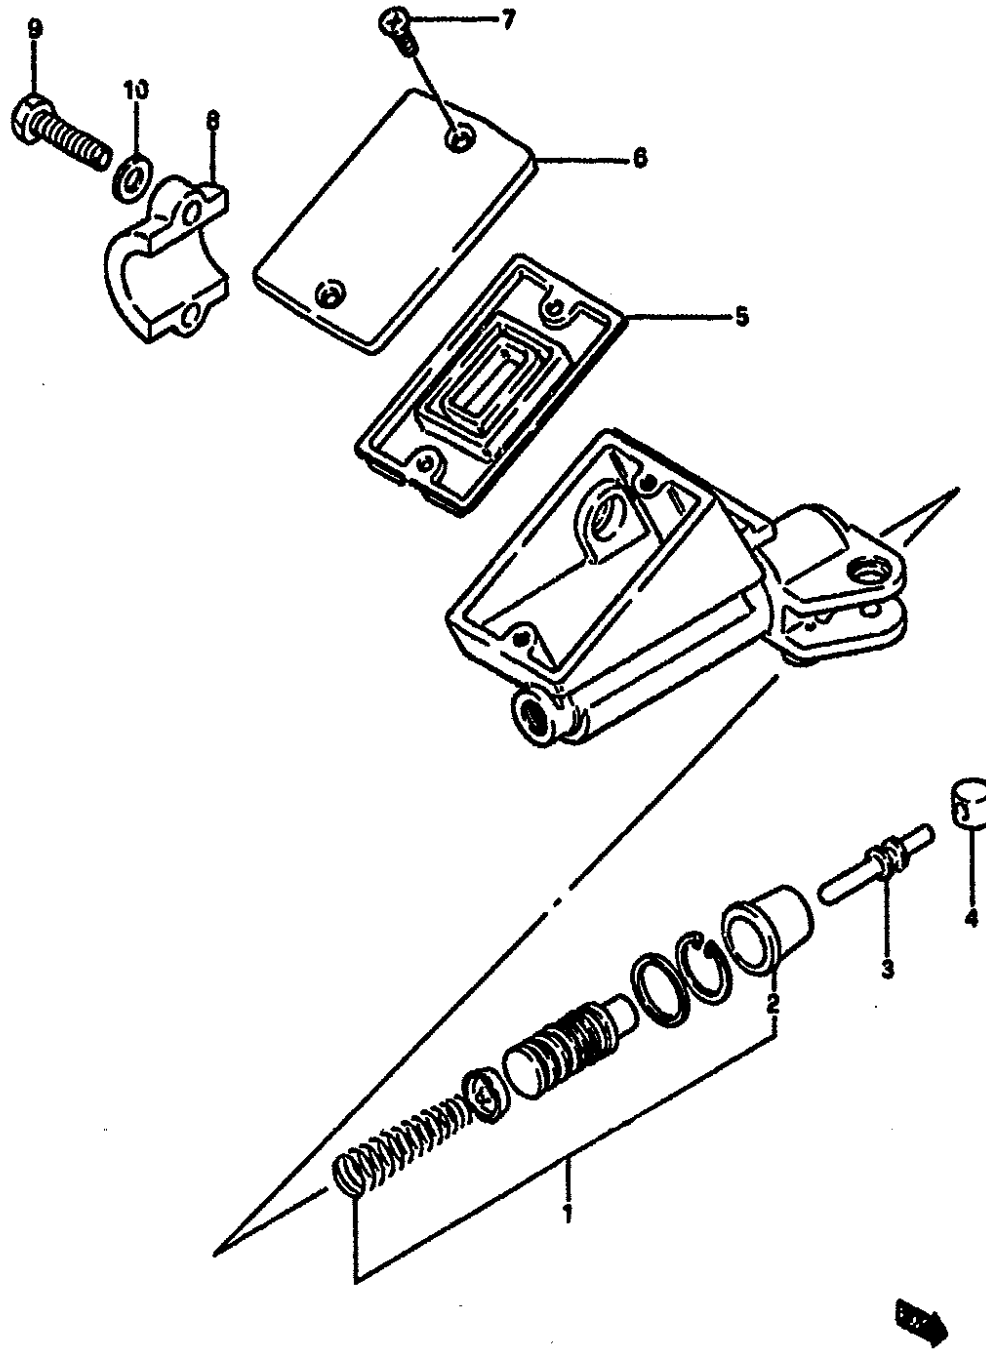


Ref No	Part No	Description
7	59800-27A40	Cylinder Assy,clutch Master
1	59800-08810	. Piston & Cup Set
2	59666-44300	•• . Boot
3	59871-08A00	. Push Rod
4	59892-08A00	. Bush
5	59667-49460	. Diaphragm
6	59669-04A10	. Cap
7	69689-49300	. Screw
8	59671-16700	. Holder
9	01107-06255	. Bolt
10	08322-21064	. Washer

Ref No	Part No	Description
1	59711-04700	Boot,clutch Master
2	09360-10017	Bolt
3	09161-10009	Washer
4	59910-27A03	Hose,clutch
5	59915-27A10	Clamp,clutch Hose
6	09404-06415	Clamp
7	09409-07305	Clip

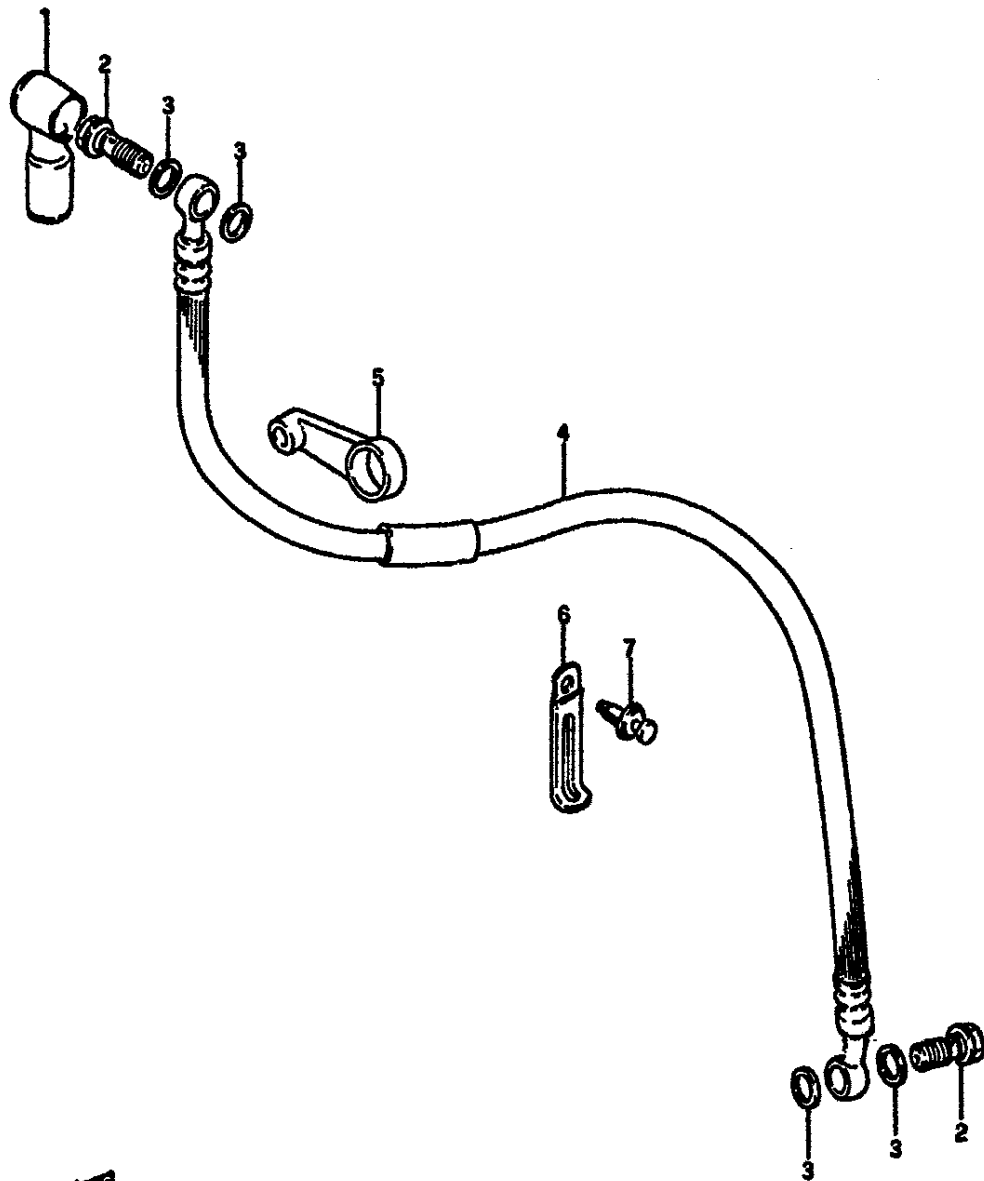

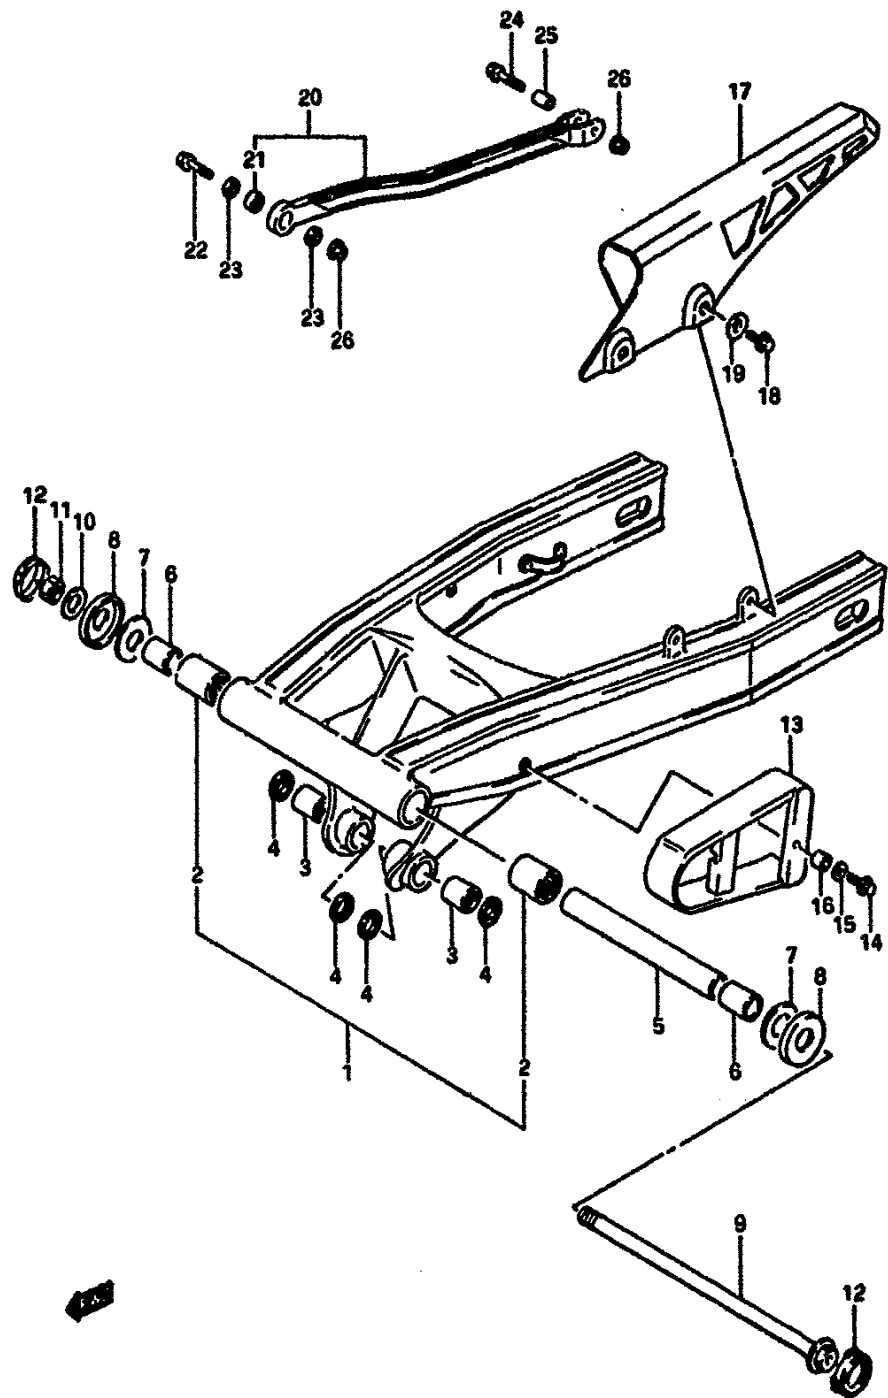



Ref No	Part No	Description
1	61000-27A00	Swinging Arm Assy,rear
1	61000-27A20	Swinging Arm Assy,rear
2	09263-22025	. . Bearing
3	09263-17029	. . Bearing
4	62647-02B00	. . Dust Seal
5	61282-27A00	Spacer,center
6	61251-27A00	Spacer,pivot Bearing
7	08211-16381	Washer
8	61262-49000	Dust Seal,pivot Shaft
9	61211-27A01	Shaft,swinging Arm Pivot
10	09160-14015	Washer
11	09159-14013	Nut
12	61222-43400	Cap,swinging Arm Pivot
13	61273-27A00	Buffer,chain Touch Defense
14	01107-06206	Bolt
15	09160-06019	Washer (6.5x16x1.2)
16	09180-06135	Spacer
17	61310-27A01	Case,chain
18	01517-06105	Bolt
19	09169-06026	Washer
20	64300-27830	Torque Link Set,rear (l:414)
20	64300-27840	Torque Link Set,rear (l:446)
21	64352-40411	. . Bearing
22	09103-08178	Bolt,front
23	64339-40410	Dust Seal,torque Link
24	09103-08142	Bolt,rear
25	64336-20A00	Spacer,torque Link
26	08319-31087	Nut

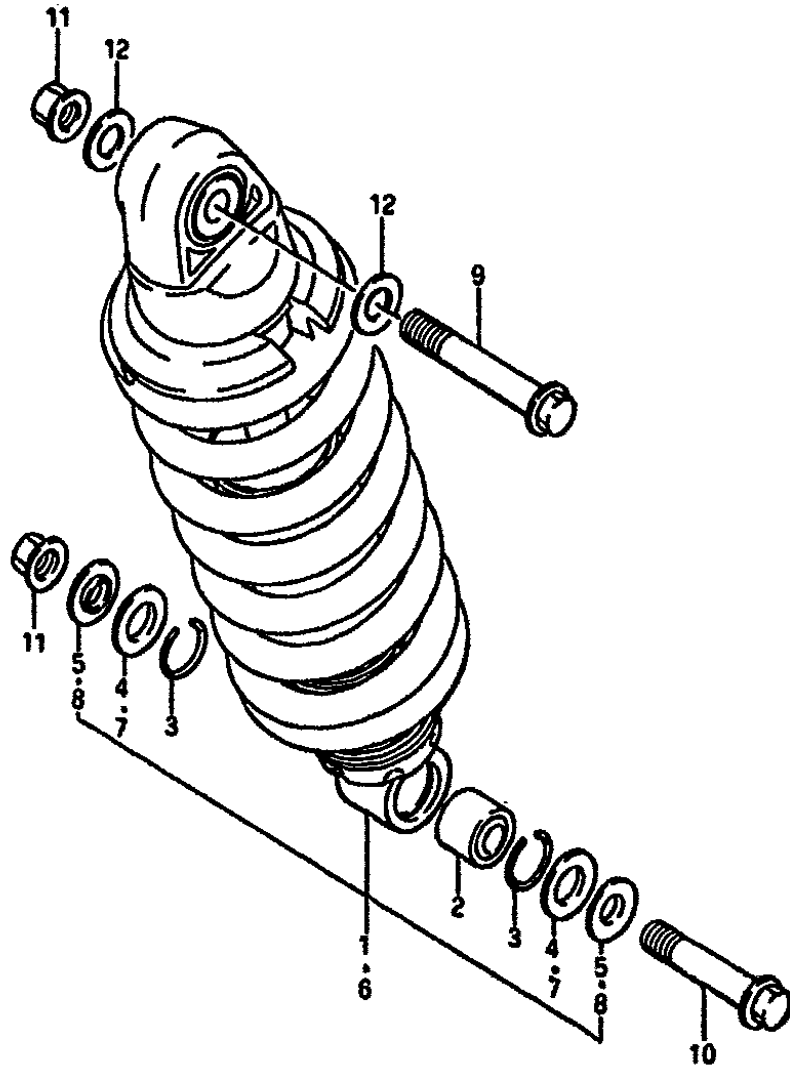


Ref No	Part No	Description
1	62100-27A00	Absorber Assy,rear Shock
2	62175-43400	. Bearing
3	62277-14200	. Stop Ring
4	62226-00A00	. Dust Seal
5	62684-00A00	. Collar
6	62100-27A50	Absorber Assy,rear Shock
7	62226-27A20	. Dust Seal
8	62684-27A50	. Collar
9	62311-08300	Bolt,upper
10	62648-14500	Bolt,lower
11	08319-31107	Nut
12	62321-27A00	Washer,upper

Ref No	Part No	Description
1	62600-27821	Lever Set,cushion
2	09263-35020	• . Bearing
3	09269-12004	• . Bearing
4	62657-05A00	• . Ring,stopper
5	62624-02B00	Dust Seal
6	62316-05A01	Spacer,front
7	62647-05A00	Dust Seal
8	62668-27A00	Bolt
9	08319-31128	Nut
10	62621-27A20	Shaft
11	09160-12076	Washer
12	08319-31128	Nut
13	62623-27A21	Spacer,eccentric
14	62646-27A20	Spacer
15	62667-27A00	Shim

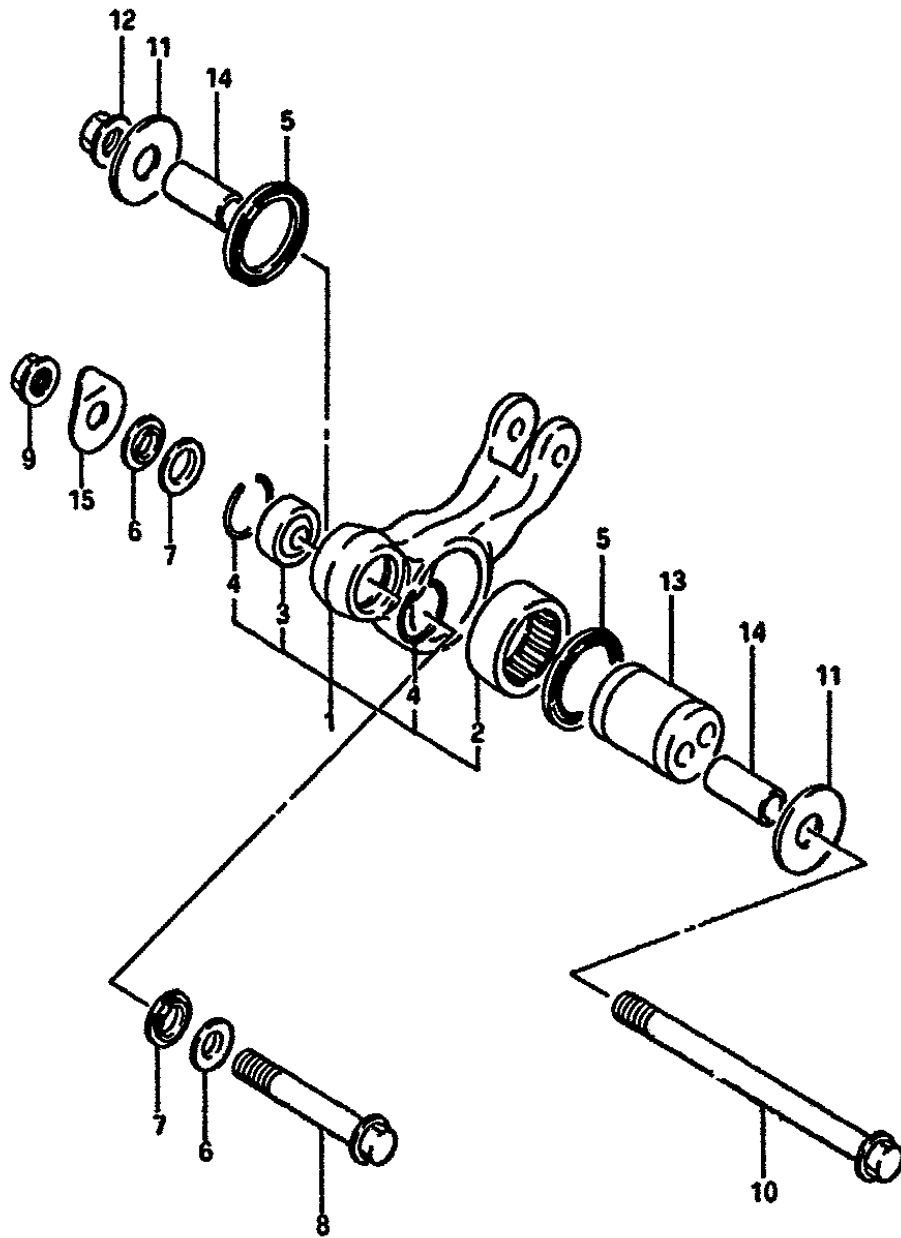

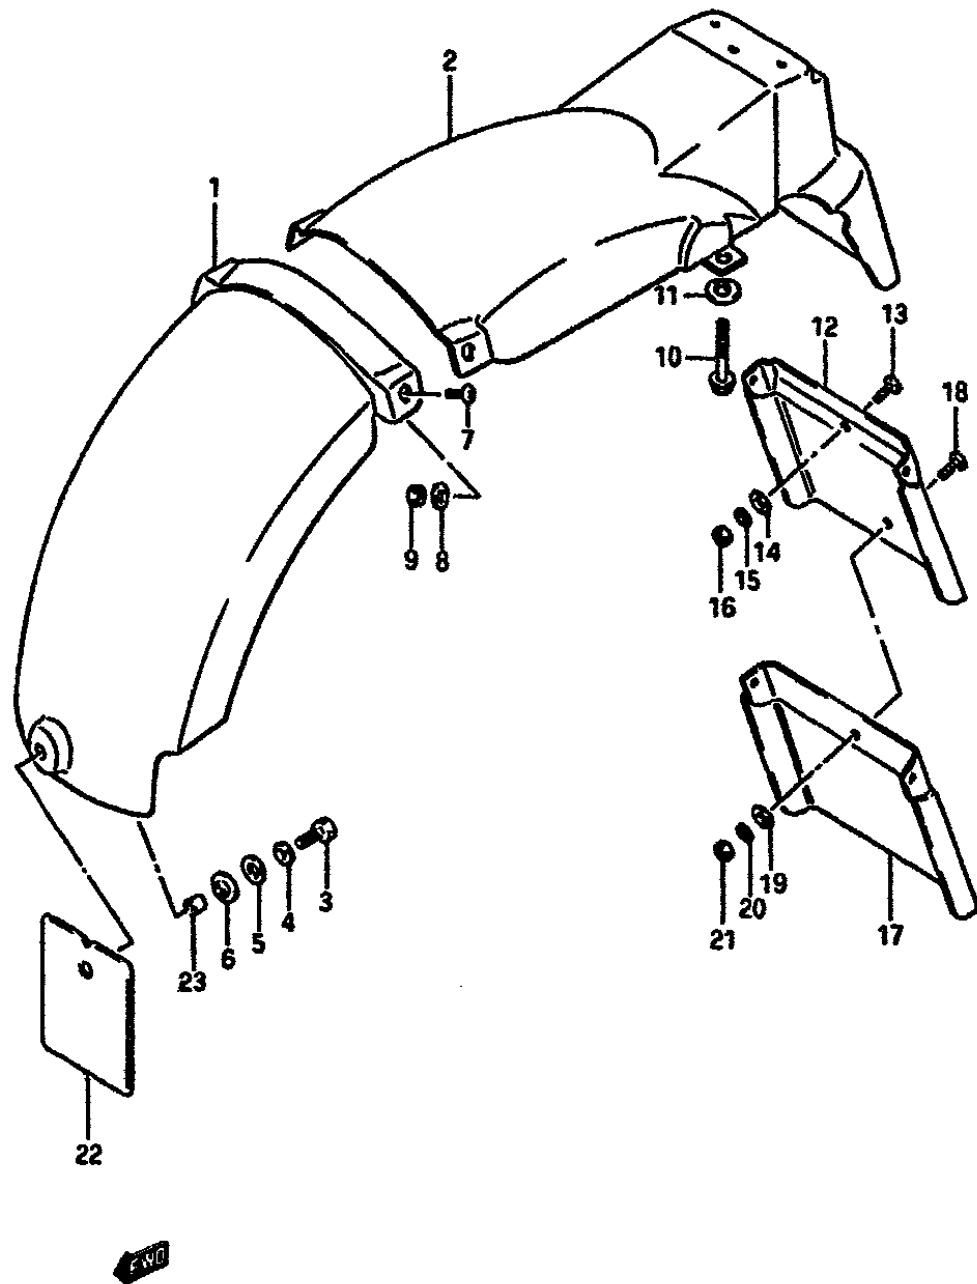


Ref No	Part No	Description
1	63112-27A00	Body,rear Fender Front
2	63113-27A00	Body,rear Fender Rear
2	63113-06B00	Body,rear Fender Rear
2	63113-27A20	Body,rear Fender Rear
2	63113-06B20	Body,rear Fender Rear
3	01107-06207	Bolt,front (6x20)
3	01107-06307	Bolt,front (6x30)
4	08321-21067	Lock Washer
5	09160-06007	Washer
6	09169-06038	Washer
7	02142-06166	Screw
8	09160-06006	Washer (6.5x18x1.6)
9	08319-21068	Nut
10	01517-08555	Bolt,rear
11	09169-08034	Washer
12	63311-27A20	Extension
13	02142-06125	Screw
14	09160-06006	Washer (6.5x15x1.6)
15	08321-21066	Lock Washer
16	08310-22066	Nut
17	63331-27A20	Mud Guard
18	02142-06164	Screw
19	09160-06019	Washer (6.5x16x1.2)
20	08321-21067	Lock Washer
21	08310-22066	Nut
22	63411-27A00	Mud Guard
23	09180-06030	Spacer

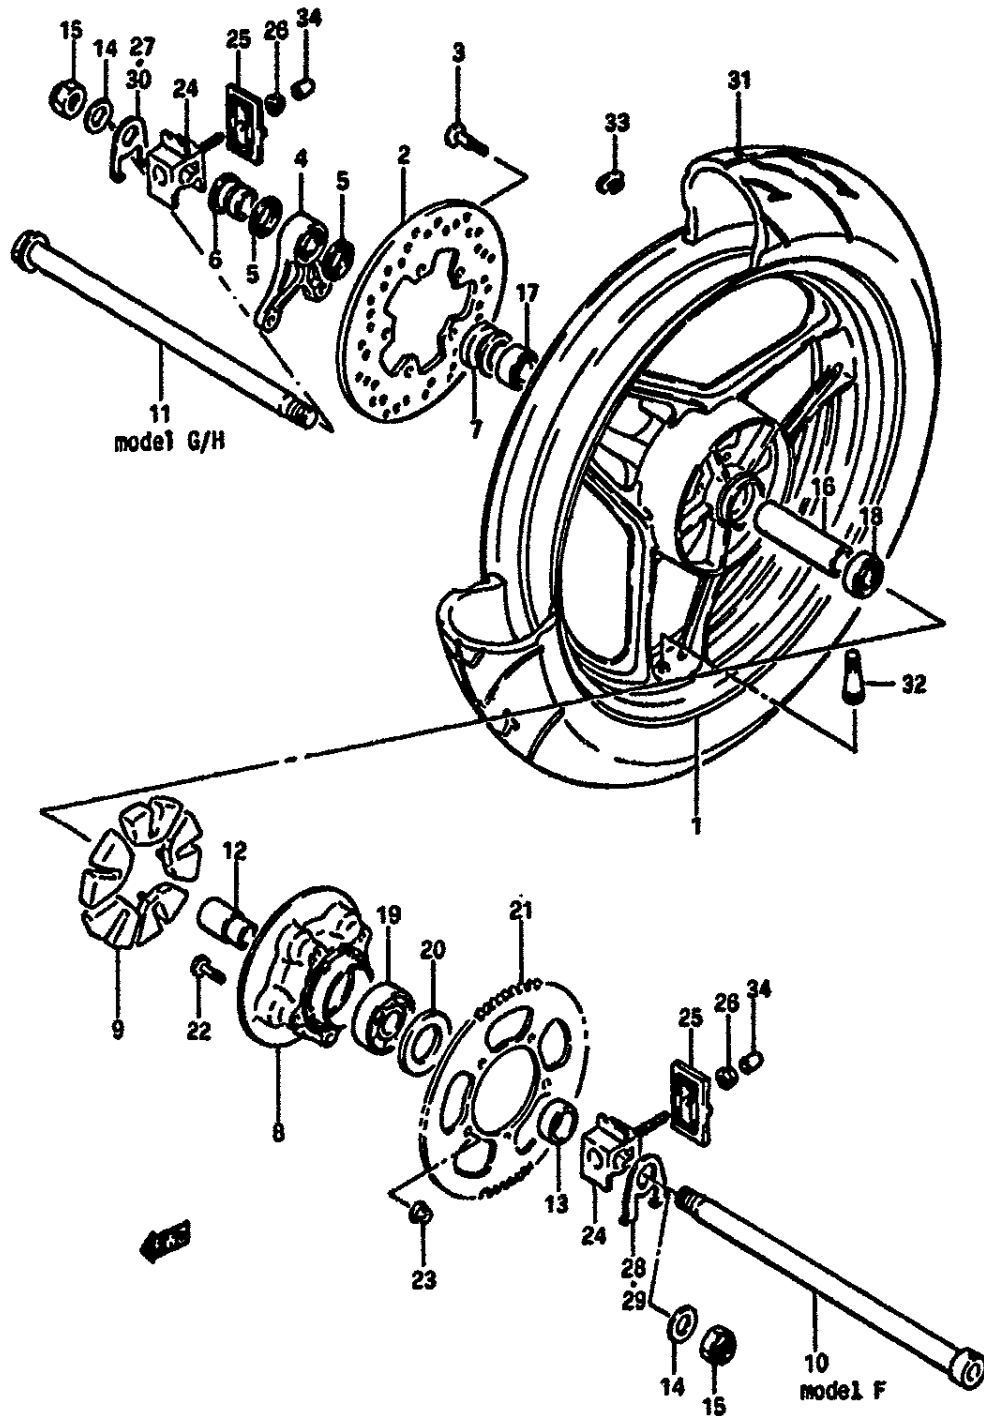


Ref No	Part No	Description
1	64111-27A00-291	Wheel, rear (18xnt3.50) Black
2	69211-27A00	Disc, rear Brake
3	09106-08062	Bolt
4	69720-27A01	Bracket, rear Calipers
5	09285-28002	• Oil Seal
6	69412-27A00	Spacer
7	64740-27A01	Spacer, rh
8	64611-27A01	Drum, sprocket
9	64651-27A01	Shock Absorber, drum
10	64711-27A00	Axle, rear
11	64711-27A01	Axle, rear
12	64733-27A00	Retainer, drum
13	64751-27A00	Spacer, lh
14	08322-11188	Washer
15	09159-18007	Nut
16	64731-27A00	Spacer, bearing
17	08123-60047	Bearing, rh
18	08143-60047	Bearing, lh
19	09262-25073	Bearing
20	09285-35001	Oil Seal
21	64511-27A01	Sprocket, rear (nt:42)
22	09119-10037	Bolt
23	08319-31107	Nut
24	61410-27A10	Adjuster, chain
25	61421-27A10	Plate
26	08319-31087	Nut
27	64712-27A10	Washer (id:18.2)
28	64713-27A10	Washer (id:20.5)
29	64712-27A10	Washer (id:18.2)
30	64713-27A10	Washer (id:20.5)
31	65100-27A40	Tire, t/l Rear (140/70v18) Bs
31	65100-28A00	Tire, t/l Rear (140/70vr18) Bs
32	43130-75150	Valve
33	55411-00A00-291	Balancer (10g) Black
33	55412-00A00-291	Balancer (20g) Black
33	55413-00A00-291	Balancer (30g) Black
33	55411-00A00	Balancer (10g)
33	55412-00A00	Balancer (20g)
33	55413-00A00	Balancer (30g)
34	61442-33300	Cap


Ref No	Part No	Description
--------	---------	-------------

34	69100-27A10	Caliper Assy,rear
34	69100-27A11	Caliper Assy,rear
1	69100-27820	• . Piston Set
2	59107-18410	•• .. Seal
3	59108-16700	•• .. Boot
4	69107-34200	•• .. Seal
5	69130-16740	• . Pad
6	59145-16700	• . Bolt
7	59143-16700	• . Spring
8	69141-45000	• . Pin
9	69142-45000	• . Clip
10	59151-16701	• . Cover
11	59121-18410	• . Bleeder
12	59122-18410	• . Cap
13	62647-04A00	• . Dust Seal
14	59371-33410	• . Shim
15	01517-08305	Bolt

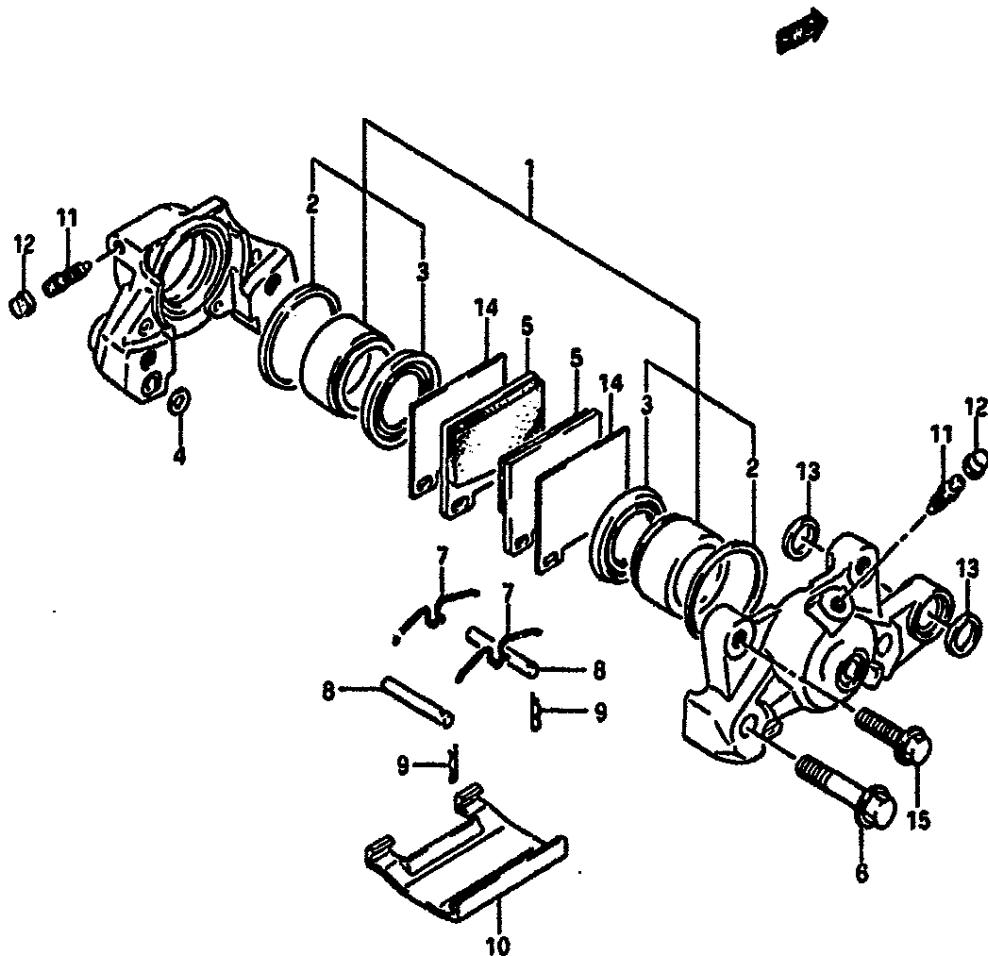


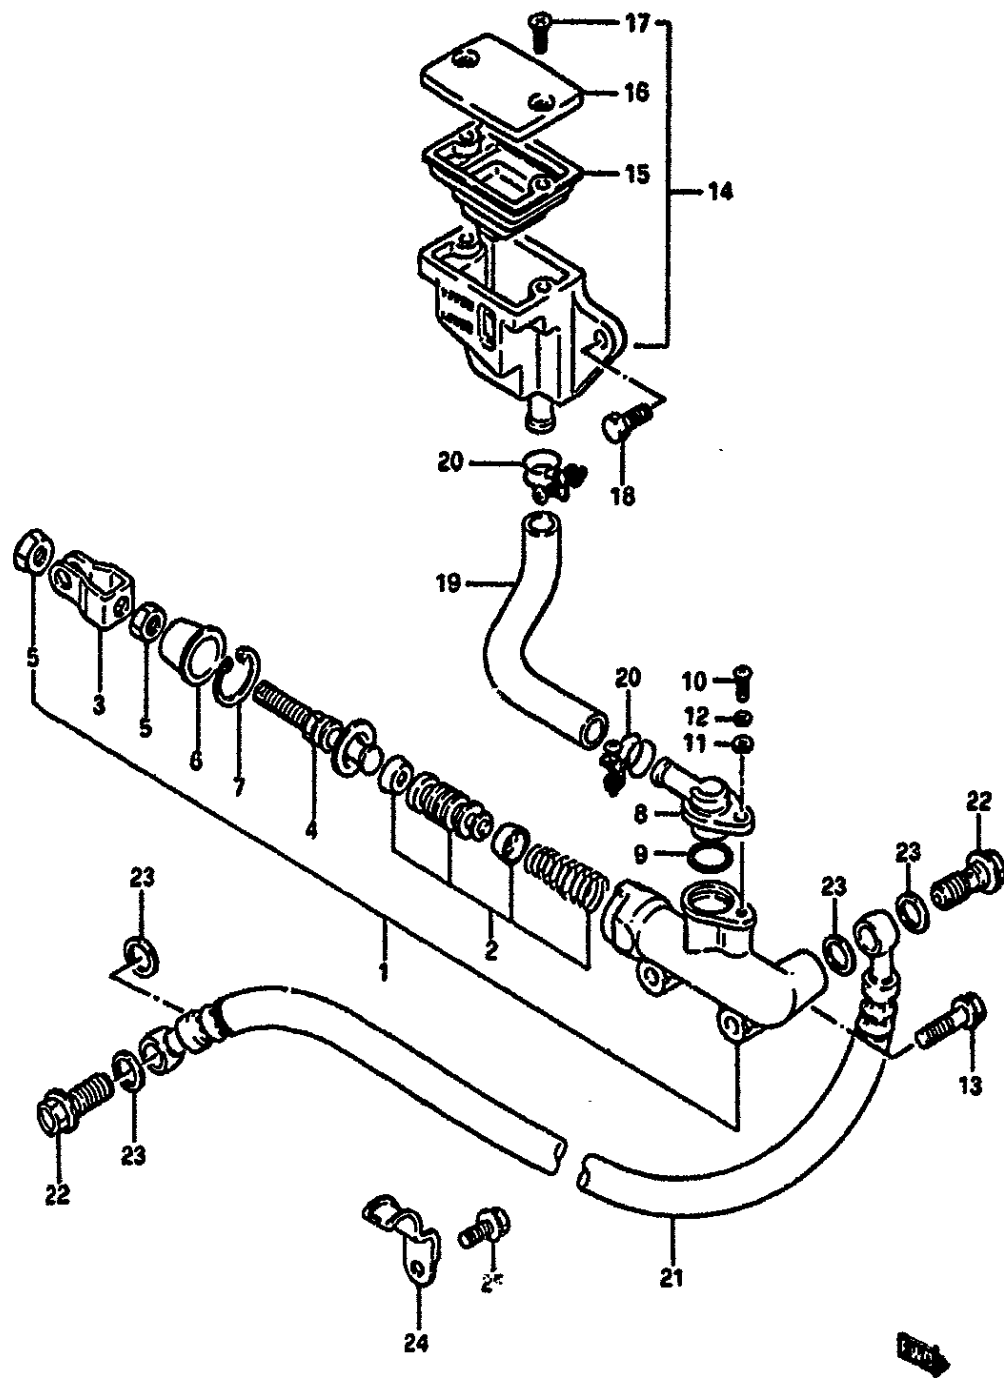


Ref No	Part No	Description
1	69600-27A00	Cylinder Assy,rear Master
2	69600-16820	. Piston/cap Set
3	69692-19A00	. Yoke
4	69670-27A00	. Rod,push
5	69693-05A00	. Nut
6	69691-00A00	. Boot
7	51162-70040	. Circlip
8	69672-05A00	. Connector
9	69686-34200	. O Ring
10	02112-04124	. Screw
11	08322-21045	. Washer
12	08321-21045	. Lock Washer
13	09106-06056	Bolt
14	69740-27A31	Tank Assy,rear Reservoir
15	59667-04700	. Diaphragm
16	59669-04710	. Cap
17	69689-04A00	. Screw
18	01107-06127	Bolt
19	69731-27A00	Hose,reservoir
20	09400-16302	Clamp
21	69480-27A02	Hose,rear Brake (l:585)
21	69480-27A10	Hose,rear Brake (l:617)
22	09360-10017	Bolt
23	09161-10009	Washer (10x15x1.5)
24	61196-04A00	Clamp
24	61196-06B01	Clamp
25	01517-05128	Bolt

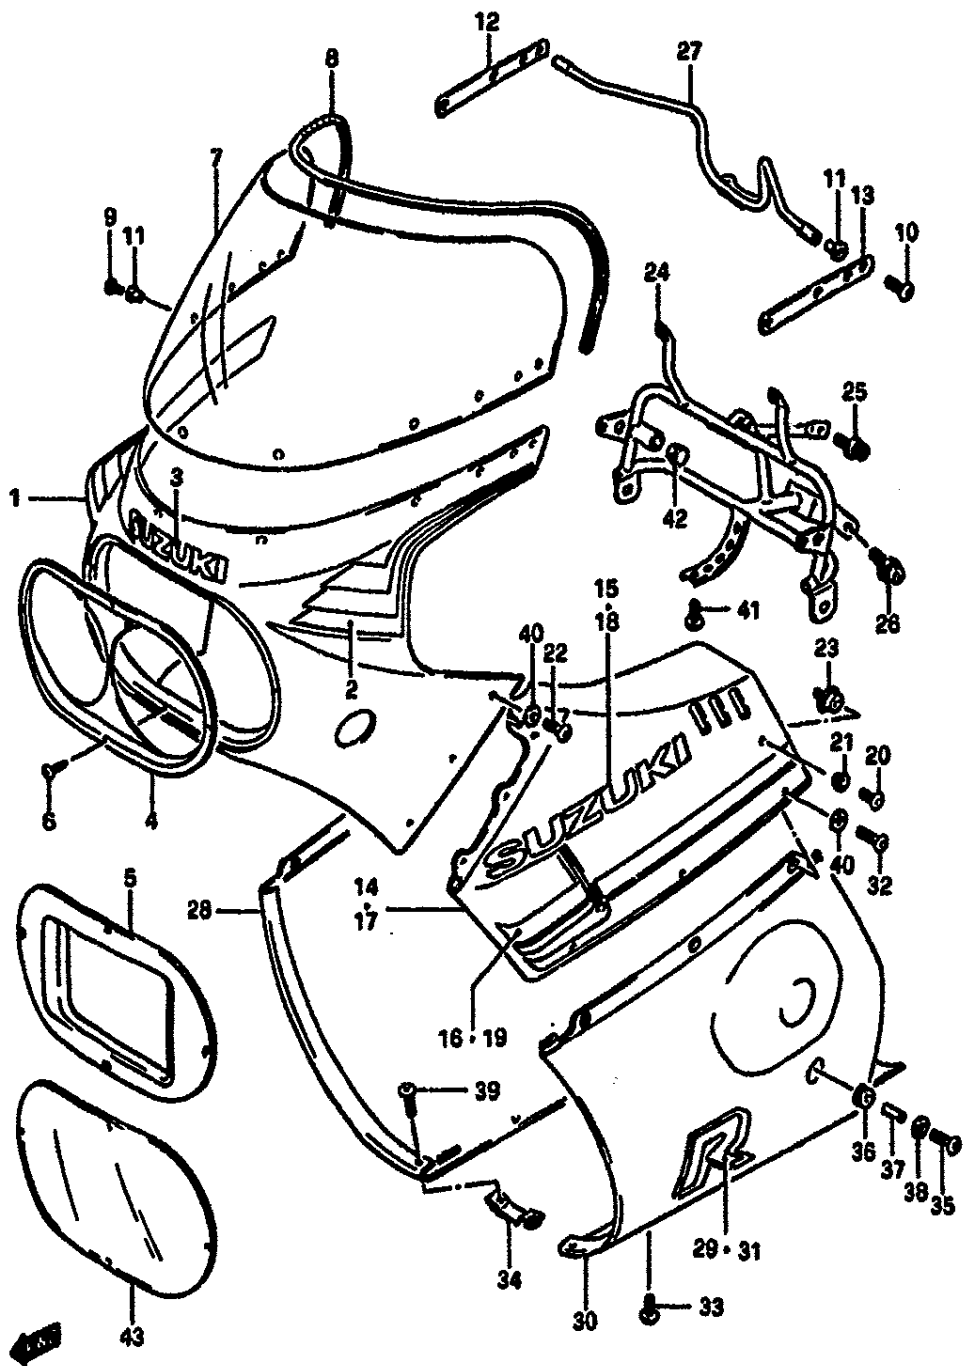


Ref No	Part No	Description
1	94400-27A01-7GF	Body Assy,cowling (white/blue)
1	94400-27A01-7JK	Body Assy,cowling (black/red)
1	94400-27A12-7GF	Body Assy,cowling (white/blue)
1	94400-27A12-7JK	Body Assy,cowling (black/red)
2	68190-27A11-7UC	. . Tape Set
2	68190-27A11-7VE	. . Tape Set
3	68271-04A00-742	. . Emblem
4	94435-27A00-291	. . Cover,front (black)
5	94435-27A20-19F	. . Cover,front (blue)
5	94435-27A20-22P	. . Cover,front (red)
6	03541-04125	. . Screw
7	94611-27A01	Screen,wind
8	94631-27A00	Molding
8	94631-27A10	Molding
9	09139-05025	Screw
10	09139-05032	Screw,rear
11	94619-27A00	Nut
12	94529-27A00	Plate,mirror Rh
13	94539-27A00	Plate,mirror Lh
14	94430-27A00-14L	Cover,side Rh (white)
14	94430-27A00-019	Cover,side Rh (black)
14	94430-27A20-14L	Cover,side Rh (white)
14	94430-27A20-019	Cover,side Rh (black)
15	68111-33200-07G	. . Emblem
15	68111-33200-064	. . Emblem
16	68680-27A10-81F	. . Tape Set,rh
16	68680-27A10-65G	. . Tape Set,rh
17	94440-27A00-14L	Cover,side Lh (white)
17	94440-27A00-019	Cover,side Lh (black)
17	94440-27A20-14L	Cover,side Lh (white)
17	94440-27A20-019	Cover,side Lh (black)
18	68111-33200-07G	. . Emblem
18	68111-33200-064	. . Emblem
19	68690-27A10-81F	. . Tape Set,lh
19	68690-27A10-65G	. . Tape Set,lh
20	09139-06027	Screw,rear
21	09169-06033	Washer
22	09139-06030	Screw
23	94570-04A00	Cushion
24	94510-27A00	Brace,front
24	94510-27A20	Brace,front
25	07120-06165	Bolt
26	07120-08165	Bolt,lower
27	94530-27A01	Brace,rear
28	94470-27A00-7TG	Cover,lower Rh (white/blue)
28	94470-27A00-7JK	Cover,lower Rh (black/red)
29	68261-27A00-73H	. . Emblem
29	68261-27A00-60D	. . Emblem
30	94480-27A00-7TG	Cover,lower Lh (white/blue)
30	94480-27A00-7JK	Cover,lower Lh (black/red)
31	68261-27A00-73H	. . Emblem
31	68261-27A00-60D	. . Emblem
32	09139-06030	Screw,upper
33	09139-06039	Screw,rh & Lh

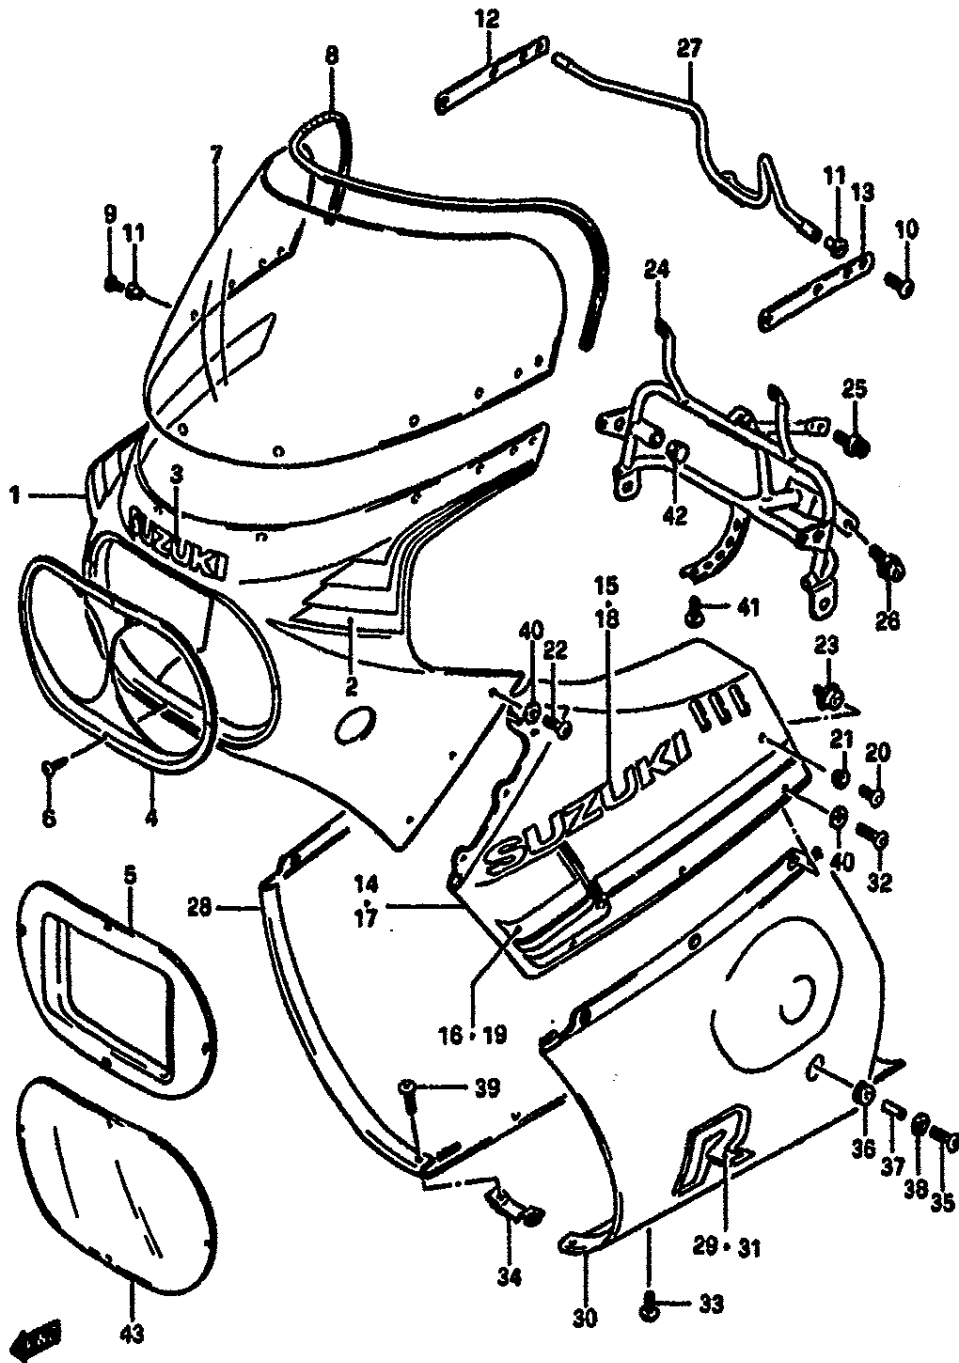


Ref No	Part No	Description
34	94490-27A00	Plate,lower Cover
35	09139-06028	Screw
36	09320-09016	Cushion
37	09180-06152	Spacer
38	09160-06056	Washer (6.5x18x1)
39	09139-06027	Screw
40	09160-06094	Washer
41	09139-06030	Screw
42	09250-18003	Plug
43	94419-27A00	Cover,headlamp

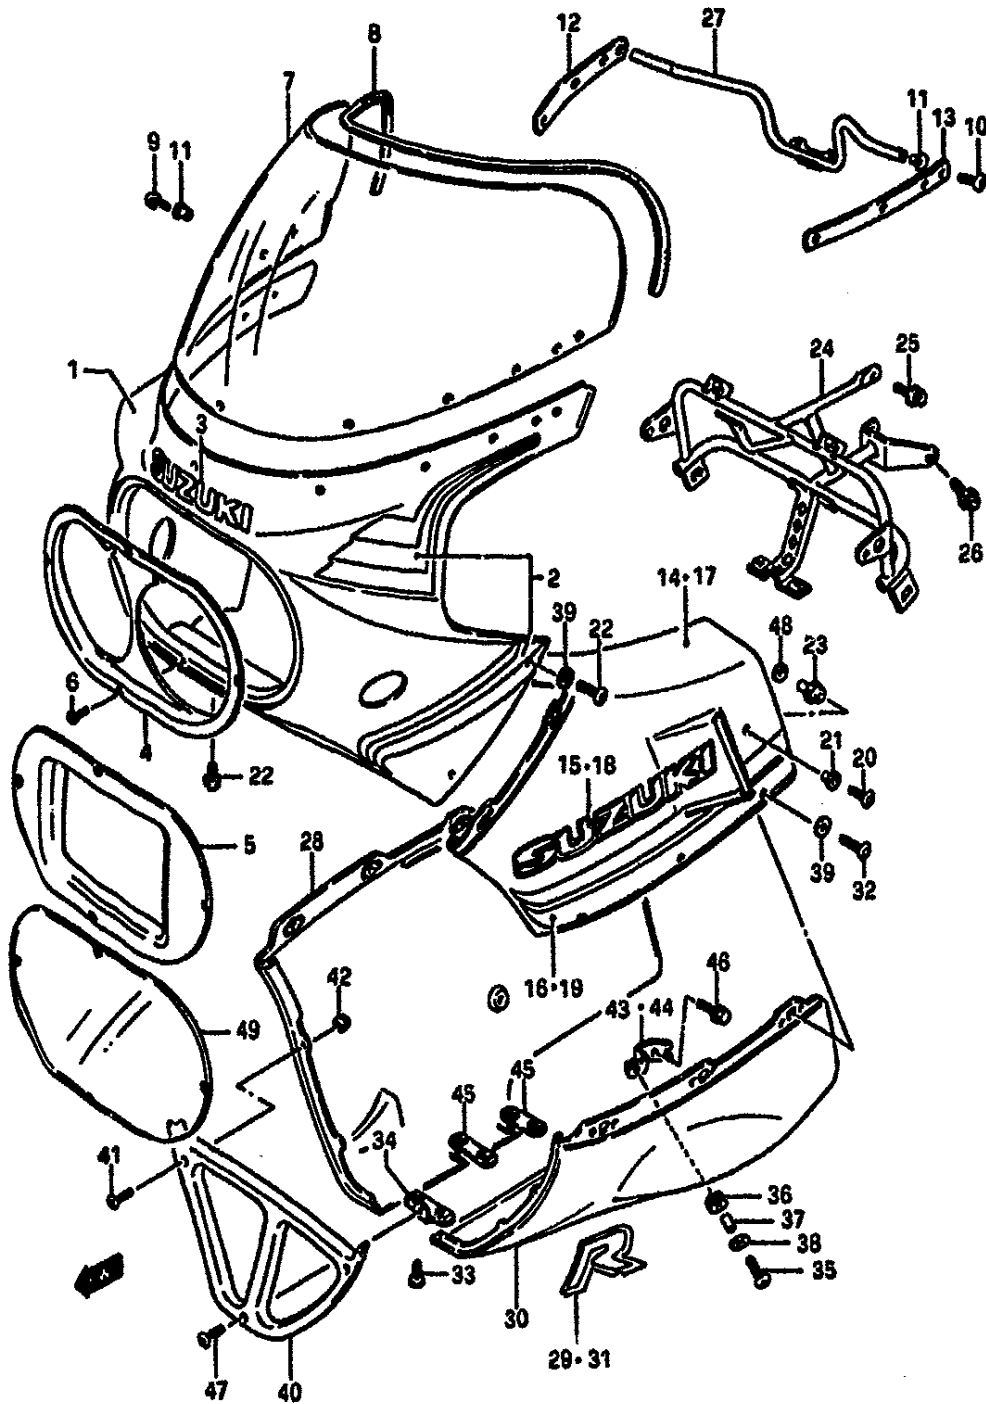


Ref No	Part No	Description
1	94400-27A41-7GF	Body Assy,cowling (white/blue)
1	94400-27A41-7JK	Body Assy,cowling (black/red)
1	94400-27A51-7GF	Body Assy,cowling (white/blue)
1	94400-27A51-7JK	Body Assy,cowling (black/red)
2	68190-27A11-7UC	. . Tape Set
2	68190-27A11-7VE	. . Tape Set
3	68271-04A00-742	. . Emblem
4	94435-27A00-291	. . Cover,front (black)
5	94435-27A20-19F	. . Cover,front (blue)
5	94435-27A20-22P	. . Cover,front (red)
6	03541-04125	. . Screw
7	94611-06B01	Screen,wind
8	94631-27A00	Molding
8	94631-27A10	Molding
9	09139-05025	Screw
10	09139-05032	Screw,rear
11	94619-27A00	Nut
12	94529-27A00	Plate,mirror Rh
13	94539-27A00	Plate,mirror Lh
14	94430-27A40-14L	Cover,side Rh (white)
14	94430-27A40-019	Cover,side Rh (black)
14	94430-27A50-14L	Cover,side Rh (white)
14	94430-27A50-019	Cover,side Rh (black)
15	68111-31300-66P	. . Emblem
16	68680-27A21-81F	. . Tape Set,rh
16	68680-27A21-65G	. . Tape Set
17	94440-27A40-14L	Cover,side Lh (white)
17	94440-27A40-019	Cover,side Lh (black)
17	94440-27A50-14L	Cover,side Lh (white)
17	94440-27A50-019	Cover,side Lh (black)
18	68111-31300-66P	. . Emblem
19	68690-27A21-81F	. . Tape Set,lh
19	68690-27A21-65G	. . Tape Set,lh
20	09139-06027	Screw,rear
21	09169-06033	Washer
22	09139-06030	Screw
23	94570-04A00	Cushion
24	94510-27A40	Brace,front
25	07120-06165	Bolt
26	07120-08165	Bolt,lower
27	94530-27A10	Brace,rear
28	94470-27A41-7TG	Cover,lower Rh (white/blue)
28	94470-27A41-7JK	Cover,lower Rh (black/red)
29	68261-27A00-73H	. . Emblem
29	68261-27A00-60D	. . Emblem
30	94480-27A40-7TG	Cover,lower Lh (white/blue)
30	94480-27A40-7JK	Cover,lower Lh (black/red)
31	68261-27A10-73H	. . Emblem
31	68261-27A10-60D	. . Emblem
32	09139-06030	Screw,upper
33	09139-06039	Screw,rh & Lh
34	94490-06B00	Brace,lower
35	09139-06028	Screw

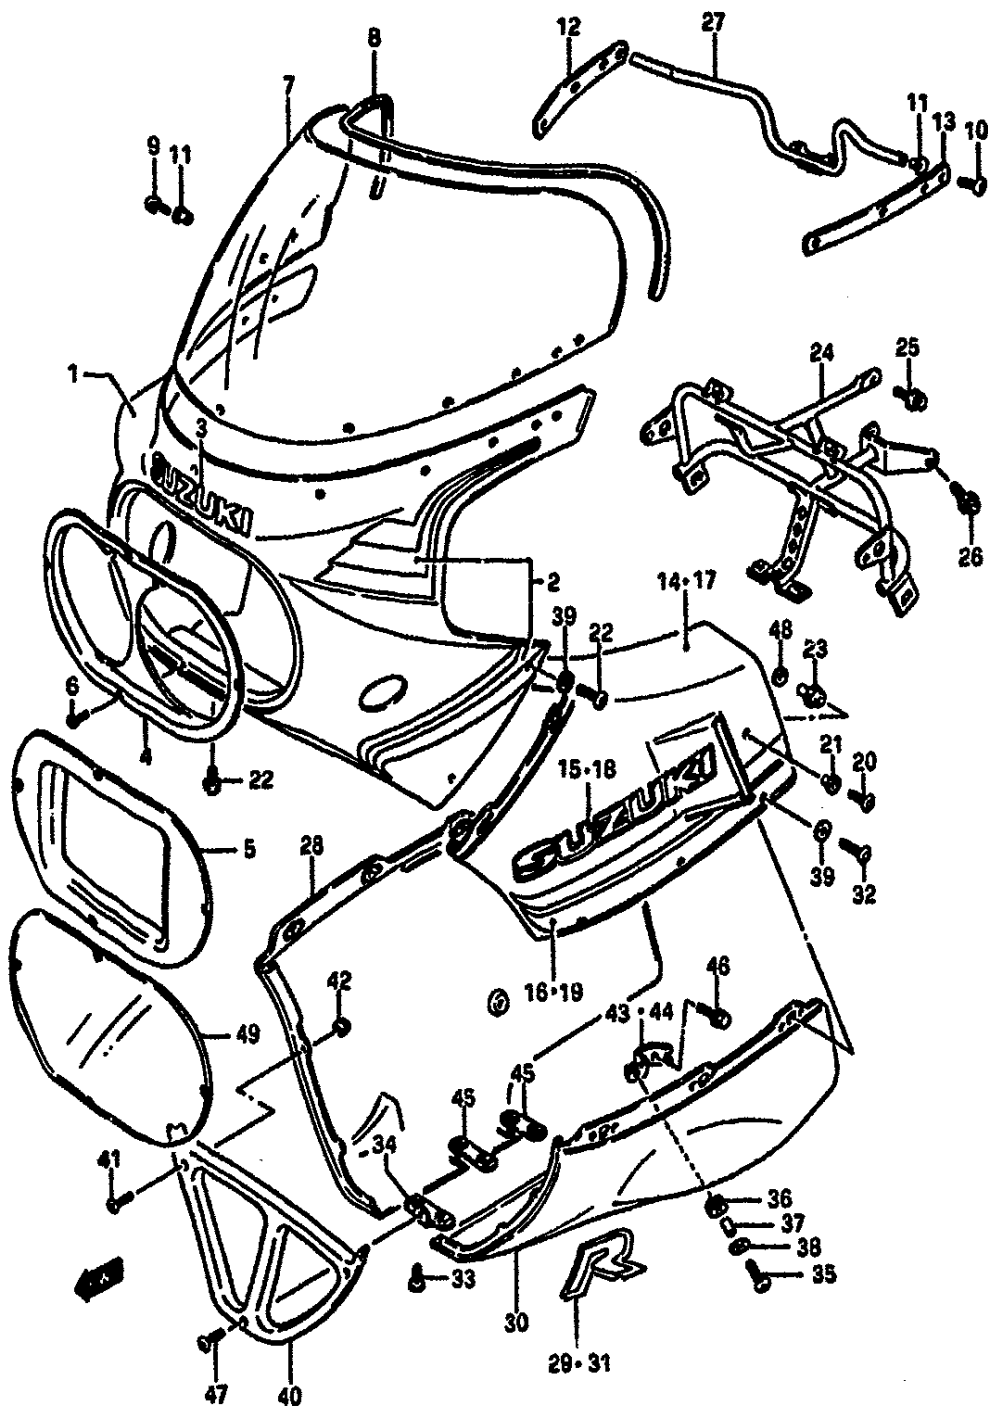


Ref No	Part No	Description
36	09320-09016	Cushion
37	09180-06152	Spacer
38	09160-06056	Washer (6.5x18x1)
39	09161-07005	Washer
40	94475-06B01-14L	Cover,lower Front (white)
40	94475-06B01-019	Cover,lower Front (black)
41	09139-05025	Screw (5x14)
42	08316-26055	Nut
43	94580-27A00	Brace,lower,rh
44	94590-27A00	Brace,lower,lh
45	94493-06B00	Brace,lower,rear
46	01517-06128	Bolt
47	09139-06030	Screw (6x16)
48	08321-31064	Lock Washer
49	94419-27A00	Cover,headlamp

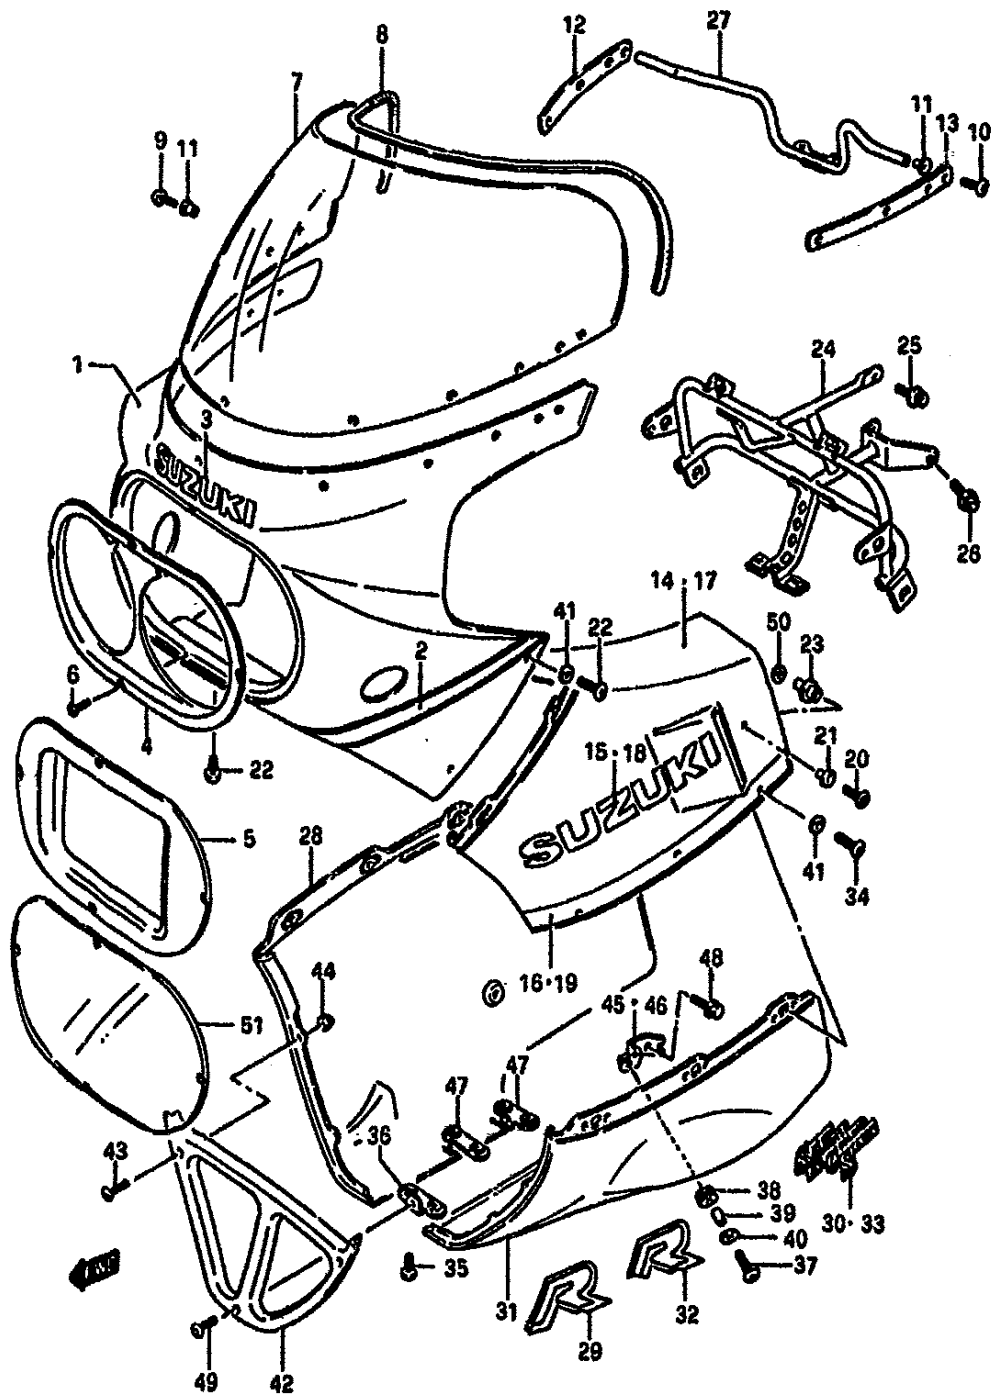

Ref No	Part No	Description
1	94400-27A90-9HE	Body Assy,cowling (white/blue)
1	94400-27A90-7JK	Body Assy,cowling (black/red)
1	94400-28A80-9HE	Body Assy,cowling (white/blue)
1	94400-28A80-7JK	Body Assy,cowling (black/red)
2	68190-27A30-9JJ	. . Tape Set
2	68190-27A30-9JH	. . Tape Set
3	68271-04A00-064	. . Emblem
4	94435-27A00-19F	. . Cover,front (blue)
4	94435-27A00-22P	. . Cover,front (red)
5	94435-27A20-19F	. . Cover,front (blue)
5	94435-27A20-22P	. . Cover,front (red)
6	03541-04125	. . Screw
7	94611-06B01	Screen,wind (clear)
7	94611-28A00	Screen,wind (smoke)
8	94631-27A00	Molding
8	94631-27A10	Molding
9	09139-05025	Screw
10	09139-05032	Screw,rear
11	94619-27A00	Nut
12	94529-27A00	Plate,mirror Rh
13	94539-27A00	Plate,mirror Lh
14	94430-27A90-30H	Cover,side Rh (white)
14	94430-27A90-019	Cover,side Rh (black)
14	94430-28A90-30H	Cover,side Rh (white)
14	94430-28A90-019	Cover,side Rh (black)
15	68111-00A50-07G	. . Emblem
15	68111-00A50-064	. . Emblem
16	68680-27A40-08L	. . Tape Set,rh
16	68680-27A40-742	. . Tape Set,rh
17	94440-27A90-30H	Cover,side Lh (white)
17	94440-27A90-019	Cover,side Lh (black)
17	94440-28A90-30H	Cover,side Lh (white)
17	94440-28A90-019	Cover,side Lh (black)
18	68111-00A50-07G	. . Emblem
18	68111-00A50-064	. . Emblem
19	68690-27A40-08L	. . Tape Set,lh
19	68690-27A40-742	. . Tape Set,lh
20	09139-06027	Screw,rear
21	09169-06033	Washer
22	09139-06030	Screw
23	94570-04A00	Cushion
24	94510-27A40	Brace,front
25	07120-06165	Bolt
26	07120-08165	Bolt,lower
27	94530-27A10	Brace,lower
28	94470-27A90-9HH	Cover,lower Rh (blue/blue)
28	94470-27A90-9HG	Cover,lower Rh (white/red)
29	68261-27A00-8KC	. . Emblem
29	68261-27A00-7JS	. . Emblem
30	68131-27A00-7VR	. . Emblem
30	68131-27A00-7JL	. . Emblem
31	94480-27A90-9HH	Cover,lower Lh (blue/blue)
31	94480-27A90-9HG	Cover,lower Lh (white/red)

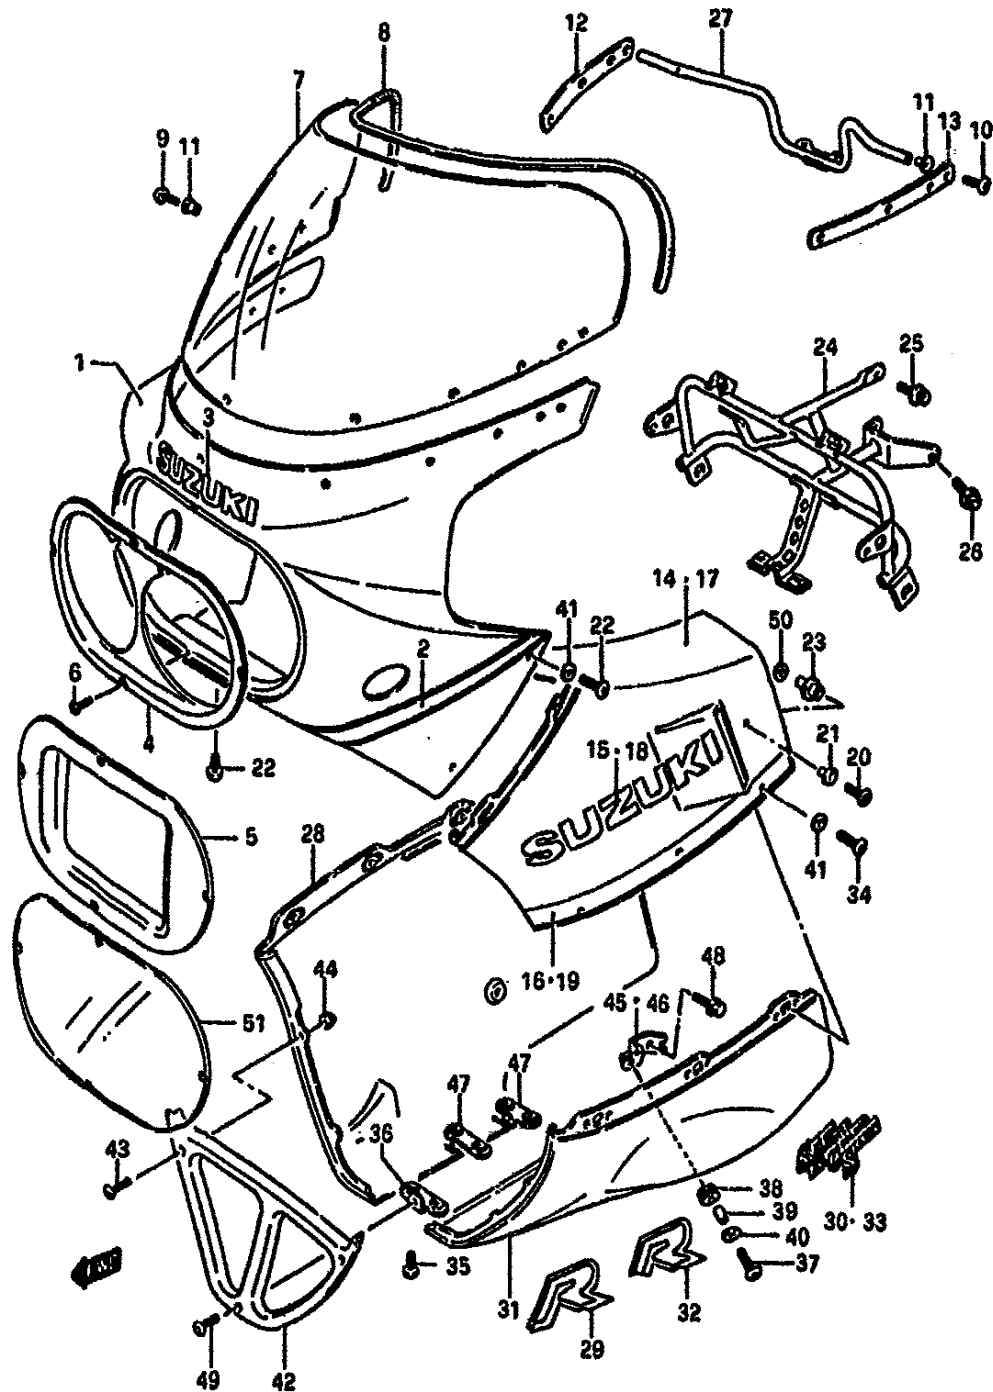

Ref No	Part No	Description
31	94480-27A70-9HH	Cover,lower Lh (blue/blue)
31	94480-27A70-9HG	Cover,lower Lh (white/red)
32	68261-27A10-8KC	• Emblem
32	68261-27A10-7JS	• Emblem
33	68131-27A00-7VR	• Emblem
33	68131-27A00-7JL	• Emblem
34	09139-06030	Screw,upper
35	09139-06039	Screw,rh & Lh
36	94490-06B00	Brace,lower
37	09139-06028	Screw
38	09320-09016	Cushion
39	09180-06152	Spacer
40	09160-06056	Washer (6.5x18x1)
41	09161-07005	Washer
42	94475-06B01-23Z	Cover,lower Front (blue)
42	94475-06B01-22P	Cover,lower Front (red)
43	09139-05025	Screw (5x14)
44	08316-26055	Nut
45	94580-27A00	Brace,lower,rh
46	94590-27A00	Brace,lower,lh
47	94493-06B00	Brace,lower,rear
48	01517-06128	Bolt
49	09139-06030	Screw (6x16)
50	08321-31064	Lock Washer
51	94419-27A00	Cover,headlamp

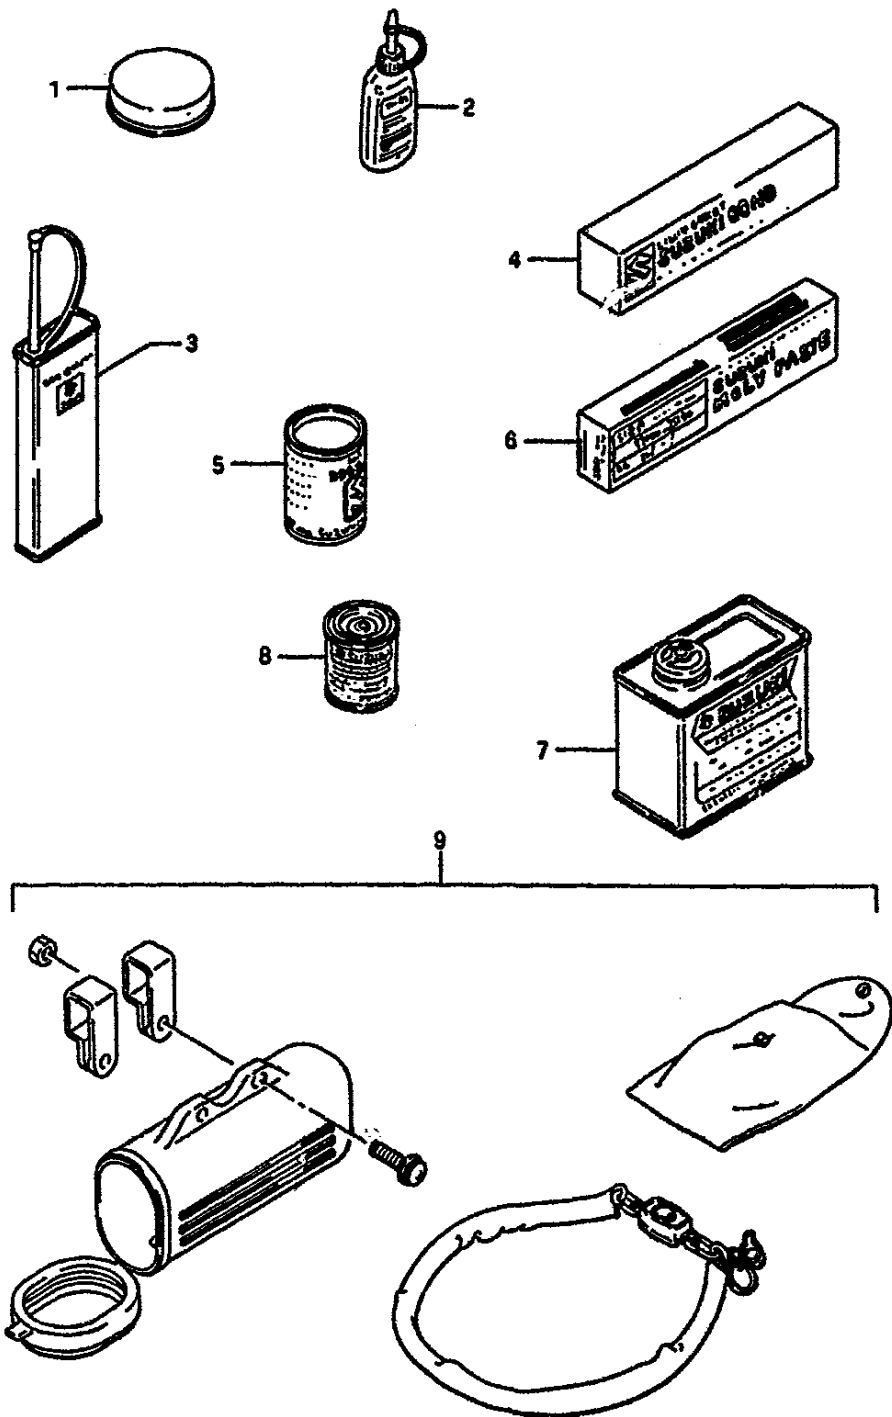

Ref No	Part No	Description
1	99000-25110	Suzuki Pbc Grease
2	99000-32020	Thread Lock Super (1333)
2	99000-32030	Thread Lock Super (13038)
2	99000-32050	Thread Lock Super (1342)
2	99000-32100	Thread Lock Super (1305)
2	99000-32130	Thread Lock Super (1360)
3	99000-32040	Thread Lock Cement
4	99000-31140	Suzuki Bond (12078)
5	99000-25030	Suzuki Super Grease
6	99000-25140	Suzuki Moly Paste
7	99000-10105-291	Paint (black Semi-gloss)
7	99000-10105-019	Paint (black)
7	99000-10105-14L	Paint (super White)
7	99000-10205-13L	Paint (bright Silver Metallic)
7	99000-10205-22P	Paint (pearl Twinkle Red)
7	99000-10105-19F	Paint (champion Blue)
7	99000-10105-23Z	Paint (powerful Blue)
7	99000-10105-23C	Paint (guncoating Gray)
7	99000-10105-30H	Paint (special White)
8	99000-10109-291	Paint (black Semi-gloss)
8	99000-10109-019	Paint (black)
8	99000-10109-14L	Paint (super White)
8	99000-10209-13L	Paint (bright Silver Metallic)
8	99000-10209-22P	Paint (pearl Twinkle Red)
8	99000-10109-19F	Paint (champion Blue)
8	99000-10109-23Z	Paint (powerful Blue)
8	99000-10109-23C	Paint (guncoating Gray)
8	99000-10109-30H	Paint (special White)
9	94100-27820	Chain Lock Set